Alnico 7 Series RAID Subsystem Software Operation Manual Ver. 1.3

12/07/2009

Copyright ©2006

This guide and any accompanying software and firmware are copyrighted. No parts of this publication may be reproduced, stored on a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopy, recording, or otherwise, without prior written consent except for copies retained by the purchaser for backup purposes.

All rights Reserved- Printed in Taiwan.

Notice

We make no warranties with respect to this documentation either express or implied and provide it "as it". This includes but is not limited to any implied warranties of merchantability and fitness for a particular purpose. The information in this document is subject to change without notice. We assume no responsibility for any errors that may appear in this document.

The manufacturer shall not be liable for any damage, or for the loss of information resulting from the performance or use of the information contained herein

Trademarks

Product names used herein are for identification purposes only and may be the trademarks of their respective companies. All trademarks or registered trademarks are properties of their respective owners.

About This Software Operation Manual

This manual contains all the information you need to initially configuring and monitoring the Alnico RAID.

Task Map

1. Prepare

Refer to Software Operation Manual and Hardware Installation Guide, let yourself with the features, capabilities of Alnico RAID and make sure you have everything on hand.

2. Install Hardware

Install the Alnico RAID subsystem. Refer to :

Hardware Installation Guide

3. Configuration

To create a RAID set and define a volume set via LCD display front panel, remote utility or 10/100 base-T Ethernet.

4. Make a Record

Be sure to clear wrote down every items of the configuration, it will help you to rescue the data back in the case of RAID fail up.

Symbols in Text

These symbols may be found in the text of this guide. They have the following meanings.

Caution

This icons indicates that failure to follow directions could result in personal injury, damage to your equipment or loss of information.

Note

This icon presents commentary, sidelights, or interesting points of information. .

Important terms, commands and programs are put in **Boldface** font.

Screen text is given in **screen** font.

Contents

ABOUT THIS SOFTWARE OPERATION MANUAL	III
TASK MAP	III
1. Prepare	III
2. INSTALL HARDWARE	III
3. CONFIGURATION	III
4. Make a Record	III
Symbols in Text	III
CONTENTS	IV
CHAPTER 1. INTRODUCTION	1
1.1Array Definition	1
1.1.1 Raid Set	1
1.1.2 Volume Set	1
1.1.3 Instant Availability/Background Initialization	2
1.1.4 Array Roaming	2
1.1.5 Online Capacity Expansion	2
1.1.6 Online RAID Level and Stripe Size Migration	3
1.1.7 Hot Spares	3
1.1.8 Hot-Swap Disk Drive Support	4
1.1.9 Hot-Swap Disk Rebuild	4
1.2 RAID CONCEPT	5
1.2.1 RAID 0	5
1.2.2 RAID 1	5
1.2.3 RAID 0+1	6
1.2.4 RAID 3	7
1.2.5 RAID 5	7
1.2.6 RAID 6	8
1.2.7 Summary of RAID Levels	9
CHAPTER 2	10
CONFIGURATION METHODS	10
2.1 Overview	
2.2 USING LOCAL FRONT PANEL TOUCH-CONTROL KEPAD	
2.3 USING THE CONTROLLER'S SERIAL PORT	12
2.3.1 Keyboard Navigation	13

2.3.2 Start-up VT100 Screen13
2.4 Firmware-embedded TCP/IP & web browser-based RAID
MANAGER (USING THE CONTROLLER'S $10/100$ Ethernet LAN port). 18
2.5 Configuration Menu Tree
CHAPTER 3
LCD PANEL CONFIGURATION
3.1 STARTING LCD CONFIGURATION UTILITY
3.2 LCD CONFIGURATION UTILITY MAIN MENU OPTIONS
3.3 CONFIGURING RAID SETS AND VOLUME SETS
3.4 DESIGNATING DRIVES AS HOT SPARES
3.5 USING QUICK VOLUME AND RAID SET SETUP
3.6 USING RAID SET AND VOLUME SET FUNCTIONS
3.7 NAVIGATION MAP OF THE CONFIGURATION
3.7.1 Quick Volume/Raid Setup27
3.7.2 Raid Set Function
3.7.3 Volume Set Function
3.7.4 Physical Drive
3.7.5 RAID System Function
3.7.6 Fibre Channel Configuration
3.7.7 Ethernet Configuration
3.7.8 Show System Events 46
3.7.9 Clear all Event Buffers
3.7.10 Hardware Monitoring Information
3.7.11 Show System Information
CHAPTER 4. WEB BROWSER- BASED CONFIGURATION 49
4.1 Firmware-embedded TCP/IP & web browser-based RAID
MANAGER (USING THE CONTROLLER'S $10/100$ Ethernet LAN port). 49
4.2 Configuring Raid Sets and Volume Sets
4.3 DESIGNATING DRIVES AS HOT SPARES
$4.4 \ Using \ Quick \ Volume \ / Raid \ Setup \ Configuration \ \dots \ 51$
4.5 USING RAID SET/VOLUME SET FUNCTION METHOD
4.6 Configuring Raid Sets and Volume Sets
4.6.1 Main Menu 56
4.7 QUICK CREATE
4.8 Raid Set Functions
4.8.1 Create Raid Set
4.8.2 Delete Raid Set

4.8.3 Expand Raid Set	59
4.8.4 Activate Incomplete Raid Set	60
4.8.5 Create Hot Spare	61
4.8.6 Delete Hot Spare	61
4.9 VOLUME SET FUNCTION	62
4.9.1 Create Volume Set	63
4.9.2 Delete Volume Set	68
4.9.3 Modify Volume Set	68
4.9.4 Check Volume Set	70
4.9.5 Scheduled Volume Checking (Enhanced Check Volume Set)	71
4.9.6 Stop VolumeSet Check	72
4.10 Physical Drive	73
4.10.1 Create Pass-Through Disk	73
4.10.2 Modify Pass-Through Disk	73
4.10.3 Delete Pass-Through Disk	73
4.10.4 Identify Selected Drive	73
4.11 System Controls	74
4.11.1 System Configuration	75
4.11.2 Fibre Channel Config	77
4.11.3 EtherNet Config	78
4.11.4 Alert By Mail Config	79
4.11.5 SNMP Configuration	80
4.11.6 NTP Configuration	80
4.11.7 View Events/ Mute Beeper	81
4.11.8 Generate Test Event	81
4.11.9 Clear Events Buffer	81
4.11.10 Modify Password	81
4.11.11 Update Firmware:	83
4.11.12 Restart Controller	83
4.12 INFORMATION MENU	83
4.12.1 RaidSet Hierarchy	83
4.12.2 System Information	84
4.12.3 Hardware Monitor	85
CHAPTER 5	87
SERIAL PORT CONFIGURATION	87
5.1 Configuring Raid Sets and Volume Sets	
5.2 DESIGNATING DRIVES AS HOT SPARES	

5.3 USING QUICK VOLUME /RAID SETUP CONFIGURATION	
5.4 USING RAID SET/VOLUME SET FUNCTION METHOD	
5.5 MAIN MENU	
5.5.1 Quick Volume/Raid Setup	
5.5.2 Raid Set Function	
5.5.3 Volume Set Function	
5.5.4 Physical Drive	116
5.5.5 Raid System Function	118
5.5.6 Fibre Channel Configuration	129
5.5.7 Ethernet Configuration	131
5.5.8 View System Events	136
5.5.9 Clear Events Buffer	137
5.5.10 Hardware Monitor	138
5.5.11 System Information	139
APPENDIX A	
UPGRADING FIRMWARE	
APPENDIX B	146
FIBRE OPERATION	146
OVERVIEW	146
THREE WAYS TO CONNECT (FC TOPOLOGIES)	146
Point-to-point	147
<i>1 0m</i> - <i>i0</i> - <i>p0mi</i>	
Arbitrated Loop	147
•	
Arbitrated Loop	147
Arbitrated Loop Switched Fabric	<i>147</i> 148
Arbitrated Loop Switched Fabric BASIC ELEMENTS	147 148 148
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter Hubs	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter Hubs Switched Fabric APPENDIX C SNMP OPERATION & DEFINITION	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter Hubs Switched Fabric Switched Fabric SNMP OPERATION & DEFINITION OVERVIEW	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter Hubs Switched Fabric APPENDIX C SNMP OPERATION & DEFINITION OVERVIEW SNMP DEFINITION	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter Hubs Switched Fabric Switched Fabric APPENDIX C. SNMP OPERATION & DEFINITION OVERVIEW SNMP DEFINITION SNMP INSTALLATION	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter Hubs Switched Fabric APPENDIX C SNMP OPERATION & DEFINITION OVERVIEW SNMP DEFINITION SNMP INSTALLATION AND DEFINITION FILE CREATION	
Arbitrated Loop Switched Fabric BASIC ELEMENTS Cables and connectors Fibre Channel Adapter Hubs Switched Fabric Switched Fabric APPENDIX C. SNMP OPERATION & DEFINITION OVERVIEW SNMP DEFINITION SNMP INSTALLATION	

APPENDIX D.	
EVENT MESSAGES	

Chapter 1. INTRODUCTION

This chapter provides a brief introduction of Array Definition and RAID concept.

1.1Array Definition

1.1.1 Raid Set

A Raid Set is a group of disks containing one or more volume sets. It has the following features in the RAID subsystem :

1. Up to Five Raid Sets are supported per RAID subsystem controller.

2. From one to twelve/sixteen (depend on Model) drives can be included in an individual Raid Set.

3. It is impossible to have multiple Raid Sets on the same disks.

A Volume Set must be created either on an existing raid set or on a group of available individual disks (disks that are not yet a part of an raid set). If there are pre-existing raid sets with available capacity and enough disks for specified RAID level desired, then the volume set will be created in the existing raid set of the user's choice. If physical disks of different capacity are grouped together in a raid set, then the capacity of the smallest disk will become the effective capacity of all the disks in the raid set.

1.1.2 Volume Set


A Volume Set is seen by the host system as a single logical device. It is organized in a RAID level with one or more physical disks. RAID level refers to the level of data performance and protection of a Volume Set. A Volume Set capacity can consume all or a portion of the disk capacity available in a Raid Set. Multiple Volume Sets can exist on a group of disks in a Raid Set. Additional Volume Sets created in a specified Raid Set will reside on all the physical disks in the Raid Set. Thus each Volume Set on the Raid Set will have its data spread evenly across all the disks in the Raid Set.

- 1. Volume Sets of different RAID levels may coexist on the same Raid Set.
- 2. The maximum addressable size of a single volume set can be exceeded than 2 TB.

3. Up to twelve/sixteen volume sets can be created in a raid set.

In the illustration below, Volume 1 can be assigned a RAID 5 level of operation while Volume 0 might be assigned a RAID 0+1 level of operation.

 Raid Set 1 (3 Individual Disks)



1.1.3 Instant Availability/Background Initialization


RAID 0 and RAID 1 volume set can be used immediately after the creation. But the RAID 3, 5 and 6 volume sets must be initialized to generate the parity. In the Normal Initialization, the initialization proceeds as a background task, the volume set is fully accessible for system reads and writes. The operating system can instantly access to the newly created arrays without requiring a reboot and waiting the initialization complete. Furthermore, the RAID volume set is also protected against a single disk failure while initialing. In Fast Initialization, the initialization proceeds must be completed before the volume set ready for system accesses.

1.1.4 Array Roaming


The RAID subsystem stores configuration information both in NVRAM and on the disk drives It can protect the configuration settings in the case of a disk drive or controller failure. Array roaming allows the administrators the ability to move a completely raid set to another system without losing RAID configuration and data on that raid set. If a server fails to work, the raid set disk drives can be moved to another server and inserted in any order.

1.1.5 Online Capacity Expansion

Online Capacity Expansion makes it possible to add one or more physical drive to a volume set, while the server is in operation, eliminating the need to store and restore after reconfiguring the raid set. When disks are added to a raid set, unused capacity is added to the end of the raid set. Data on the existing volume sets residing on that raid set is redistributed evenly across all the disks. A contiguous block of unused capacity is made available on the raid set. The unused capacity can create additional volume set. The expansion process is illustrated as following figure.

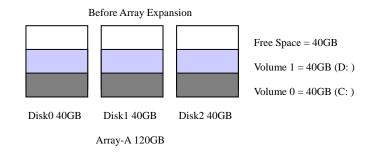

The RAID subsystem controller redistributes the original volume set over the original and newly added disks, using the same fault-tolerance configuration. The unused capacity on the expand raid set can then be used to create an additional volume sets, with a different fault tolerance setting if user need to change.

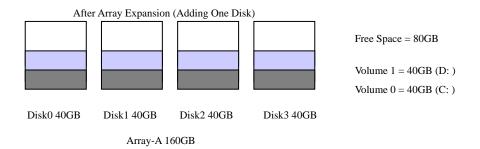

1.1.6 Online RAID Level and Stripe Size Migration

User can migrate both the RAID level and stripe size of an existing volume set, while the server is online and the volume set is in use. Online RAID level/stripe size migration can prove helpful during performance tuning activities as well as in the event that additional physical disks are added to the RAID subsystem. Before the invention of RAID level and stripe size migration, changing the RAID level and stripe size of a RAID system meant backing up all data in the disk array, re-creating disk array configuration with new RAID level and stripe size, and then restoring data back into RAID system. For example, in a system using two drives in RAID level 1, you could add capacity and retain fault tolerance by adding one drive. With the addition of third disk, you have the option of adding this disk to your existing RAID logical drive and migrating from RAID level 1 to 5. The result would be parity fault tolerance and double the available capacity without taking the system off.

1.1.7 Hot Spares

A hot spare drive is an unused online available drive, which is prepare for replacing the failure disk drive. In a RAID level 1, 0+1, 3, 5, or 6 RAID set, any unused online available drive installed but not belonging to a RAID set can

define as a hot spare drive. Hot spares permit you to replace failed drives without powering down the system. When RAID subsystem detects a SATA drive failure, the system will automatic and transparent rebuilds using hot spare drives. The raid set will be reconfigured and rebuilt in the background, while the RAID subsystem continues to handle system request. During the automatic rebuild process, system activity will continue as normal, however, the system performance and fault tolerance will be affected.

Note

The hot spare must have at least the same capacity as the drive it replaces.

1.1.8 Hot-Swap Disk Drive Support

The RAID subsystem has built the protection circuit to support the replacement of SATA hard disk drives without having to shut down or reboot the system. The removable hard drive tray can deliver "hot swappable," fault-tolerant RAID solutions at prices much less than the cost of conventional SCSI hard disk RAID subsystems. We provide this feature for subsystems to provide the advanced fault tolerant RAID protection and "online" drive replacement.

1.1.9 Hot-Swap Disk Rebuild

A Hot-Swap function can be used to rebuild disk drives in arrays with data redundancy such as RAID level 1(0+1), 3, 5, and 6. If a hot spare is not available, the failed disk drive must be replaced with a new disk drive so that the data on the failed drive can be rebuilt. If a hot spare is available, the rebuild starts automatically when a drive fails. The RAID subsystem automatically and transparently rebuilds failed drives in the background with user-definable rebuild rates. The RAID subsystem will automatically restart the system and the rebuild if the system is shut down or powered off abnormally during a reconstruction procedure condition. When a disk is Hot Swap, although the system is functionally operational, the system may no longer be fault tolerant. Fault tolerance will be lost until the removed drive is replaced and the rebuild operation is completed.


1.2 RAID Concept

RAID is an acronym for Redundant Array of Independent Disks. It is an array of multiple independent hard disk drives that provide high performance and fault tolerance. The RAID subsystem controller implements several levels of the Berkeley RAID technology. An appropriate RAID level is selected when the volume sets are defined or created. This decision is based on disk capacity, data availability (fault tolerance or redundancy), and disk performance. The following is the RAID level, which support in the RAID subsystem.

The RAID subsystem controller makes the RAID implementation and the disks' physical configuration transparent to the host operating system. This means that the host operating system drivers and software utilities are not affected, regardless of the RAID level selected. Correct installation of the disk array and the controller requires a proper understanding of RAID technology and the concepts.

1.2.1 RAID 0


RAID 0, also referred to as striping, writes stripping of data across multiple disk drives instead of just one disk drive. RAID 0 does not provide any data redundancy, but does offer the best high-speed data throughput. RAID 0 breaks up data into smaller blocks and then writes a block to each drive in the array. Disk striping enhances performance because multiple drives are accessed simultaneously; but the reliability of RAID Level 0 is less than any of its member disk drives due to its lack of redundancy.

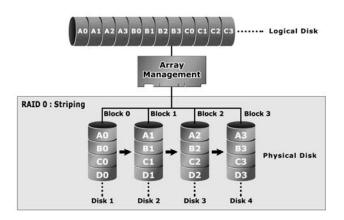

1.2.2 RAID 1


RAID 1 also known as "disk mirroring", data written to one disk drive is simultaneously written to another disk drive. Read performance may be enhanced if the array controller can parallel accesses both members of a mirrored pair. During writes, there will be a minor performance penalty when

compared to writing to a single disk. If one drive fails, all data (and software applications) are preserved on the other drive. RAID 1 offers extremely high data reliability, but at the cost of doubling the required data storage capacity.

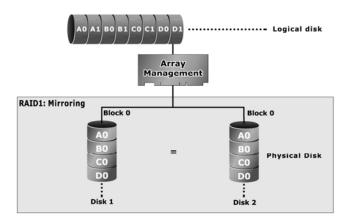


1.2.3 RAID 0+1

RAID 0+1 is a combination of RAID 0 and RAID 1, combing stripping with disk mirroring. RAID Level 10 combines the fast performance of Level 0 with the data redundancy of Level 1. In this configuration, data is distributed across several disk drives, similar to Level 0, which are then duplicated to another set of drive for data protection. RAID 0+1 provides the highest read/write performance of any of the Hybrid RAID levels, but at the cost of doubling the required data storage capacity.

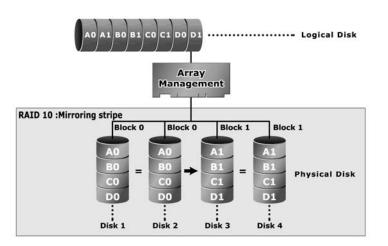


1.2.4 RAID 3

RAID 3 provides disk striping and complete data redundancy through a dedicated parity drive. RAID 3 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks to all but one drive in the array. The parity data created during the exclusive-or is then written to the last drive in the array. If a single drive fails, data is still available by computing the exclusive-or of the contents corresponding strips of the surviving member disk. RAID-3 is best for applications that require very fast data- transfer rates or long data blocks

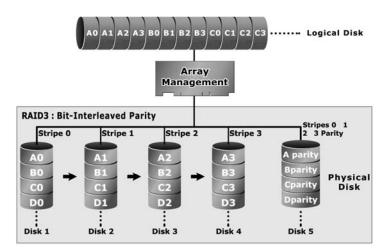


1.2.5 RAID 5

RAID 5 is sometimes called striping with parity at block level. In RAID 5, the parity information is written to all of the drives in the subsystems rather than concentrated on a dedicated parity disk. If one drive in the system fails, the parity information can be used to reconstruct the data from that drive. All drives in the array system can be used to seek operation at the same time, greatly increasing the performance of the RAID system.

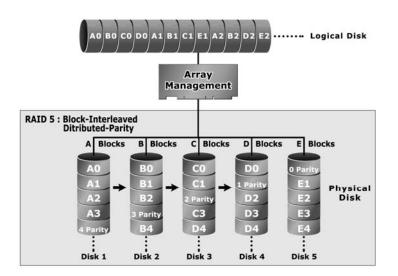

1.2.6 RAID 6

A RAID 6 array is essentially an extension of a RAID 5 array with a second independent distributed parity scheme. Data and parity are striped on a block level across multiple array members, just like in RAID 5, and a second set of parity is calculated and written across all the drives. As larger disk arrays are considered, it is desirable to use stronger codes that can tolerate multiple disk failure. When a disk fails in a parity protected disk array, recovering the contents of the failed disk requires successfully reading the contents of all no-failed disks. RAID 6 provides an extremely high fault tolerance, and can sustain two simultaneous drive failures without downtime or data loss. This is a perfect solution when data is mission-critical.

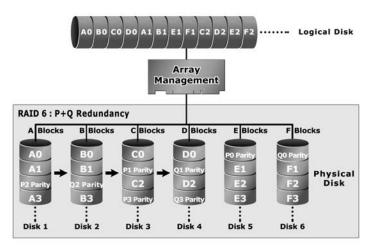

1.2.7 Summary of RAID Levels

RAID subsystem supports RAID Levels 0, 1(0+1), 3, 5 and 6. The following table provides a summary of RAID levels.

Sum	nmary of RAID Levels				
RAID Level	Description	Disks requirement (Cost)	Data Reliability	Data Transfer Rate	I/O Request Rates
0	Also known as stripping. Data distributed across multiple drives in the array. There is no data protection	Ν	* No data Protection.	* Very High	* Very High for Both Reads and Writes.
1	Also known as mirroring. All data replicated on N Separated disks. N is almost always 2. This is a high availability Solution, but due to the 100% duplication, it is also a costly solution.	2	* Lower than RAID 6. * Higher than RAID 3,5.	 * Reads are higher Than a single disk. * Writes similar to a single disk. 	 * Reads are twice faster than a single disk. * Write are similar to a single disk.
0+1	Also known Block-Interleaved Parity. Data and parity information is subdivided and distributed across all disk. Parity must be the equal to the smallest disk capacity in the array. Parity information normally stored on a dedicated parity disk.	N (N>2)	* Lower than RAID 6. * Higher than RAID 3,5.	* Transfer rates more similar to RAID 1.	 * Reads are twice faster than a single disk. * Writes are similar to a single disk.
3	Also known Bit-Interleaved Parity. Data and parity information is subdivided and distributed across all disk. Parity must be the equal to the smallest disk capacity in the array. Parity information normally stored on a dedicated parity disk.	N+1	 * Lower than RAID 1, 10, 6; * Higher than a single drive. 	 * Reads are similar to RAID 0; * Writes are slower than a single disk. 	 * Reads are similar twice faster than a single disk. * Writes are similar to a single disk.
5	Also known Block-Interleaved Distributed Parity. Data and parity information is subdivided and distributed across all disk. Parity must be the equal to the smallest disk capacity in the array. Parity information normally stored on a dedicated parity disk.	N+1	* Lower than RAID 1, 10, 6. * Higher than a single drive.	 * Reads are similar to RAID 0. * Writes are slower than a single disk. 	 * Reads are similar to RAID 0. * Writes are slower than a single disk.
6	AS RAID level 5, but with additional independently computed redundant information	N+2	* Highest of all listed alternatives.	 * Reads are similar to RAID 0. * Writes are slower than RAID 5. 	 * Reads are similar to RAID 0. * Writes are slower than a RAID 5.

Chapter 2.

Configuration Methods

2.1 Overview

After the hardware installation, the SATA disk drives installed to the RAID must be configured and the volume set units initialized before they are ready to use. This can be accomplished by one of the following methods:

- Front panel touch-control keypad
- Remote utility connected through the controller's serial port (VT-100 or Hyper terminal)
- Using HTTP Proxy through the controller's serial port to access web browser-based RAID manager in Windows and Linux system.
- Firmware-embedded TCP/IP & web browser-based RAID manager via the controller's 10/100 Ethernet LAN port.

Those user interfaces can access the built-in configuration and administration utility that resides in the controller's firmware. They provide complete control and management of the controller and disk arrays, eliminating the need for additional hardware or software.

Note

The RAID subsystem allows only one method to access menus at a time.

2.2 Using local front panel touch-control Kepad

The front panel keypad and liquid crystal display (LCD) is the primary user interface for the RAID subsystem. All configuration and management of the RAID and its properly connected disk arrays can be performed from this interface.


The front panel keypad and LCD are connected to the RAID subsystem to access the built-in configuration and administration utility that resides in the controller's firmware. Complete control and management of the array's physical drives and logical units can be performed from the front panel, requiring no additional hardware or software drivers for that purpose.

This Chapter provides, in quick reference form, procedures that use the built-in LCD panel to configure and operate the controller.

A touch-control keypad and a liquid crystal display (LCD) mounted on the front panel of the RAID subsystem is the primary operational interface and monitor display for the disk array controller. This user interface controls all configuration and management functions for the RAID subsystem controller and for all SATA disk array subsystems to which it is properly connected.

The LCD provides a system of screens with areas for information, status indication, or menus. The LCD screen displays up to two lines at a time of menu items or other information.

The Initial screen is as following:

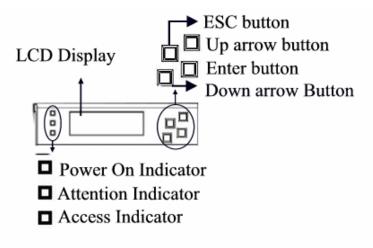

2.2.1 Function Key Definitions

The four function keys at the button of the front panel perform the following functions:

Кеу	Function
Up Arrow	Use to scroll the cursor Upward / Rightward
Down Arrow	Use to scroll the cursor Downward / Leftward
ENT Key	Submit Select ion Function (Confirm a selected item)
ESC Key	Return to Previous Screen (Exit a selection configuration)

There are three of LED indicators on the front panel. Following table provides a summary of the means of these LED indicators:

LED Indicator	Normal Status	Problem Indication
Power On indicator		This LED does not light up after power switched on
Fail Indicator	LED never light up	LED light up as Red.
Data Access Indicator	Blink blue during host computer accessing the RAID subsystem.	LED never flickers

For additional information on using the LCD panel and keypad to configure the RAID see "LCD Panel Configuration" on Chapter 3.

2.3 Using the controller's serial port

The serial port on the RAID subsystem's back panel can be used in Remote manage mode. The provided interface cable converts the RS232 signal on the RAID subsystem into RJ-11 connector. The firmware-based terminal array management interface can access the array through this RS-232 port. You can attach a VT-100 compatible terminal or a PC running a "Hyper terminal" program to the serial port for accessing the text-based Setup Menu.

RAID subsystem RS-232C Port Pin Assignment

To ensure proper communications between the RAID subsystem and the VT-100 Terminal Emulation, Please configure the VT100 terminal emulation settings to the values shown below:

Terminal requi	rement
Connection	Serial cable
Baud Rate	115,200
Data bits	8
Stop	1
Flow Control	None

The RAID Subsystem's RJ-11 connector's pin assignments are defined as below :

Pin	Description	Pin	Description
1	N/C	6	NC
2	GND		
3	RX		
4	ТХ		
5	CTS		

2.3.1 Keyboard Navigation

The following definition is the VT-100 RAID configuration utility keyboard navigation:

Кеу	Function
Arrow Key	Move cursor
Enter Key	Submit selection function
ESC Key	Return to previous screen
L Key	Line draw
Х Кеу	Redraw

2.3.2 Start-up VT100 Screen

By connecting a VT100 compatible terminal, or a PC operating in an equivalent terminal emulation mode, all RAID subsystem monitoring, configuration and administration functions can be exercised from the VT100 terminal.

There are a wide variety of Terminal Emulation packages, but for the most part they should be very similar. The following setup procedure is an example Setup VT100 Terminal in Windows XP system using Hyper Terminal use Version 3.0 or higher.

Step 1. From the Desktop open the Start menu. Pick Programs, Accessories, Communications and Hyper Terminal. Open Hyper Terminal (requires version 3.0 or higher)

My Compute	Express								
My Documer	its Connect to the Internet Snaglt 6								
	Windows Update	, 6	Accessories	ŀ	G	Communications	Þ	2	Dial-Up Networking
···· *	Favorites		Online Services Snaglt 6 StartUp	۲		Entertainment Internet Tools System Tools Address Book	•		Direct Cable Connection HyperTerminal Phone Dialer
	Tourido.	• 🏭	Internet Explorer MS-DOS Prompt Outlook Express Windows Explorer			Calculator Imaging Notepad			
80 28 28	<u>H</u> elp <u>B</u> un				¥ 9 2	Paint Synchronize WordPad			
Windows98	Log Off Billion Shut Down								

Step 2. Open HYPERTRM.EXE.

🚘 HyperTerminal				- 🗆 🗵
∫ <u>F</u> ile <u>E</u> dit <u>V</u> iew <u>G</u> o F <u>a</u>	vorites <u>H</u> elp			
	Dp Cut	Copy Paste	い Undo	**
🛛 Address 🧀 C:\Program Files\A	ccessories\HyperTer	minal		-
	AT&T Mail Compu	Serve Hypertrm		
HyperTermi	2	1.3		
Hypertrm.exe Application Modified:	qqq			
4/23/99 10:22 PM Size: 24KB				
	24.0	KB 🛄 My Compute	ſ	

Step 3. Enter a name for your Terminal. Click OK.

New Connection - Hyper	Terminal					_ 🗆 ×
$\underline{F}ile \underline{E}dit \underline{V}iew \underline{C}all \underline{T}ransl$	er <u>H</u> elp					
02 02 02				(
	Connection D	escription		<u>?×</u> –		1.4
	Ť	Connection and choose an icon fr	or the connection:			
	Name:					
	Mraid					
	<u>l</u> con:					
		^ی کې د 		ancel		
			<u> </u>			
Disconnected Au	o detect Auto de	etect SCROLL	CAPS NUM	Capture	Print echo	

Step 4. Select an appropriate connecting port in your Terminal. Click OK

🎨 Mraid - HyperTerminal				I×
File Edit View Call Iransfe		<u>?</u> ×		16
	Mraid Enter details for the phore	ne number that you want to dial:		
	Country code:			
	Phone number:	n Coml		
	[OK Cancel		
Disconnected Auto	detect Auto detect SC	ROLL CAPS NUM Captu	ire Print echo	

Step 5. Configure the port parameter settings. Bits per second: "115200", Data bits: "8", Parity: "None", Stop bits: "1", Flow control: "None". Click OK

Mraid - HyperTerminal COM1 Properties	
Port Settings	_
Bits per second: 115200	
Data bits: 8	
Parity: None	
Stop bits: 1	
Elow control: None	ß
Advanced <u>R</u> estore Defaults	
Di OK Cancel Apply	CAPS NUM Capture Print echo

Step 6. Open the File menu, and then open Properties.

🍓 Mraid - HyperTerminal	
<u>File</u> <u>E</u> dit <u>V</u> iew <u>C</u> all <u>T</u> ransfe	er <u>H</u> elp
New Connection	r 19
<u>O</u> pen	
Save	
Save <u>A</u> s	
Page Set <u>u</u> p	
<u>P</u> rint	
Properties	
Exit Alt+F4	
Displays the properties of the curre	ent session

Step 7. Open the Settings Tab.

🎨 Mraid - HyperTerminal	Mraid Properties	? ×	
<u>File E</u> dit ⊻iew <u>C</u> all <u>T</u> ransfer	Connect To Settings		
	Mraid Change [con]		<u>^</u>
	Country code: United States of America (1)		
	Enter the area code without the long-distance prefix.		
	Area code:		
	Phone number:		
	Connect using: Direct to Com1		
	Configure		
	☑ Use country code and area code ☐ Redial on busy		
Connected 0:04:27 Auto d	OK Ca	ancel	Print echo

Step 8. Open the Settings Tab. Function, arrow and ctrl keys act as: Terminal Keys, Backspace key sends: Crtl+H, Emulation: VT100, Telnet terminal: VT100, Back scroll buffer lines: 500. Click OK.

🥙 Mraid - HyperTerminal	Mraid Properties	? ×		- 🗆 ×
<u>File Edit View Call Transfer</u>	Connect To Settings			
<u> </u>	Function, arrow, and ctrl keys act as			
	Ierminal keys			
	Backspace key sends			
	<u>C</u> trl+H C <u>D</u> el C Ctrl+ <u>H</u> , Space, Ctrl+H			
	Emulation:			
	VT100 Terminal Setup			
	Tel <u>n</u> et terminal VT100			
	Backscroll buffer lines: 🔟			
	E Beep three times when connecting or disconnecting			
	ASCII Setup			
Connected 0:03:26 Auto d	OK Ca	ncel	Print echo	_

Now, the VT100 is ready to use.

After you have finished the VT100 Terminal setup, you may press " X " key (in your Terminal) to link the RAID subsystem and Terminal together.

Press "X' key to display the disk array Monitor Utility screen on your VT100 Terminal.

2.4 Firmware-embedded TCP/IP & web browser-based RAID manager (using the controller's 10/100 Ethernet LAN port)

To ensure proper communications between the RAID subsystem and Web browser-based RAID management, Please connect the RAID system Ethernet LAN port to any LAN switch port.

The controller has embedded the TCP/IP & Web Browser-based RAID manager in the firmware. User can remote manage the RAID system without adding any user specific software (platform independent) via standard web browsers directly connected to the 10/100 Ethernet RJ45 LAN port.

RaidSet Functions	D.116.4	TF 1	-			
VolumeSet	Raiu Set	Hierarchy	У			
nctions	_	n .	IDE		V.1. C	
Physical Drives	Raid	Set C	hannels	Volume Set(Ch/Lun)	Volume State	Capacity
System Controls						
Information	IDE Cha	nnels				
	-					
	Channel	Usage	e Capac	ity	Model	
	Channel Ch01	Usage Hot Spare				
				WDC WD800JD-0	0HKA0	
	<u>Ch01</u>	Hot Spare	e 80.0GB	WDC WD800JD-0 WDC WD800JD-0	OHKAO OHKAO	
	<u>Ch01</u> <u>Ch02</u>	Hot Spare Free	e 80.0GB 80.0GB	WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0	OHKA0 OHKA0 OHKA0	
	Ch01 Ch02 Ch03	Hot Spare Free Free	e 80.0GB 80.0GB 80.0GB	WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0	OHKAO OHKAO OHKAO OHKAO	
	Ch01 Ch02 Ch03 Ch04	Hot Spare Free Free Free	e 80.0GB 80.0GB 80.0GB 80.0GB	WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0	OHKAO OHKAO OHKAO OHKAO OHKAO	

To configure RAID subsystem on a local or remote machine, you need to know its IP Address. The IP address will default show in the LCD screen. Launch your firmware-embedded TCP/IP & Web Browser-based RAID manager by entering http://[IP Address] in the web browser.


Note that you must be logged in as administrator with local admin rights on the remote machine to remotely configure it. The RAID subsystem controller default User Name is "admin" and the Password is "0000".


Note

The RAID subsystem controller default User Name is "**admin**" and the Password is "**0000**". Please change the Password when you first log-in.

2.5 Configuration Menu Tree

The following is an expansion of the menus in configuration Utility that can be accessed through the LCD panel, RS-232 serial port and Ethernet LAN port.

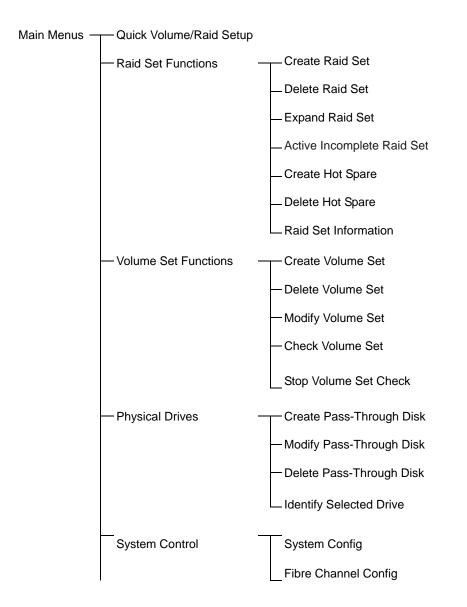

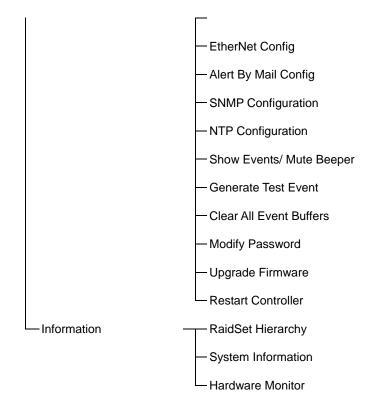

Chapter 3.

LCD Panel Configuration

The Alnico RAID's LCD configuration panel is a character-based that you can use after powering the unit. Use LCD Configuration panel to:

- · Create raid set,
- . Expand raid set,
- · Define volume set,
- · Add physical drive
- · Modify volume set
- · Modify RAID level/stripe size,
- . Define pass-through disk drives,
- . Modify system function and
- · Designate drives as hot spares.

The LCD display front panel function keys are the primary user interface for the RAID subsystem. Except for the "Firmware update", all configurations can be performed through this interface.

3.1 Starting LCD Configuration Utility

The main menu appears on the LCD screen, as shown below:

Use the up and down arrow buttons to move left and right to select a menu item. Press **ENT** to select the item. Press the **UP/DOWN** to browse the selection. Press **ESC** to return to the previous screen.

3.2 LCD Configuration Utility Main Menu Options


Select an option and the related information or submenu items display beneath it. The submenus for each item are explained on the following sections. The configuration utility main menu options are:

Option	Description
Quick Volume And Raid	Create a default configurations which are based
Set Setup	on the number of physical disk installed

Raid Set Functions	Create a customized raid set
Volume Set Functions	Create a customized volume set
Physical Drive Functions	View individual disk information
Raid System Functions	Setting the raid system configurations
Fibre Channel	To set the Fibre channel configurations
Configuration	Ĵ
Ethernet Configuration	Setting Local IP Address
Show System Events	Record all system events in the buffer
Clear Event Buffer	Clear all event buffer information
Hardware Monitor	Show all system environment status
Show System	View the controller information
Information	

3.3 Configuring Raid Sets and Volume Sets

You can configure raid sets and volume sets either using "Quick Volume And Raid Set Setup" automatically or "Raid Set Functions/Volume Set Functions" manually configuration method. Each configuration method requires a different level of user input. The general flow of operations for raid set and volume set configuration is:

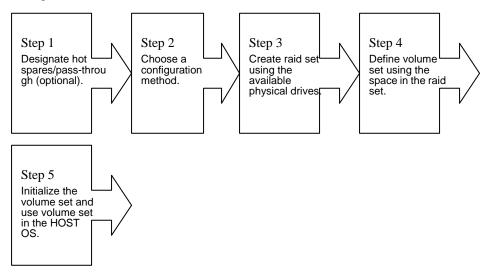

3.4 Designating Drives as Hot Spares

To designate drives as hot spares, press ENT to enter the Main menu. Press UP/DOWN to select the Raid Set Functions option and then press ENT. All

raid set functions will be displayed. Press **UP/DOWN** to select the **Create Hot Spare Disk** option and then press **ENT**. The first unused physical device connected to the current controller appears: Press **UP/DOWN** to scroll the unused physical devices and select the target disk to assign as a Hot Spare and press **ENT** to designate it as a hot spare.

3.5 Using Quick Volume and Raid Set Setup

In Quick Volume And Raid Setup Configuration, it collects all drives in try and include them in a raid set. The raid set you create is associated with exactly one volume set, and you can modify the RAID level, stripe size, and capacity. Designating Drives as Hot Spares will also combine with raid level in this setup.

Parameter	Setting
Volume Name	Volume Set # 00
Fibre Channel/Fibre ID/Fibre LUN	0/0/0
Cache Mode	Write Back
Tag Queuing	Yes

The volume set default settings will be:

The default setting values can be changed after configuration is complete.

Follow the steps below to create raid set using Quick Volume And Raid Setup Configuration:



Choose Quick Volume And Raid Setup from the main menu. The available RAID levels and associated Hot Spare for the current volume set drive are displayed.



RAID Level Try to use drives of the same capacity in a specific array. If you use drives with different capacities in an array, all the drives in the array is treated as though they have the capacity of the *smallest* drive in the array.

The number of physical drives in a specific array determines the RAID levels that can be implemented with the array.

RAID 0 requires one or more physical drives,

RAID 1 requires at least 2 physical drives,

RAID 1+ Spare requires more than 2 physical drives,

RAID 3 requires at least 3 physical drives,

RAID 5 requires at least 3 physical drives,

RAID 6 requires at least 4 physical drives,

RAID 3+ Spare requires at least 4 physical drives, and

RAID 5 + Spare requires at least 4 physical drives.

RAID 6 + Spare requires at least 5 physical drives.

Using the UP/DOWN key to select the RAID for the volume set and presses ENT to confirm it.



Available Capacity Set the capacity size for the volume set. After select RAID *level* and press ENT.

The selected capacity for the current volume set is displayed. Using the UP/DOWN to create the current volume set capacity size and press ENT to confirm it. The available stripe sizes for the current volume set are displayed.



Select Stripe size This parameter specifies the size of the stripes written to each disk in a RAID 0, 1(0+1), 5or 6 Volume Set. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB. A larger stripe size provides better-read performance, especially if your computer does mostly sequential reads. However, if you are sure that your computer does random read requests more often, choose a small stripe size. Using the UP/DOWN to select stripe size and press ENT to confirm it.



When you are finished defining the volume set, press ENT to confirm the Quick Volume And Raid Set Setup function.



Fast Initialization Press ENT to define fast initialization and ESC to normal initialization. In the Normal Initialization, the initialization proceeds as a background task, the volume set is fully accessible for system reads and writes. The operating system can instantly access to the newly created arrays without requiring a reboot and waiting the initialization complete. In Fast Initialization, the initialization proceeds must be completed before the volume set ready for system accesses.



The controller will begin to Initialize the volume set you have just configured.



If you need to add additional volume set using main menu Create Raid Volume Set function.

3.6 Using Raid Set and Volume Set Functions

In Raid Set Function, you can use the **Create Raid Set** function to generate the new raid set. In Volume Set Function, you can use the **Create Volume Set** function to generate its associated volume set and parameters.

If the current controller has unused physical devices connected, you can

choose the *Create Hot Spare* option in the Raid Set Function to define a global hot spare.

Select this method to configure new raid sets and volume sets. This configuration option allows you to associate volume set with partial and full raid set.



To setup the Hot Spare (option), choose Raid Set Functions from the main menu. Select the Create Hot Spare Disk to set the Hot Spare.



Choose Raid Set Function from the main menu. Select the Create A New Raid Set.



A Select Drive IDE Channel in the next displayed showing the IDE drive connected to the current controller.



Press the UP/ DOWN to select specific physical drives. Press the ENT to associate the selected physical drive with the current raid set.

Try to use drives of the same capacity in a specific raid set. If you use drives with different capacities in an array, all the drives in the array is treated as though they have the capacity of the *smallest* drive in the array.

The number of physical drives in a specific raid set determines the RAID levels that can be implemented with the raid set.

RAID 0 requires one or more physical drives per raid set.

RAID 1 requires at least 2 physical drives per raid set.

RAID 1 + Spare requires at least 3 physical drives per raid set.

RAID 3 requires at least 3 physical drives per raid set.

RAID 5 requires at least 3 physical drives per raid set.

RAID 6 requires at least 4 physical drives per raid set.

RAID 3 + Spare requires at least 4 physical drives per raid set.

RAID 5 + Spare requires at least 4 physical drives per raid set.

RAID 6 + Spare requires at least 5 physical drives per raid set.



After adding physical drives to the current raid set as desired, press ESC to confirm the Select Drive IDE Channel function.



Press ENT when you are finished creating the current raid set. To continue defining another raid set, repeat step 3. To begin volume set configuration, go to step 7.



Choose Volume Set Functions from the main menu. Select the Create Raid Volume Set and press ENT.



Choose one raid set from the Select Raid Set screen. Press ENT to confirm it.



The volume set attributes screen appears:

The volume set attributes screen shows the volume set default configuration value that is currently being configured. The volume set attributes are:

Large than 2TB (64bit LBA, 4K block)

The Raid Level,

The Capacity (Not supported via LCD Panel.)

The Stripe Size,

The Fibre HOST/Fibre ID/Fibre LUN/

The Cache Mode,

The Tagged Queuing,

The Volume Name (number).

All value can be changing by the user. Press the UP/ DOWN to select the attributes. Press the ENT to modify each attribute of the default value. Using the UP/DOWN to select attribute value and press the ENT to accept the default value



After user completes modifying the attribute, press the ESC to enter the Select Capacity for the volume set. Using the UP/DOWN to set the volume set capacity and press ENT to confirm it.




When you are finished defining the volume set, press ENT to confirm the Create function.

Step12

Press ENT to define fast initialization and ESC to normal initialization. The controller will begin to Initialize the volume set you have just configured. If space remains in the raid set, the next volume set can be configured. Repeat steps 7 to 12 to configure another volume set.


3.7 Navigation Map of the Configuration

The password option allows user to set or clear the raid subsystem's password protection feature. Once the password has been set, the user can only monitor and configure the raid subsystem by providing the correct password. The password is used to protect the internal RAID subsystem from unauthorized entry. The controller will check the password only when entering the Main menu from the initial screen. The RAID subsystem will automatically go back to the initial screen when it does not receive any command in twenty seconds. The RAID subsystem password is default setting at 0000 by the manufacture.

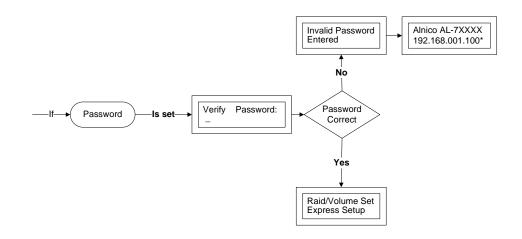

3.7.1 Quick Volume/Raid Setup

Quick Volume And Raid Setup is the fastest way to prepare a raid set and volume set. It only needs a few keystrokes to complete it. Although disk drives of different capacity may be used in the raid set, it will use the smallest capacity of the disk drive as the capacity of all disk drives in the raid set. The Quick Volume And Raid Setup option creates a raid set with the following properties:

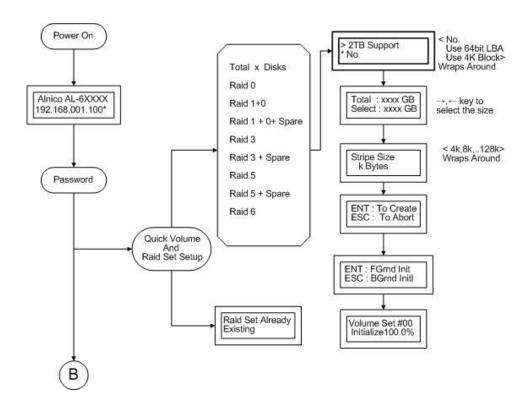


- 1. All of the physical disk drives are contained in a raid set.
- 2. The raid levels associated with hot spare, capacity, and stripe size are selected during the configuration process.
- 3. A single volume set is created and consumed all or a portion of the disk capacity available in this raid set.
- 4. If you need to add additional volume set, using main menu Volume Set functions.

Detail procedure references to this chapter's section : Using Raid Set and Volume Set Functions

3.7.2 Raid Set Function

User manual configuration can complete control of the raid set setting, but it will take longer time to complete than the Quick Volume And Raid Setup configuration. Select the Raid Set Function to manually configure the raid set for the first time or deletes existing raid set and reconfigures the raid set.

To enter a Raid Set Functions, press **ENT** to enter the Main menu. Press **UP/DOWN** to select the **Raid Set Functions** option and then press **ENT** to enter further submenus. All raid set submenus will be displayed.

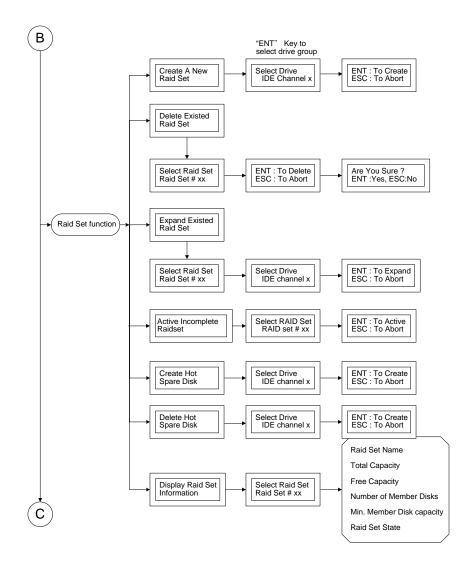

3.7.2.1 Create A New Raid Set

Detail procedure references to this chapter's section : Using Raid Set and Volume Set Functions

3.7.2.2 Delete Existed Raid Set

Press **UP/DOWN** to choose the **Delete Existed Raid Set** option. Using **UP/DOWN** to select the raid set number that user want to delete and then press **ENT** to accept the raid set number. The Confirmation screen appears, then press **ENT** to accept the delete existed raid set function. The double

confirmation screen appears, then press **ENT** to make sure of the delete existed raid set function

3.7.2.3 Expand Existed Raid Set

Instead of deleting a raid set and recreating it with additional disk drives, the Expand Existed Raid Set function allows the user to add disk drives to the raid set that was created.

To expand existed raid set, press **UP/DOWN** to choose the **Expand Existed Raid Set** option. Using **UP/DOWN** to select the raid set number that user want to expand and then press ENT to accept the raid set number. If there is an available disk, then the **Select Drive IDE Channel x** appears. Using **UP/DOWN** to select the target disk and then press **ENT** to select it. Press **ENT** to start expanding the existed raid set.

The new add capacity will be define one or more volume sets. Follow the instruction presented in the Volume Set Function to create the volume sets.

Note

Once the Expand Raid Set process has started, user cannot stop it. The process must be completed.

If a disk drive fails during raid set expansion and a hot spare is available, an auto rebuild operation will occur after the raid set expansion completes.

Migrating occurs when a disk is added to a raid set. Migration status is displayed in the raid status area of the Raid Set information when a disk is added to a raid set. Migrating status is also displayed in the associated volume status area of the volume set Information when a disk is added to a raid set.

3.7.2.4 Activate Incomplete Raid Set

When one of the disk drive is removed in power off state, the raid set state will change to Incomplete State. If user wants to continue to work, when the RAID subsystem is power on. User can use the **Activate Incomplete RaidSet** option to active the raid set. After user complete the function, the Raid State will change to Degraded Mode.

3.7.2.5 Create Hot Spare Disk

Please reference this chapter : Designating Drives as Hot Spares.

3.7.2.6 Delete Hot Spare Disk

To delete hot spare, press **UP/DOWN** to choose the **Delete Hot Spare Disk** option. Using **UP/DOWN** to select the hot spare number that user want to delete

and then press **ENT** to select it. The confirmation screens appear and press **ENT** to delete the hot spare.

3.7.2.7 RAID Set Information

Using **UP/DOWN** to choose the **Display Raid Set Information** option and press **ENT**. Using **UP/DOWN** to select the raid set number that user want to display. The raid set information will be displayed.

Using **UP/DOWN** to scroll the raid set information, it shows Raid Set Name, Total Capacity, Free Capacity, Number of Member Disks, Min. Member Disk Capacity and Raid Set State.


3.7.2.8 Offline Raid Set

This function allows the user to move the whole created Raid Set to another Alnico RAID subsystem without turning off power. "Active Raid Set" can resume the offline-Raid Set to online status.

3.7.3 Volume Set Function

A volume set is seen by the host system as a single logical device. It is organized in a RAID level with one or more physical disks. RAID level refers to the level of data performance and protection of a Volume Set. A Volume Set capacity can consume all or a portion of the disk capacity available in a Raid Set. Multiple Volume Sets can exist on a group of disks in a Raid Set. Additional Volume Sets created in a specified Raid Set will reside on all the physical disks in the Raid Set. Thus each Volume Set on the Raid Set will have its data spread evenly across all the disks in the Raid Set.

To enter a Volume Set Functions, press **ENT** to enter the main menu. Press **UP/DOWN** to select the **Volume Set Functions** option and then press **ENT** to enter further submenus. All volume set submenus will be displayed.

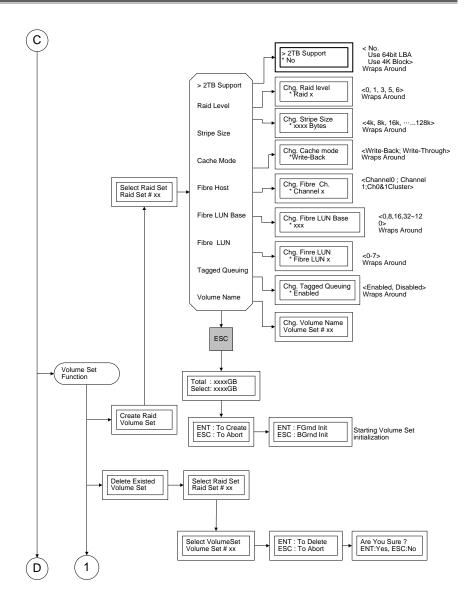

3.7.3.1 Create Raid Volume Set

To create a volume set, Please reference this chapter section 4.6: Using Raid Set and Volume Set Functions. The volume set attributes screen shows the volume set default configuration value that is currently being configured. The attributes are Raid Level, Stripe Size, Cache Mode, Fibre HOST, Fibre ID, Fibre LUN, Tagged Queuing, and Volume Name (number).

All value can be changing by the user. Press the **UP/DOWN** to select attribute. Press the **ENT** to modify the default value. Using the **UP/DOWN** to select attribute value and press the **ENT** to accept the default value. The following is the attributes descriptions. Please reference this chapter section 4.6 Using Raid Set and Volume Set Functions to complete the create volume set function.

3.7.3.1.1 > 2TB Support

When the RAID set capacity of per volume is over 2TB, a special selection will appear on the LCD panel, please make a choice according to your O.S.:

Use 64bit LBA: for Linux, Unix Windows 2003 SP1 (or later) and etc...

Use 4K Block : Windows 2000, XP, enlarge block size from 512Byte to 4K.

No. : Disabled greater than 2TB feature.

Using the **UP/DOWN** to select attribute value and press the **ENT** to accept the default value.

3.7.3.1.2 Capacity

The maximum volume size is default in the first setting. Enter the appropriate volume size to fit your application. The capacity can also increase or decrease by the .UP and DOWN arrow key. Each volume set has a selected capacity which is less than or equal to the total capacity of the raid set on which it resides.

3.7.3.1.3 Raid Level

RAID subsystem can support raid level 0,1(0+1), 3, 5 and 6.

3.7.3.1.4 Strip Size

This parameter sets the size of the segment written to each disk in a RAID 0, 1, 0+1, 5 or 6 logical drives. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

A larger stripe size produces better-read performance, especially if your computer does mostly sequential reads. However, if you are sure that your computer does random reads more often, select a small stripe size.

3.7.3.1.5 Volume Name

The default volume name will always appear as Volume Set. #. You can rename the volume set name providing it does not exceed the 15 characters limit.

3.7.3.1.6 Fibre Host

RAID subsystem supports dual 4 Gbps Fibre Channels.

Fibre Host # : Two 4Gbps Fibre channel can be applied to the internal RAID subsystem. Choose the Fibre Host# option 0, 1 and 0&1 cluster.

3.7.3.1.7 Fibre LUN Base

Fibre LUN Base : Each fibre device attached to the Fibre card, as well as the

card itself, must be assigned a unique fibre ID number. A Fibre channel can connect up to 128(0 to 127) devices. The RAID subsystem is as a large Fibre device. We should assign an LUN base from a list of Fibre LUNs.

3.7.3.1.8 Fibre LUN

Fibre LUN: Each Fibre LUN base can support up to 8 LUNs. Most Fibre Channel host adapter treats each LUN like a Fibre disk.

3.7.3.1.9 Cache Mode

User can set the cache mode as Write-Through Cache or Write-Back Cache.

3.7.3.1.10 Tag Queuing


The Enabled option is useful for enhancing overall system performance under multi-tasking operating systems. The Command Tag (Drive Channel) function controls the SCSI command tag queuing support for each drive channel. This function should normally remain enabled. Disable this function only when using older SCSI drives that do not support command tag queuing

3.7.3.2 Delete Volume Set

Press **UP/DOWN** to choose the **Delete Existed Volume Set** option. Using **UP/DOWN** to select the raid set number that user want to delete and press **ENT**. Scrolling the **UP/DOWN** to select the volume set number that user want to delete and press **ENT**. The Confirmation screen appears, and then press **ENT** to accept the delete volume set function. The double confirmation screen appears, then press **ENT** to make sure of the delete volume set function.

3.7.3.3 Modify Volume Set

Use this option to modify volume set configuration. To modify volume set attributes from raid set system function, press **UP/DOWN** to choose the **Modify Volume Set Attribute** option. Using **UP/DOWN** to select the raid set number that user want to modify and press **ENT**. Scrolling the **UP/DOWN** to select the volume set number that user want to modify and press **ENT**. Press **ENT** to select the existed volume set attribute. The volume set attributes screen shows the volume set setting configuration attributes that was currently being configured. The attributes are Raid Level, Stripe Size, Cache Mode, Fibre HOST, Fibre ID, Fibre LUN, Tagged Queuing and Volume Name (number).

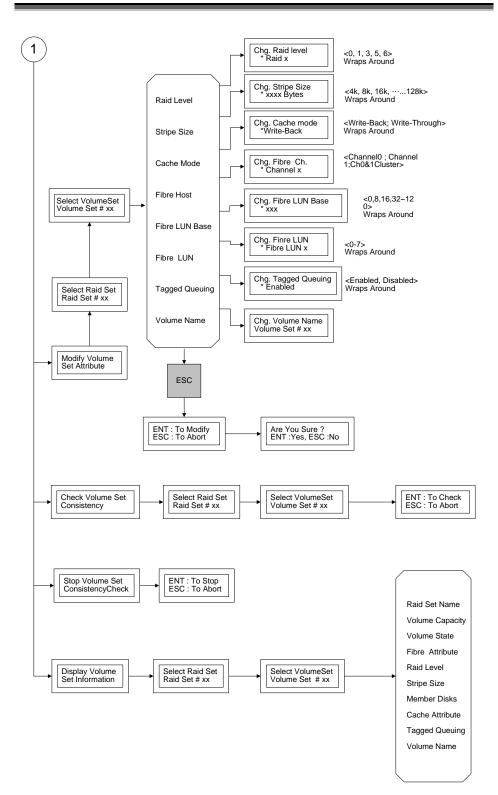

All value can be modifying by the user. Press the **UP/DOWN** to select attribute. Press the **ENT** to modify the default value. Using the **UP/DOWN** to select attribute value and press the **ENT** to accept the selection value. Choose this option to display the properties of the selected Volume Set; you can modify all values except the capacity.

3.7.3.4 Check Volume Set Consistency

Use this option to check volume set consistency. To check volume set consistency from volume set system function, press **UP/DOWN** to choose the **Check Volume Set Consistency** option. Using **UP/DOWN** to select the raid set number that user want to check and press **ENT**. Scrolling the **UP/DOWN** to select the volume set number that user want to check and press **ENT**. The Confirmation screen appears, press **ENT** to start the check volume set consistency.

3.7.3.5 Stop Volume Set Consistency Check

Use this option to stop volume set consistency check. To stop volume set consistency check from volume set system function, press **UP/DOWN** to choose the **Stop Volume Set Consistency Check** option and then press **ENT** to stop the check volume set consistency.

3.7.3.6 Display Volume Set Information


Use this option to display volume set information. To display volume set information from Volume set system function, press **UP/DOWN** to choose the **Display Volume Set Information** option. Using **UP/DOWN** to select the raid set number that user wants to show and press **ENT**. Scrolling the **UP/DOWN** to select the volume set number that user want to display and press **ENT**. The volume set attributes screen shows the volume set setting configuration value that was currently being configured. The attributes are Raid Level, Stripe Size, Cache Mode, Fibre Attribute, Tagged Queuing, and Volume Name (number). All value cannot be modifying by this option.

3.7.4 Physical Drive

Choose this option from the Main Menu to select a physical disk and to perform the operations listed below. To enter a Physical Drive Functions, press **ENT** to enter the main menu. Press **UP/DOWN** to select the **Physical Drive Functions** option and then press **ENT** to enter further submenus. All physical drive submenus will be displayed.

3.7.4.1 Display Drive Information

To display all information about HDDs, includes brand, model, serial number, firmware version and so on.

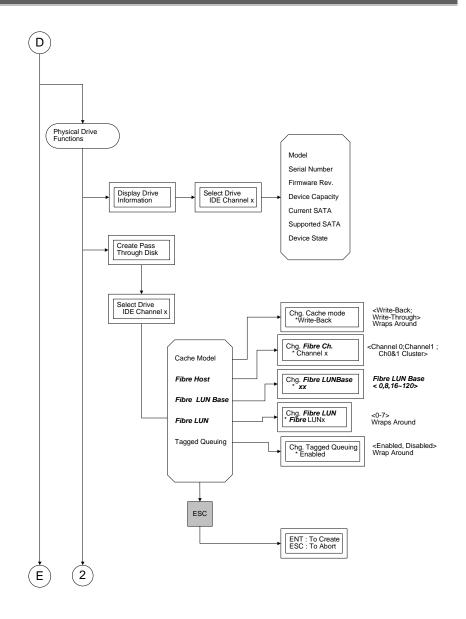

Press **UP/DOWN** to choose the **Display Drive** Information option, then press **ENT** key. This menu will show all physical drive number items. Using **UP/DOWN** to select the Disk that user want to display and press **ENT**, then Press **UP/DOWN** to browse the HDD's information.

3.7.4.2 Create Pass-Through Disk

Disk is no controlled by the RAID subsystem firmware and thus cannot be a part of a raid set. The disk is available to the operating system as an individual disk. It is typically used on a system where the operating system is on a disk not controlled by the RAID subsystem firmware.

Using **UP/DOWN** to choose the **Create Pass-Through Disk** option and press **ENT**. Using **UP/DOWN** to select the drive IDE number that user want to create. The drive attributes will be displayed. The drive attributes show the Cache Model, Fibre Host, Fibre ID, Fibre LUN, Tagged Queuing.

All values can be changing by the user. Press the **UP/DOWN** to select attribute and then press the **ENT** to modify the default value. Using the **UP/ DOWN** to select attribute value and press the **ENT** to accept the selection value.

3.7.4.3 Modify Pass-Through Disk

Use this option to modify the Pass-Through Disk attributes. To modify Pass-Through Disk attributes from Pass-Through Disk pool, press **UP/DOWN** to choose the **Modify Pass-Through Drive** option, and then press **ENT** key. The Select Drive Function menu will show all Pass-Through Drive number items. Using **UP/DOWN** to select the Pass-Through Disk that user want to modify and press **ENT**. The attributes screen shows the Pass-Through Disk setting value that was currently being configured. The attributes are Cache Mode, Fibre Host, Fibre ID, Fibre LUN, Tagged Queuing.

All value can be modifying by the user. Press the **UP/DOWN** arrow keys to select attribute. Press the **ENT** to modify the default value. Using the **UP/DOWN** key to select attribute value and press the **ENT** to accept the selection value. After completing the modification, press **ESC** to enter the confirmation screen and then press **ENT** to accept the Modify Pass-Through Disk function.


3.7.4.4 Delete Pass-Through Disk

To delete pass-through drive from the pass-through drive pool, press **UP/DOWN** to choose the **Delete Pass-Through Drive** option, and then press **ENT**. The Select Drive Function menu will show all Pass-Through Drive number items. Using **UP/DOWN** to select the Pass-Through Disk that user want to delete and press **ENT**. The Delete Pass-Through confirmation screen will appear, presses **ENT** to delete it.

3.7.4.5 Identify The Selected Drive


To prevent removing the wrong drive, the selected disk HDD LED Indicator will light for physically locating the selected disk when the Identify Selected Drive function is selected..

To identify selected drive from the physical drive pool, press **UP/DOWN** to choose the **Identify Drive** option, then press **ENT** key. The Select Drive function menu will show all physical drive number items. Using **UP/DOWN** to select the Disk that user want to identify and press **ENT**. The selected disk HDD LED indicator will flash.

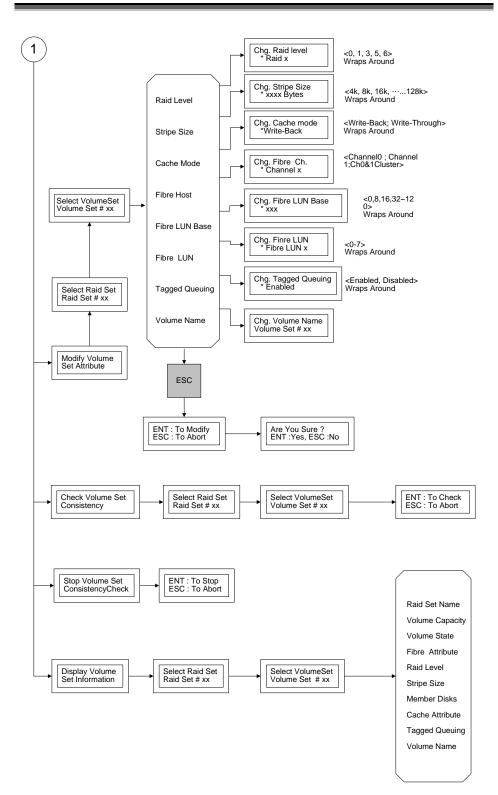

3.7.5 RAID System Function

To enter a "System Control", press **ENT** to enter the Main menu. Press **UP/DOWN** to select the **Raid System Function** option and then press **ENT** to enter further submenus. All raid system submenus will be displayed. Using **UP/DOWN** to select the submenus option and then press **ENT** to enter the selection function.

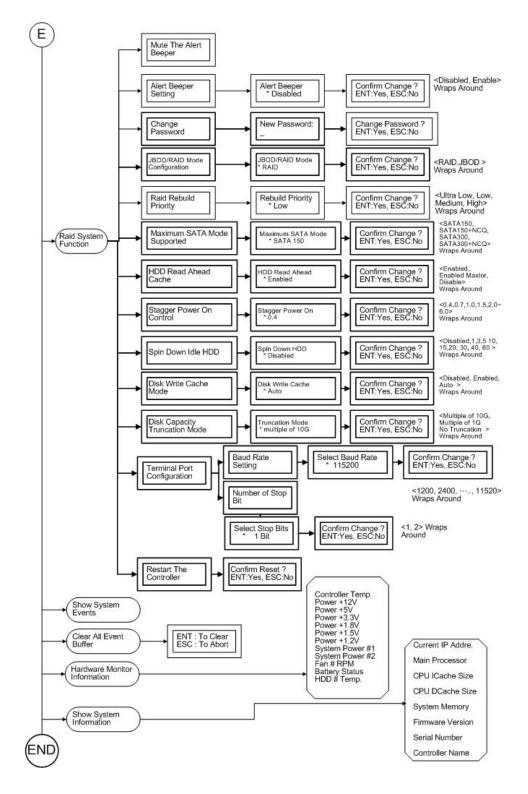

3.7.5.1 Mute The Alert Beeper

The Mute The Alert Beeper function item is used to control the RAID subsystem Beeper. Select the "No" and press **Enter** key in the dialog box to turn the beeper off temporarily. The beeper will still activate on the next event.

3.7.5.2 Alert Beeper Setting

The Alert Beeper function item is used to Disabled or Enable the RAID subsystem controller alarm tone generator. Using the **UP/DOWN** to select alert beeper and then press the **ENT** to accept the selection. After completing the selection, the confirmation screen will be displayed and then press **ENT** to accept the function

Select the **Disabled** and press **Enter** key in the dialog box to turn the beeper off temporarily. The beeper will still activate on the next event.

3.7.5.3 Change Password

To set or change the RAID subsystem password, press the UP/DOWN to select Change Password and then press the ENT to accept the selection. The New Password: screen appears and enter new password that user want to change.

Using the UP/DOWN to set the password value. After completing the modification, the confirmation screen will be displayed and then press ENT to accept the function.

To disable the password, presses ENT only in the New Password: column. The existing password will be cleared. No password checking will occur when entering the main menu from the starting screen.

3.7.5.4 JBOD /RAID Mode Configuration

To set or change the RAID Mode of RAID subsystem, press the **UP/ DOWN** to select **JBOD/RAID Mode Configuration** and then press the **ENT** to accept the selection. The RAID mode selection screen appears and uses the **UP/DOWN** to set RAID mode. After completing the modification, the confirmation screen will be displayed and then press **ENT** to accept the function.

3.7.5.5 RAID Rebuild Priority

The "Raid Rebuild Priority' is a relative indication of how much time the controller devotes to a rebuild operation. The RAID subsystem allows user to choose the rebuild priority (low, normal, high) to balance volume set access and rebuild tasks appropriately.

To set or change the RAID subsystem RAID Rebuild Priority, press the **UP/DOWN** to select **RAID Rebuild Priority** and press the **ENT** to accept the selection. The rebuild priority selection screen appears and uses the **UP/DOWN** to set the rebuild value. After completing the modification, the confirmation screen will be displayed and then press **ENT** to accept the function.

3.7.5.6 Max SATA-Mode Support

Alnico supports SATA-II (3.0Gps) and NCQ (Native command queuing), user can use this option to change the speed of SATA interface according to the HDD speed. There are 4 selections : SATA 150, SATA150+NCQ, SATA 300, SATA 300+NCQ.

To set or change the configuration, press the **UP/ DOWN** to select **SATA-Mode** and then press the **ENT** to accept the selection.

3.7.5.7 HDD Read Ahead Cache

Alnico supports HDD Read Ahead Cache, allowing the users to disable the cache in the HDD. To some HDD models, disabling the cache in the HDD is necessary to prove the RAID subsystem functions. Press the **UP/ DOWN** to select **mode** and then press the **ENT** to accept the selection.

3.7.5.8 Stagger Power On Control

A method is disclosed to reduce power consumption of a load. Instead of directly load to devices via switch on each Hard Disk one by one ordinal. The setting can be from 0.4 second to 6.0 second.

To set or change the configuration, press the **UP/ DOWN** to select **value** and then press the **ENT** to accept the selection.

3.7.5.9 Spin Down Idle HDD

Exclusively available on AL-7161F and 7121F, "Spin Down" is mainly designed to save the power consumption taken by the idle hard drives. When Spin Down is invoked, the SMART status of each hard drive will be marked as "N/A" to signify the hard drive has been at non-spin mode. As soon as data access is requested again, all the idle hard drives will be automatically waken up by the RAID controller.

To set or change the configuration, press the **UP/ DOWN** to select **value** and then press the **ENT** to accept the selection.

3.7.5.10 Disk Write Cache Mode

Disk cache can be turned off to prevent data lost, turned on to increase the performance of the machine. The following is the reason why a user might wants to turn off the cache. In case of power failure, the data stored in the disk cache waiting to be process might be lost. The disadvantage to turn off the disk cache is that performance will decrease dramatically.

Auto : Disk cache's setting will according to the installation of battery back up. When battery back up installed, Disk cache is disable. No battery back up installed, Disk cache is enable.

To set or change the configuration, press the **UP/ DOWN** to select "**Disk Write Cache Mode**" and then press the **ENT** to accept the selection.

3.7.5.11 Disk Capacity Truncation Mode

This function is used for cutting down the reminder or decimal to allow the storage space to be as a whole number.

For example:

It is rarely that the actual size of the Hard Drive is a whole number. Let's take a 40GB HDD for example, the actual size read by the controller maybe 40.55GB. This function "capacity truncation" can be used to trim down the capacity to 40.00 GB. This function is useful because in the future the 40.55HDD might go bad, and the user can't locate another 40GB drive which contains 40.55GB in the actual capacity, then that particular user will have to buy another drive with bigger capacity to rebuild the raid volume.

To set or change the configuration, press the UP/ DOWN to select "Disk Capacity Truncation Mode" and then press the ENT

3.7.5.12 Terminal Port Configuration

Parity value is fixed at None.

Handshaking value is fixed at None.

Speed setting values are 1200, 2400, 4800, 9600, 19200,38400, 57600, and 115200.

Stop Bits values are 1 bit and 2 bits.


To set or change the RAID subsystem **Terminal Port** configuration, press the **UP/ DOWN** to select **Terminal Port Configuration** and then press the **ENT** to accept the selection. The baud rate setting or number of stop bit screen appears and uses the **UP/DOWN** select the setting function. The respect selection screen appears and uses the **UP/DOWN** arrow to set the value. After completing the modification, the confirmation screen will be displayed and then press **ENT** to accept the function.

3.7.5.13 Restart Controller

Use the Restart Controller to reset the entire configuration from the RAID subsystem controller non-volatile memory. To reset the RAID subsystem, press the **UP/ DOWN** to select **Restart Controller** and then press the **ENT** to accept the selection. The confirmation screen will be displayed and then press **ENT** to accept the function.

Note

It can only work properly at Host and Drive without any activity.

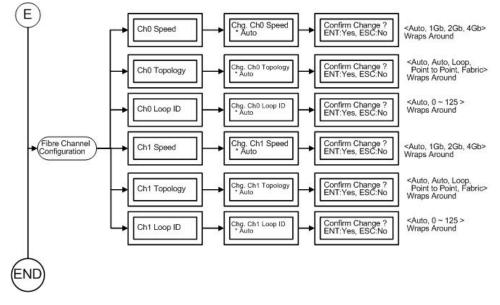

3.7.6 Fibre Channel Configuration

3.7.6.1 Fibre Speed

Press the **UP/ DOWN** to select **Ch0 Speed** and then press the **ENT** to accept the selection. Press **UP/ DOWN** to select speed **(Auto, 1Gbps, 2Gbps, 4Gbps)** Then press ENT to accept the selection. The confirmation screen will be displayed and then press **ENT** to accept the change.

3.7.6.2 Fibre topology


Press the **UP/ DOWN** to select **Chg Ch0 Topology** and then press the **ENT** to accept the selection. Press **UP/ DOWN** to select speed **(Auto, Point-Point , Loop)** Then press ENT to accept the selection. The confirmation screen will be displayed and then press **ENT** to accept the change.

3.7.6.3 Hard Loop

This setting is effective only under the setting is "Loop topology". When enabled, you can manually set the Loop ID in the range from 0 to 125 and Auto . Press the **UP/ DOWN** to select **Hard Loop** and then press the **ENT** to accept the selection. Then press **UP/ DOWN** to select **Loop ID** and then press the **ENT** to accept the selection.

3.7.7 Ethernet Configuration

Use to configure the Ethernet port of RAID subsystem.

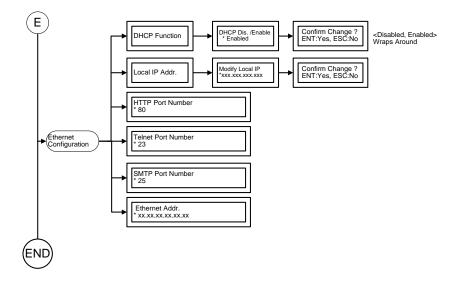

3.7.7.1 DHCP Function

Use to Enable or Disable the DHCP function.

Press the **UP/ DOWN** to select **DHCP Function** and then press the **ENT** to accept the selection. The confirmation screen will be displayed and then press **ENT** to accept the change.

3.7.7.2 Local IP Address

Use to Modify the Local IP Address.

Press the **UP/ DOWN** to select **Local IP Address** and then press the **ENT** to accept the selection. Then enter the number of Local IP Address. The confirmation screen will be displayed and then press **ENT** to accept the change.

3.7.7.3 Ethernet information

Display all information of Ethernet.

press the UP/ DOWN to disply EtherNetAddr, SMTP Port, Telnet Port and HTTP port.

3.7.8 Show System Events

To view the RAID subsystem events, press **ENT** to enter the Main menu. Press **UP/DOWN** key to select the **Show System Events** option, and then press **ENT**. The system events will be displayed. Press **UP/DOWN** to browse all the system events.

3.7.9 Clear all Event Buffers

Use this feature to clear the entire events buffer information.

To clear all event buffers, press **ENT** to enter the main menu. Press **UP/DOWN** to select the **Clear all Event Buffers option**, and then press **ENT**. The confirmation message will be displayed and press the **ENT** to clear all event buffers or **ESC** to abort the action.

3.7.10 Hardware Monitoring Information

To view the RAID subsystem controller's hardware monitor information, press **ENT** to enter the main menu. Press **UP/DOWN** to select the **Hardware Information** option, and then press **ENT**. All hardware information will be displayed. Press **UP/DOWN** to browse all the hardware information.

The Hardware Monitor Information provides the temperature, fan speed (chassis fan) and voltage of the internal RAID subsystem. The temperature items list the current states of the controller board and backplane. All items are also unchangeable. The warning messages will indicate through the LCM, LED and alarm buzzer.

ltem	Warning Condition
Controller Board Temperature	> 60 Celsius
Controller Fan Speed	< 1500 RPM
Power Supply +12V	< 10.8V or > 13.2V
Power Supply +5V	< 4.75V or > 525V
Power Supply +3.3V	< 3.135V or > 3.465V
DDR Supply Voltage +1.8V	< 1.71V or > 1.89V
CPU Core Voltage +1.5V	< 1.425V or > 1.575V
SATA Chip +1.2V	< 1.14V or > 1.26V
HDD temperature	> 55 Celsius

3.7.11 Show System Information

Choose this option to display Main processor, CPU Instruction cache/ and data cache size, firmware version, serial number, controller model name, and the cache memory size. To check the system information, press **ENT** to enter the main menu. Press **UP/DOWN** to select the **Show System Information** option,

and then press **ENT**. All major controller system information will be displayed. Press **UP/DOWN** to browse all the system information.

Chapter 4. Web Browser- Based Configuration

The RAID subsystem web browser-based configuration utility is firmware-based and uses to configure raid sets and volume sets. Use this utility to:

- · Create raid set,
- . Expand raid set,
- · Define volume set,
- · Add physical drive,
- · Modify volume set,
- · Modify RAID level/stripe size,
- . Define pass-through disk drives,
- . Update firmware,
- . Modify system function, and
- · Designate drives as hot spares.

If you need to boot the operating system from a RAID system, you must first create a RAID volume by using front panel touch-control keypad, Web Browser through Ethernet LAN, or VT-100 terminal.

4.1 Firmware-embedded TCP/IP & web browser-based RAID manager (using the controller's 10/100 Ethernet LAN port)

To ensure proper communications between the RAID subsystem and Web browser-based RAID management, Please connect the RAID system Ethernet LAN port to any LAN switch port.

The controller has embedded the TCP/IP & Web Browser-based RAID manager in the firmware. User can remote manage the RAID system without adding any user specific software (platform independent) via standard web browsers directly connected to the 10/100 Ethernet RJ45 LAN port.

To configure External RAID subsystem on a local or remote machine, you need to know its IP Address. The IP address will default show in the LCD screen. Launch your firmware-embedded TCP/IP & Web Browser-based RAID manager by entering http://[IP Address] in the web browser.


Note that you must be logged in as administrator with local admin rights on the remote machine to remotely configure it. The RAID subsystem controller default User Name is "admin" and the Password is "0000".

Note

The RAID subsystem controller default User Name is "**admin**" and the Password is "**0000**". Please change the Password when you first log-in.

4.2 Configuring Raid Sets and Volume Sets

You can configure raid sets and volume sets with VT-100 terminal function using Quick Volume/Raid Setup automatically, or Raid Set/Volume Set Function manually configuration method. Each configuration method requires a different level of user input. The general flow of operations for raid set and volume set configuration is:

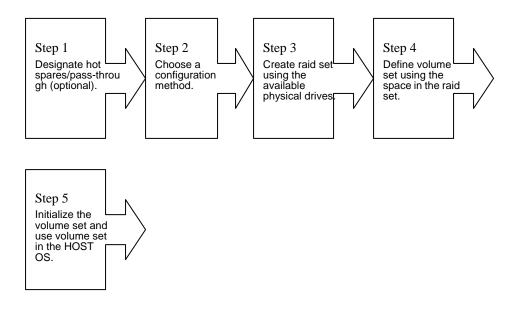

4.3 Designating Drives as Hot Spares

All unused disk drive that is not part of a raid set can be created as a Hot Spare. The Quick Volume/Raid Setup configuration will automatically add the spare disk drive with the raid level for user to select. For the Raid Set Function configuration, user can use the **Create Hot Spare** option to define the hot spare disk drive.

A Hot Spare disk drive can be created when you choose the **Create Hot Spare** option in the Raid Set Function, all unused physical devices connected to the current controller appear: Select the target disk by clicking on the appropriate check box.

Press the **Enter** key to select a disk drive, and press **Yes** in the Create Hot Spare to designate it as a hot spare.

4.4 Using Quick Volume /Raid Setup Configuration

In Quick Volume /Raid Setup Configuration, it collects all drives in the tray and include them in a raid set. The raid set you create is associated with exactly one volume set, and you can modify the default RAID level, stripe size, and capacity of the volume set. Designating Drives as Hot Spares will also show in the raid level selection option. The volume set default settings will be:

Parameter	Setting
Volume Name	Volume Set # 00
Fibre Channel/Fibre ID/Fibre LUN	0/0/0
Cache Mode	Write Back
Tag Queuing	Yes

The default setting values can be changed after configuration is complete.

Follow the steps below to create arrays using Quick Volume /Raid Setup Configuration:



Choose Quick Volume And Raid Setup from the main menu. The available RAID levels and associated Hot Spare for the current volume set drive are displayed.

Step2

RAID Level Try to use drives of the same capacity in a specific array. If you use drives with different capacities in an array, all the drives in the array is treated as though they have the capacity of the *smallest* drive in the array.

The number of physical drives in a specific array determines the RAID levels that can be implemented with the array.

RAID 0 requires one or more physical drives,

RAID 1 requires at least 2 physical drives,

RAID 1+ Spare requires more than 2 physical drives,

RAID 3 requires at least 3 physical drives,

RAID 5 requires at least 3 physical drives,

RAID 6 requires at least 4 physical drives,

RAID 3+ Spare requires at least 4 physical drives, and

RAID 5 + Spare requires at least 4 physical drives.

RAID 6 + Spare requires at least 5 physical drives.

Using the UP/DOWN key to select the RAID for the volume set and presses ENT to confirm it.



Available Capacity Set the capacity size for the volume set. After select RAID level and press ENT.

The selected capacity for the current volume set is displayed. Using the UP/DOWN to create the current volume set capacity size and press ENT to confirm it. The available stripe sizes for the current volume set are displayed.



Select Stripe size This parameter specifies the size of the stripes written to each disk in a RAID 0, 1(0+1), 5or 6 Volume Set. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB. A larger stripe size provides better-read performance, especially if your computer does mostly sequential reads. However, if you are sure that your computer does random read requests more often, choose a small stripe size. Using the UP/DOWN to select stripe size and press ENT to confirm it.



When you are finished defining the volume set, press ENT to confirm the Quick Volume And Raid Set Setup function.



Fast Initialization Press ENT to define fast initialization and ESC to normal initialization. In the Normal Initialization, the initialization proceeds as a background task, the volume set is fully accessible for system reads and writes. The operating system can instantly access to the newly created arrays without requiring a reboot and waiting the initialization complete. In Fast Initialization, the initialization proceeds must be completed before the volume set ready for system accesses.



The controller will begin to Initialize the volume set you have just configured.



If you need to add additional volume set using main menu Create Raid Volume Set function.

4.5 Using Raid Set/Volume Set Function Method

In Raid Set Function, you can use the **Create Raid Set** function to generate the new raid set. In Volume Set Function, you can use the **Create Volume Set** function to generate its associated volume set and parameters.

If the current controller has unused physical devices connected, you can choose the Create Hot Spare option in the Raid Set Function to define a global hot spare. Select this method to configure new raid sets and volume sets. The **Raid Set/Volume Set Function** configuration option allows you to associate volume set with partial and full raid set.



To setup the Hot Spare (option), choose Raid Set Functions from the main menu. Select the Create Hot Spare Disk to set the Hot Spare.



Choose Raid Set Function from the main menu. Select the Create A New Raid Set.



A Select Drive IDE Channel in the next displayed showing the IDE drive connected to the current controller.



Press the UP/ DOWN to select specific physical drives. Press the ENT to associate the selected physical drive with the current raid set.

Try to use drives of the same capacity in a specific raid set. If you use drives with different capacities in an array, all the drives in the array is treated as though they have the capacity of the *smallest* drive in the array.

The number of physical drives in a specific raid set determines the RAID levels that can be implemented with the raid set.

RAID 0 requires one or more physical drives per raid set.

RAID 1 requires at least 2 physical drives per raid set.

RAID 1 + Spare requires at least 3 physical drives per raid set.

RAID 3 requires at least 3 physical drives per raid set.

RAID 5 requires at least 3 physical drives per raid set.

RAID 6 requires at least 4 physical drives per raid set.

RAID 3 + Spare requires at least 4 physical drives per raid set.

RAID 5 + Spare requires at least 4 physical drives per raid set.

Step5

RAID 6 + Spare requires at least 5 physical drives per raid set.

After adding physical drives to the current raid set as desired, press ESC to confirm the Select Drive IDE Channel function.



Press ENT when you are finished creating the current raid set. To continue defining another raid set, repeat step 3. To begin volume set configuration, go to step 7.



Choose Volume Set Functions from the main menu. Select the Create Raid Volume Set and press ENT.



Choose one raid set from the Select Raid Set screen. Press ENT to confirm it.



The volume set attributes screen appears:

The volume set attributes screen shows the volume set default configuration value that is currently being configured. The volume set attributes are:

Large than 2TB (64bit LBA, 4K Block)

The Raid Level,

The Capacity (Not supported via LCD Panel.)

The Stripe Size,

The Fibre HOST/Fibre ID/Fibre LUN/,

The Cache Mode,

The Tagged Queuing,

The Volume Name (number).

All value can be changing by the user. Press the UP/ DOWN to select the attributes. Press the ENT to modify each attribute of the default value. Using the UP/DOWN to select attribute value and press the ENT to accept the default value



After user completes modifying the attribute, press the ESC to enter the Select Capacity for the volume set. Using the UP/DOWN to set the volume set capacity and press ENT to confirm it.



When you are finished defining the volume set, press ENT to confirm the Create function.

Step12

Press ENT to define fast initialization and ESC to normal initialization. The controller will begin to Initialize the volume set you have just configured. If space remains in the raid set, the next volume set can be configured. Repeat steps 7 to 12 to configure another volume set.

Note

User can use this method to examine the existing configuration. Modify volume set configuration method provides the same functions as create volume set configuration method. In volume set function, you can use the modify volume set function to modify the volume set parameters except the capacity size.

4.6 Configuring Raid Sets and Volume Sets

The *web browser start-up* screen will display the current configuration of your RAID subsystem. It displays the Raid Set List, Volume Set List and Physical Disk List. The raid set information, volume set information and drive information can also be viewed by clicking on the RaidSet Hierarchy screen. The current configuration can also be viewed by clicking on RaidSet Hierarchy in the menu.

DRaidSet Functions	Raid Set	Hierarc	hv				
ĐVolumeSet	Itala Sec	THET di C	ily				
unctions	Raid	Sat	IDE	Val	man Sat(Ch/Lum)	Volume State	Canaaita
ĐPhysical Drives	Raiu	set	Channels	YOD	ume Set(Ch/Lun)	volume state	Capacity
DSystem Controls	<u> </u>						
		121					
DInformation	IDE Cha	nnels					
D Information	IDE Cha Channel		ge Cap	acity		Model	
ÐInformation				deberrarie raine	WDC WD800JD-0		
ÐInformation	Channel Ch01	Usa		GB	WDC WD800JD-0 WDC WD800JD-0	0HKA0	
Ð Information	Channel Ch01 Ch02	Usa Hot Spa	are 80.00	GB GB		0HKA0 0HKA0	
ÐInformation	Channel Ch01 Ch02 Ch03	Usa Hot Spa Free	are 80.00	GB GB GB	WDC WD800JD-0	OHKAO OHKAO OHKAO	
ð Information	Channel Ch01 Ch02 Ch03 Ch04	Usa Hot Spa Free Free	are 80.00 80.00 80.00	GB GB GB GB	WDC WD800JD-0 WDC WD800JD-0	OHKAO OHKAO OHKAO OHKAO	
ÐInformation	Channel Ch01 Ch02 Ch03 Ch04 Ch04 Ch05	Usa Hot Spa Free Free Free	re 80.00 80.00 80.00 80.00	3B 3B 3B 3B 3B 3B	WDC WD800JD-0 WDC WD800JD-0 WDC WD800JD-0	OHKAO OHKAO OHKAO OHKAO OHKAO	

To display raid set information, move the mouse cursor to the desired raid set number, then click it. The raid set Information will show in the screen.

To display volume set information, move the mouse cursor to the desired Volume Set number, then click it. The volume set Information will show in the screen.

To display drive information, move the mouse cursor to the desired physical drive number, then click it. The drive Information will show in the screen.

4.6.1 Main Menu

The main menu shows all function that enables the customer to execute actions by clicking on the appropriate link.

Individual Category	Description
Quick Function	Create a default configuration, which is based on the number of physical disk installed; it can modify the volume set Capacity, Raid Level, and Stripe Size.
Raid Set Functions	Create a customized raid set
Volume Set Functions	Create customized volume sets and modify the existed volume sets parameter.
Physical Drives	Create pass through disks and modify the existed pass through drives parameter. It also provides the function to identify the respect disk drive.
System Controls	Setting the raid system configurations

Information	View the controller and hardware monitor information.
	The Raid Set Hierarchy can also view through the
	RaidSet Hierarchy item.

4.7 Quick Create

RaidSet Functions	Quick Create Raid/Volume S	et	-
0 VolumeSet unctions	Total Number Of Disks	14	
	Select Raid Level	Raid 5 + Spare 💌	
Physical Drives	Maximum Capacity Allowed	960 GB	
OSystem Controls	Select Capacity	960 GB	
Information	Volume Initialization Mode	Foreground Initialization 💌	
Dimormation	Select Stripe Size	64 KBytes	

The number of physical drives in the raid subsystem determines the RAID levels that can be implemented with the raid set. You can create a raid set associated with exactly one volume set. The user can change the raid level, stripe size, and capacity. A hot spare option is also created depending upon the existing configuration.

Tick on the **Confirm The Operation** and click on the **Submit** button in the Quick Create screen, the raid set and volume set will start to initialize.

Note

In Quick Create your volume set is automatically configured based on the number of disks in your system. Use the Raid Set Function and Volume Set Function if you prefer to customize your system.

4.8 Raid Set Functions

Use the Raid Set Function and Volume Set Function if you prefer to customize your system. User manual configuration can full control of the raid set setting, but it will take longer to complete than the Quick Volume/Raid Setup

configuration. Select the Raid Set Function to manually configure the raid set for the first time or deletes existing raid set and reconfigures the raid set. A raid set is a group of disks containing one or more volume sets.

4.8.1 Create Raid Set

dSet Functions e Raid Set Raid set	Select	The IDE I	Orives For	RAID Set
d Raid Set te Raid Set	Select	Channel	Capacity	Model
Hot Spare		IDE Ch02	80.0GB	WDC WD800JD-00HKA0
<u>Hot Spare</u> Raid Set		IDE Ch03	80.0GB	WDC WD800JD-00HKA0
Raid Set		IDE Ch04	80.0GB	WDC WD800JD-00HKA0
umeSet		IDE Ch05	80.0GB	WDC WD800JD-00HKA0
ons		IDE Ch06	80.0GB	WDC WD800JD-00HKA0
sical Drives		IDE Ch07	80.0GB	WDC WD800JD-00HKA0
1		IDE Ch08	80.0GB	WDC WD800JD-00HKA0
em Controls		IDE Ch09	80.0GB	WDC WD800JD-00HKA0
rmation		IDE Ch10	80.0GB	WDC WD800JD-00HKA0
		IDE Ch11	80.0GB	WDC WD800JD-00HKA0
		IDE Ch12	80.0GB	WDC WD800JD-00HKA0
		TDE (%13	20 OGR	

To create a raid set, click on the **Delete Raid Set** link. A **Select The SATA Drive For RAID Set** screen is displayed showing the IDE drive connected to the current controller. Click on the selected physical drives with the current raid set. Enter 1 to 15 alphanumeric characters to define a unique identifier for a raid set. The default raid set name will always appear as Raid Set. #.

Tick on the **Confirm The Operation** and click on the **Submit** button in the screen, the raid set will start to initialize.

4.8.2 Delete Raid Set

To delete a raid set, click on the Create Raid Set link. A *Select The RAID SET To Delete screen* is displayed showing all raid set existing in the current controller. Click the raid set number you which to delete in the select column to delete screen.

Tick on the Confirm The Operation and click on the Submit button in the screen to delete it.

	Select	The Raid Set T	o Delete	
et re	Select	Raid Set Name	Member Disks	Capacity
re	c	Raid Set # 00	2	160.0GB
	Submit	Reset		
ives	Submit	Reset		
ives	Submit	Reset		

4.8.3 Expand Raid Set

Use this option to expand a raid set, when a disk is added to your system. This function is active when at least one drive is available.

	Select 1	The Raid Set Fo	or Raid Expan	sion
et Set are	Select	Raid Set Name	Member Disks	Capacity
re	•	Raid Set # 00	2	160.0GB
s				

To expand a raid set, click on the **Expand Raid Set** link. Select the target raid set, which you want to expand it.

Tick on the available disk and Confirm The Operation, and then click on the

Submit button in the screen to add disks to the raid set.

4.8.4 Activate Incomplete Raid Set

When one of the disk drive is removed in power off state, the raid set state will change to Incomplete State. If user wants to continue to work, when the RAID subsystem is power on. User can use the Activate Raid Set option to active the raid set. After user complete the function, the Raid State will change to Degraded Mode.

To activate the incomplete the raid set, click on the Activate Raid Set link. A "Select The RAID SET To Activate" screen is displayed showing all raid set existing in the current controller. Click the raid set number you which to activate in the select column.

et	Select The Raid Set To Activate						
Set Set pare	Select	Raid Set Name	Member Disks	Capacity			
pare	e	Raid Set # 00	2	160.0GB			
Drives							
Drives Iontrols							

Click on the **Submit** button in the screen to activate the raid set that has removed one of disk drive in the power off state. The RAID subsystem will continue to work in degraded mode.

4.8.5 Create Hot Spare

Set Functions					
Raid Set	Select	The IDE I	Drives For	Hot Spare	
<u>Raid set</u> 1 Raid Set					
e Raid Set	Select	Channel	Capacity	Model	
Hot Spare		IDE Ch04	80.0GB	WDC WD800JD-00HKA0	
Hot Spare		IDE Ch05	80.0GB	WDC WD800JD-00HKA0	
Raid Set		IDE Ch06	80.0GB	WDC WD800JD-00HKA0	
⊕VolumeSet		IDE Ch07	80.0GB	WDC WD800JD-00HKA0	
ons		IDE Ch08	80.0GB	WDC WD800JD-00HKA0	
sical Drives		IDE Ch09	80.0GB	WDC WD800JD-00HKA0	
		IDE Ch10	80.0GB	WDC WD800JD-00HKA0	
tem Controls		IDE Ch11	80.0GB	WDC WD800JD-00HKA0	
rmation		IDE Ch12	80.0GB	WDC WD800JD-00HKA0	
		IDE Ch13	80.0GB	WDC WD800JD-00HKA0	
		IDE Ch14	80.0GB	WDC WD800JD-00HKA0	
		TDF C%15	20 OGB	WDC WD800ID-00HK &0	

When you choose the **Create Hot Spare** option in the Raid Set Function, all unused physical devices connected to the current controller appear: Select the target disk by clicking on the appropriate check box. Tick on the **Confirm The Operation**, and click on the **Submit** button in the screen to create the hot spares.

The create Hot Spare option gives you the ability to define a global hot spare.

4.8.6 Delete Hot Spare

Select the target Hot Spare disk to delete by clicking on the appropriate check box.

Tick on the **Confirm The Operation**, and click on the **Submit** button in the screen to delete the hot spares.

	The Hot S	pare Driv	e To Delete	
et Set are	Channel	Capacity	Model	
et 🗆	IDE Ch01	80.0GB	WDC WD800JD-00HKA0	
rives Subm	nfirm The C	peration		
ntrols				

Offline Raid Set

This function allows the user to move the whole created Raid Set to another Alnico RAID subsystem without turning off power. "Active Raid Set" can resume the offline-Raid Set to online status.

Select	Raid Set Name	Member Disks	Raid State	Capacity
c	Raid Set # 00	1/1	Normal	160.0GB

4.9 Volume Set Function

A volume set is seen by the host system as a single logical device. It is organized in a RAID level with one or more physical disks. RAID level refers to the level of data performance and protection of a volume set. A volume set capacity can consume all or a portion of the disk capacity available in a raid set. Multiple volume sets can exist on a group of disks in a raid set. Additional volume sets created in a specified raid set will reside on all the physical disks in the raid set. Thus each volume set on the raid set will have its data spread evenly across all the disks in the raid set.

4.9.1 Create Volume Set

The following is the volume set features for the Alnico RAID

- 1. Volume sets of different RAID levels may coexist on the same raid set.
- 2. Up to 16 volume sets can be created in a raid set.
- 3. The maximum addressable size of a single volume set can be exceeded than 2 TB.

To create volume set from raid set system, move the cursor bar to the main menu and click on the **Create Volume Set** link. The **Select The Raid Set To Create On It** screen will show all raid set number. Tick on a raid set number that you want to create and then **click** on the Submit button.

The new create volume set allows user to select the Volume name, capacity, RAID level, strip size, Fibre ID/LUN, Cache mode and tag queuing.

R	**
Enter Volume Attribute On Raid Set #	00
Volume Name	AXS-8560-VOL#00
Member Disks	6
Volume Raid Level	Raid 5 💌
Max Capacity Allowed	2000 GB
Select Volume Capacity	2000 GB
Greater Two TB Volume Support	No 🛩
Volume Initialization Mode	64bit LBA
Volume Stripe Size	4K Block
Volume Cache Mode	Write Back
Tagged Command Queuing	Enabled 💌
Fibre ChannelLUN Base:LUN	0
-	
Confirm The Operation	
	Member Disks Vohme Raid Level Max Capacity Allowed Select Vohme Capacity Greater Two TB Vohme Support Vohme Initialization Mode Vohme Stripe Size Vohme Cache Mode Tagged Command Queuing Fibre Channel LUN Base LUN

4.9.1.1 Volume Name:

The default volume name will always appear as Volume Set. #. You can rename the volume set name providing it does not exceed the 15 characters limit.

4.9.1.2 Capacity:

The maximum volume size is default in the first setting. Enter the appropriate volume size to fit your application.

4.9.1.3 Raid Level:

Set the RAID level for the Volume Set. Highlight Raid Level and press Enter.

The available RAID levels for the current Volume Set are displayed. Select a RAID level and press Enter to confirm.

4.9.1.4 Strip Size:

This parameter sets the size of the stripe written to each disk in a RAID 0, 1, 0+1, 5 or 6 logical drive. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

A larger stripe size produces better-read performance, especially if your computer does mostly sequential reads. However, if you are sure that your computer does random reads more often, select a small stripe size

Note		
RAID level 3	can't modify strip size.	

4.9.1.5 Greater Two TB Volume Support

When the RAID set capacity of per volume is over 2TB, a special selection will appear on the GUI, please make a choice according to your O.S.:

64bit LBA: for Linux, Unix Windows 2003 SP1 (or later) and etc...

4K Block: Windows 2000, XP, enlarge block size from 512Byte to 4K.No. : Disable greater than 2TB feature.

4.9.1.6 Volume initiation Mode

This parameter sets the initiation mode of selected volume set,

Foreground Initialization is the fast way to initial of the selected volume

set.

Background Initialization is the normal way to initial of the selected volume set.

No Init is special selection to rescue the volume. RAID system initiate the selected volume set without writing any data and parity bit into the HDDs.

4.9.1.7 Cache Mode:

The RAID subsystem supports Write-Through Cache and Write-Back Cache.

4.9.1.8 Tagged Command Queuing:

The Enabled option is useful for enhancing overall system performance under multi-tasking operating systems. The Command Tag (Drive Channel) function

controls the SCSI command tag queuing support for each drive channel. This function should normally remain enabled. Disable this function only when using older SCSI drives that do not support command tag queuing

4.9.1.9 Fibre Channel/LUN Base/LUN

Fibre Channel: The RAID subsystem supports channel 0,1 and 0&1 cluster option

RaidSet Functions	Volume Name	AL-7161F-VOL#00
olumeSet	Member Disks	2
tions te Volume Set	Volume Raid Level	Raid 1 •
e Volume Set	Max Capacity Allowed	80 GB
<u>lify Volume Set</u> ck Volume Set	Select Volume Capacity	80 GB
Volume Set	Volume Initialization Mode	Foreground Initialization
<u>ne Set Host Filters</u>	Volume Stripe Size	64 KBytes
vsical Drives	Volume Cache Mode	Write Back
nysical Drives	Tagged Command Queuing	Enabled 💌
System Controls	Fibre Channel:LUN Base:LUN	0 •: 0 •: 0 •
Information	Confirm The Operation	

LUN base: Each fibre device attached to the Fibre card, as well as the card itself, must be assigned a unique fibre ID number. A Fibre channel can connect up to 128(0 to 127) devices. The RAID subsystem is as a large Fibre device. We should assign an LUN base from a list of Fibre LUNs

Tagged Command Queuing	Enabled	*			
Fibre ChametLUN BaseLUN	0	*	0	٣	0.00
Confirm The Operation			8		
Sutenit (Reset			24 32 40 45 66 47 2		
			32 405 664 72 008 96 1012 0	8	

Fibre LUN: Each Fibre LUN base can support up to 8 LUNs. Most Fibre Channel host adapter treats each LUN like a Fibre disk4



4.9.2 Delete Volume Set

To delete Volume from raid set system function, move the cursor bar to the main menu and click on the **Delete Volume Set** link. The **Select The Raid Set To Delete** screen will show all raid set number. **Tick** on a raid set number and the Confirm The Operation and then **click** on the Submit button to show all volume set item in the selected raid set. **Tick** on a volume set number and the Confirm The Operation and then **click** on the **Submit** button to delete the volume set.

	Salast'	The Volume Set T	a Dalata	
eSet	Select .	the volume set i	o Delete	
s olume Set olume Set	Select	Volume Set Name	On Raid Set	Capacity
olume Set	¢	AL-7161F- VOL#00	Raid Set # 00	80.0GB
ume Set Set Host Filters cal Drives	Con Submit	firm The Operation	(
m Controls				

4.9.3 Modify Volume Set

To modify a volume set from a raid set:

(1). Click on the **Modify Volume Set** link.

(2). Tick on the volume set from the list that you wish to modify. Click on the **Submit** button.

The following screen appears.

Use this option to modify volume set configuration. To modify volume set attribute values from raid set system function, move the cursor bar to the volume set attribute menu and click on it. The modify value screen appears. Move the cursor bar to an attribute item, and then click on the attribute to modify the value. After you complete the modification, tick on the **Confirm The Operation** and click on the **Submit** button to complete the action. User can modify all values except the capacity.

Select	The Volume Set F	or Modification	
t Select	Volume Set Name	On Raid Set	Capacity
•	AL-7161F- VOL#00	Raid Set # 00	80.0GB
Filters			

4.9.3.1 Volume Set Migration

Migrating occurs when a volume set is migrating from one RAID level to another, a volume set strip size changes, or when a disk is added to a raid set. Migration status is displayed in the volume status area of the RaidSet Hierarchy screen when one RAID level to another, a Volume set strip size changes or when a disk is added to a raid set.

Volume Name	AL-7161F-VOL#00
Max Capacity Allowed	160.0 GB
Volume Set Volume Capacity	160.0 GB
Volume Initialization Mode	Foreground Initialization 💌
olume Set ume Set Volume Raid Level	Raid 0 💌
Volume Stripe Size	64 KBytes
Set Host Filters Volume Cache Mode	Write Back
cal Drives Tagged Command Queuing	Enabled 💌
m Controls Fibre Channel:LUN Base:L	

4.9.4 Check Volume Set

To check a volume set from a raid set:

(1). Click on the Check Volume Set link.

(2). **Tick** on the volume set from the list that you wish to check. Tick on Confirm The Operation and click on the **Submit** button.

Use this option to verify the correctness pf the redundant data in a volume set. For example, in a system with dedicated parity, volume set check means computing the parity of the data disk drives and comparing the results to the contents of the dedicated parity disk drive. The checking percentage can also be viewed by clicking on RaidSet Hierarchy in the main menu.

let		o Be Checked	
ume Set Selec	t Volume Set Name	On Raid Set	Capacity
lume Set ©	AL-7161F- VOL#00	Raid Set # 00	160.0GB
t Host Filters	nfirm The Operation		
and the second sec			
Controls			

4.9.5 Scheduled Volume Checking (Enhanced Check Volume Set)

Also exclusively available on Alnico 7, "Scheduled Volume Checking" is designed to provide the Alnico 7 users with a "volume scrub (remap the bad blocks if there are) and parity checking function that, unlike Alnico 6 Series, can be scheduled by the users themselves. The users can set "when" to get Alnico 7 automatically start checking parity and scrubbing blocks. Additionally, Scheduled Volume Checking will be auto terminated or not be auto invoked as long as there is I/O access going on back and forth between Alnico 7 and the server. As soon as I/O access between the server and Alnico 7 is stopped (the server gets into the so-called System Idle Status), Scheduled Volume Checking will be auto invoked again when the time of no I/O access between ALNICO 7 SERIES and the Server is over the set System Idle Time Threshold. Presently only RAID 3/5/6 can support "Scheduled Volume Checking." Besides, "Scheduled Volume Checking" allows multiple volumes to be checked in turn.

	@Quick Function	Alnico AL-7161F
Create Volume Set Delete Volume Set Modify Volume Set Check Volume Set Schedule Volume Check Stop Volume Set Check Volume Set Host Filters		
Delete Volume Set Modify Volume Set Check Volume Set Schedule Volume Check Stop Volume Set Check Volume Set Host Filters ØPhysical Drives DSystem Config Fibre Channel Config EtherNet Config ShMP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password	LI I GAGARGERE A GALCEROARD	Scheduled Volume Checking
Modify Volume Set Check Volume Set Schedule Y olume Check Stop Volume Set Check Volume Set Host Filters		
Check Volume Set Schedule Volume Check Stop Volume Set Check Volume Set Host Filters		Scheduler : Disabled
Schedule Volume Check Stop Volume Set Check Volume Set Host Filters Physical Drives Confirm The Operation System Config Fibre Channel Config EtherNet Config Sther Volume Set Event Generate Test Event Clear Event Buffer Modify Password		Charling After Center Life , No.
Stop Volume Set Check Volume Set Host Filters		
Volume Set Host Filters		Scrub Bad Block If Bad Block Is Found, Assume Parity Data Is Good.
		Re-compute Parity If Parity Error Is Found, Assume Data Is Good.
System Config System Config Fibre Channel Config EtherNet Config SNMP Configuration NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password		
System Config Fibre Channel Config EtherNet Config Alert By Mail Config SNMP Configuration NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password	⊕Physical Drives	Confirm The Operation
System Config Fibre Channel Config EtherNet Config Alert By Mail Config SNMP Configuration NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password	System Controls	Submit Decet
EtherNet Config Alert By Mail Config SNMP Configuration NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password	System Config	Subline Reset
Alert By Mail Config SNMP Configuration NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password		
SNMP Configuration NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password		
NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password		
View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password		
Generate Test Event Clear Event Buffer Modify Password		
Clear Event Buffer Modify Password		
Modify Password		
<u>Upgrade Firmware</u>		
Restart Controller		

4.9.6 Stop VolumeSet Check

Use this option to stop the Check Volume Set function.

⊕Quick Function	Alnico AL-7161F	
UvolumeSet Functions Create Volume Set Delete Volume Set Modify Volume Set Check Volume Set Check Volume Set Host Filters DPhysical Drives Dystem Controls DIMPORTATION	Do You Want To Stop All Volume Consistency Checking? Confirm The Operation Submit Reset	

4.10 Physical Drive

Choose this option from the Main Menu to select a physical disk and to perform the operations listed below.

4.10.1 Create Pass-Through Disk

To create pass-through disk, move the mouse cursor to the main menu and click on the **Create Pass-Through** link. The relative setting function screen appears.

Disk is no controlled by the internal RAID subsystem firmware and thus cannot be a part of a volume set. The disk is available to the operating system as an individual disk. It is typically used on a system where the operating system is on a disk not controlled by the RAID firmware. User can also select the cache mode, Tagged Command Queuing and Fibre channel/Fibre_ID/Fibre_LUN for this volume.

4.10.2 Modify Pass-Through Disk

Use this option to modify the Pass-Through Disk Attribute. User can modify the cache mode, Tagged Command Queuing and Fibre channel / Fibre_ID / Fibre_LUN on an existed pass through disk.

To modify the pass-through drive attribute from the pass-through drive pool, move the mouse cursor bar to click on **Modify Pass-Through** link. The Select The Pass Through Disk For Modification screen appears tick on the Pass-Through Disk from the pass-through drive pool and click on the **Submit** button to select drive.

The Enter Pass-Through Disk Attribute screen appears, modify the drive attribute values, as you want.

After you complete the selection, tick on the **Confirm The Operation** and click on the **Submit** button to complete the selection action.

4.10.3 Delete Pass-Through Disk

To delete pass-through drive from the pass-through drive pool, move the mouse cursor bar to the main menus and click on **Delete Pass Through** link. After you complete the selection, tick on the **Confirm The Operation** and click on the **Submit** button to complete the delete action.

4.10.4 Identify Selected Drive

To prevent removing the wrong drive, the selected disk LED will light for physically locating the selected disk when the *Identify Selected Drive* is selected.

To identify the selected drive from the drives pool, move the mouse cursor bar to

click on **Identify Selected Drive** link. The Select The SATA Device For identification screen appears tick on the SATA device from the drives pool and Flash method. After completing the selection, click on the **Submit** button to identify selected drive.

RaidSet Functions	Select	Channel	Capacity	Model
VolumeSet	•	IDE Ch01	80.0GB	WDC WD800JD-00HKA0
ctions	C	IDE Ch02	80.0GB	WDC WD800JD-00HKA0
hysical Drives	0	IDE Ch03	80.0GB	WDC WD800JD-00HKA0
eate Pass Through	0	IDE Ch04	80.0GB	WDC WD800JD-00HKA0
dify Pass Through ete Pass Through	C	IDE Ch05	80.0GB	WDC WD800JD-00HKA0
ntify Drive	c	IDE Ch06	80.0GB	WDC WD800JD-00HKA0
	C	IDE Ch07	80.0GB	WDC WD800JD-00HKA0
System Controls	C	IDE Ch08	80.0GB	WDC WD800JD-00HKA0
Information	0	IDE Ch09	80.0GB	WDC WD800JD-00HKA0
	C	IDE Ch10	80.0GB	WDC WD800JD-00HKA0
	0	IDE Ch11	80.0GB	WDC WD800JD-00HKA0
	0	IDE Ch12	80.0GB	WDC WD800JD-00HKA0
	C	IDE Ch13	80.0GB	WDC WD800JD-00HKA0
	C	IDE Ch14	80.0GB	WDC WD800JD-00HKA0

4.11 System Controls

Quick Function	Alnico AL-7161F
□RaidSet Functions	System Beeper Setting Disabled
□VolumeSet Functions	Background Task Priority Low(20%)
runcuons	Terminal Port Configuration Baud Rate 115200 💌 , Stop Bits 1 💌
□Physical Drives	JBOD/RAID Configuration RAID
□System Controls	Max SATA Mode Supported SATA300+NCQ -
System Config	HDD Read Ahead Cache Enabled
Fibre Channel Config EtherNet Config	Stagger Power On Control
Alert By Mail Config	Spin Down Idle HDD (Minutes) 3
<u>SNMP Configuration</u> NTP Configuration	Disk Write Cache Mode
View Events/Mute	Disk Capacity Truncation Mode 5
<u>Beeper</u> Generate Test Event Clear Event Buffer	10 10 15 20
<u>Modify Password</u> <u>Upgrade Firmware</u> Restart Controller	Submit Reset 40 60

4.11.1 System Configuration

To set the raid system function, move the cursor bar to the main menu and click on the **System Configuration** link. The **System Configuration** menu will show all items. Move the cursor bar to an item, then press **Enter** key to select the desired function.

4.11.1.1 System Beeper Setting:

The Alert Beeper function item is used to Disabled or Enable the RAID subsystem controller alarm tone generator.

4.11.1.2 Back Ground Task priority:

The Back Ground Task priority is a relative indication of how much time the controller devotes to a rebuild operation. The RAID subsystem allows user to choose the rebuild priority (Low, Normal, High) to balance volume set access and rebuild tasks appropriately. For high array performance, specify a Low value.

4.11.1.3 Terminal Port Configuration:

Speed setting values are 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200.

Stop Bits values are 1 bit and 2 bits.

Note

Parity value is fixed at None. Data Bits value is fixed at 8 bits. .

4.11.1.4 JBOD /RAID Mode Configuration

To set or change the RAID Mode of RAID subsystem, press the **UP/ DOWN** to select **JBOD/RAID Mode Configuration** and then press the **ENT** to accept the selection. The RAID mode selection screen appears and uses the **UP/DOWN** to set RAID mode. After completing the modification, the confirmation screen will be displayed and then press **ENT** to accept the function.

4.11.1.5 Max SATA-Mode Support

Alnico supports SATA-II (3.0Gps) and NCQ (Native command queuing), user can use this option to change the speed of SATA interface according to the HDD speed. There are 4 selections : SATA 150, SATA150+NCQ, SATA 300, SATA 300+NCQ.

To set or change the configuration, press the UP/ DOWN to select SATA-Mode

and then press the **ENT** to accept the selection.

4.11.1.6 HDD Read Ahead Cache Mode

Use to Enable or disable the "read ahead cache" in HDD. If you are using Maxtor HDD, please be sure to disable " Read Ahead Cach" or select the "Disabled Maxtor". To set or change the configuration, press the UP/ DOWN to select mode and then press the ENT to accept the selection.

411.1.7 Stagger Power On Control

A method is disclosed to reduce power consumption of a load. Instead of directly load to devices via switch on each Hard Disk one by one ordinal. The setting can be from 0.4 second to 6.0 second.

To set or change the configuration, press the **UP/ DOWN** to select **value** and then press the **ENT** to accept the selection.

4.11.1.8 Spin Down

Exclusively available on AL-7161F and AL-7121F, "Spin Down" is mainly designed to save the power consumption taken by the idle hard drives. When Spin Down is invoked, the SMART status of each hard drive will be marked as "N/A" to signify the hard drive has been at non-spin mode. As soon as data access is requested again, all the idle hard drives will be automatically waken up by the RAID controller.

4.11.1.9 Disk Write Cache Mode

Disk cache can be turned off to prevent data lost, turned on to increase the performance of the machine. The following is the reason why a user might wants to turn off the cache. In case of power failure, the data stored in the disk cache waiting to be process might be lost. The disadvantage to turn off the disk cache is that performance will decrease dramatically.

Auto : Disk cache's setting will according to the installation of battery back up. When battery back up installed, Disk cache is disable. No battery back up installed, Disk cache is enable.

To set or change the configuration, press the **UP/ DOWN** to select "**Disk Write Cache Mode**" and then press the **ENT** to accept the selection.

4.11.1.10 Disk Capacity Truncation Mode

This function is used for cutting down the reminder or decimal to allow the storage space to be as a whole number.

For example:

It is rarely that the actual size of the Hard Drive is a whole number. Let's take a 40GB HDD for example, the actual size read by the controller maybe

40.55GB. This function "capacity truncation" can be used to trim down the capacity to 40.00 GB. This function is useful because in the future the 40.55HDD might go bad, and the user can't locate another 40GB drive which contains 40.55GB in the actual capacity, then that particular user will have to buy another drive with bigger capacity to rebuild the raid volume.

To set or change the configuration, press the UP/ DOWN to select "Disk Capacity Truncation Mode" and then press the ENT to accept the selection.

VolumeSet nctions	A A A A	lnico AL-7161F
Physical Drives	Fibre Channel Configuration	s (WWNN:20-00-00-04-d9-60-88-36)
System Controls stem Config	Channel 0 WWPN:21-00-00-0)4-d9-60-88-35
ore Channel Config herNet Config	Channel 0 Speed	Auto (Current Speed : Unknown)
ert By Mail Config	Channel 0 Topology	Auto 💌 (Current Topology : None)
IMP Configuration IP Configuration	Channel 0 Hard Loop ID	0 Disabled 💌
ew Events/Mute eper	Channel 1 WWPN:21-00-00-0	04-d9-60-88-36
nerate Test Event	Channel 1 Speed	Auto 💌 (Current Speed : Unknown)
ear Event Buffer odify Password	Channel 1 Topology	Auto 💌 (Current Topology : None)
grade Firmware	Channel 1 Hard Loop ID	Disabled -

4.11.2 Fibre Channel Config

4.11.2.1 Channel Speed

Each FC Channel can be configured as 1 Gbps/sec, 2 Gbps/sec, 4Gbps/sec or use "Auto" option for auto speed negotiation between 1G/2G/4G. The controller default is "Auto", which should be adequate under most conditions. The Channel Speed setting takes effect for the next connection. That means a link down or bus reset should be applied for the change to take effect. The current connection speed is shown at end of the row. You have to click the "Fibre Channel Config" link again from the Menu Frame to refresh display of current speed.

4.11.2.2 Channel Topology

Each FC Channel can be configured as Point-to-Point, Loop or Auto Topology. The controller default is "Auto" topology, which takes precedence of Loop topology. Firmware restart is needed for any topology change to take effect. The current connection topology is shown at end of the row. You have to click the "Fibre Channel Config" link again from the Menu Frame to refresh display of current topology. Note that current topology is shown as "None" when no successful connection is made for the channel.

4.11.2.3 Hard Loop ID

This setting is effective only under Loop topology. When enabled, you can manually set the Loop ID in the range from 0 to 125. Make sure this hard assigned ID is not conflicted with any other devices on the same loop; otherwise the channel will be disabled. It is a good practical to disable the hard loop ID and let the loop itself auto arrange the Loop ID.

4.11.3 EtherNet Config

Use this feature to set the controller Ethernet port configuration. Customer doesn't need to create a reserved space on the arrays before the Ethernet port and HTTP service working. The firmware-embedded Web Browser-based RAID manager can access it from any standard internet browser or from any host computer either directly connected or via a LAN or WAN with no software or patches required.

DHCP (Dynamic Host Configuration Protocol) is a protocol that lets network administrators manage centrally and automate the assignment of IP (Internet Protocol) configurations on a computer network. When using the Internet's set of protocols (TCP/IP), in order for a computer system to communicate to another computer system it needs a unique IP address. Without DHCP, the IP address must be entered manually at each computer system. DHCP lets a network administrator supervise and distribute IP addresses from a central point. The purpose of DHCP is to provide the automatic (dynamic) allocation of IP client configurations for a specific time period (called a lease period) and to eliminate the work necessary to administer a large IP network.

To configure the raid controller EtherNet port, move the cursor bar to the main menu and click on the **System Controls** link. The **System Controls** menu will show all items. Move the cursor bar to the **EtherNet Config** item, then press **Enter** key to select the desired function.

olumeSet ctions	Alnico AL				
hysical Drives	Ether Net Configurations				
em Config	DHCP Function	Disabl	ed 💌		
e Channel Config	Local IP Address (Used If DHCP Disabled)	192	168	.[1	. 100
rNet Config t By Mail Config	Gateway IP Address (Used If DHCP Disabled)	192	168	.1	.[1
<u>MP Configuration</u> Configuration	Subnet Mask (Used If DHCP Disabled)	255	255	255	.0
v Events/Mute	HTTP Port Number (71688191 Is Reserved)	80			
er rate Test Event	Telnet Port Number (71688191 Is Reserved)	23			
Event Buffer	SMTP Port Number (71688191 Is Reserved)	25			
<u>iy Password</u> ide Firmware	Current IP Address	192.16	58.1.100		
rt Controller	Current Gateway IP Address	192.16	58.1.1		
formation	Current Subnet Mask	255.25	55.255.0		
TOTHAUOK	Ether Net MAC Address	00.04.	D9.60.88	3.34	

4.11.4 Alert By Mail Config

To configure the raid controller email function, move the cursor bar to the main menu and click on the **System Controls** link. The **System Controls** menu will show all items. Move the cursor bar to the **Alert By Mail Config** item, then press **Enter** key to select the desired function. This function can only set by the web-based configuration.

The firmware contains SMTP manager monitors all system events and user can select either single or multiple user notifications to be sent via ' Plain English' e-mails with no software required.

⊕VolumeSet Functions	at a Stop	Alnico AL-7161F
	SMTP Server Configura	tion
System Controls System Config Fibre Channel Config	SMTP Server IP Address	
EtherNet Config Alert By Mail Config SNMP Configuration	Mail Address Configurat	tions
NTP Configuration View Events/Mute	Sender Name :	Mail Address :
Beeper Generate Test Event Clear Event Buffer Modify Password	Account :	Password :
Upgrade Firmware Restart Controller	MailTo Name1 :	Mail Address :
⊕Information	MailTo Name2 :	Mail Address :

4.11.5 SNMP Configuration

hysical Drives	SNMP Trap Cont	figurations					
ystem Controls							
em Config	SNMP Trap IP Ad	idress #1	0 0	. 0	. 0	Port#	162
e Channel Config rNet Config	SNMP Trap IP Ad	ldress #2	0.0	. 0	. 0	Port#	162
t By Mail Config	SNMP Trap IP Ad	ldress #3	0.0	. 0	. 0	Port#	162
<u>w Events/Mute</u> <u>per</u> erate Test Event ar Event Buffer dify Password rade Firmware rade Firmware tart Controller	Community sysContact.0 sysName.0 sysLocation.0						

4.11.6 NTP Configuration

Use to Setup the IP address of NTP server and time information.

Physical Drives	NTP Server Configurations	
ystem Controls tem Config	NTP Server IP Address #1 0 0 0 0	
<u>e Channel Config</u> erNet Config	NTP Server IP Address #2 0 0 0 0	
MP Configuration <u>P Configuration</u> w Events/Mute	Time Zone Configuration	
	Time Zone : (GMT-12:00)International Date Line West	
<u>per</u> erate Test Event	Time Zone : (GMT-12:00)International Date Line West Automatic Daylight Saving : Enabled	
<u>per</u> erate Test Event ar Event Buffer		
<u>per</u> erate Test Event	Automatic Daylight Saving : Enabled 💌	

4.11.7 View Events/ Mute Beeper

To view the RAID subsystem controller's information, move the mouse cursor to the main menu and click on the **View Events/Mute Beeper** link. The Raid Subsystem events Information screen appears.

Choose this option to view the system events information: Timer, Device, Event type, Elapse Time and Errors. The RAID system does not built the real time clock. The Time information is the relative time from the RAID subsystem power on.

ÐPhysical Drives	System Event:	s Information			
System Controls ystem Config	Time	Device	Event Type	Elapse Time	Errors
bre Channel Config herNet Config	2006-2-28 11:11:2	AL-7161F- VOL#00	Create Volume		
ert By Mail Config IMP Configuration	2006-2-28 11:10:54	AL-7161F- VOL#00	Complete Init	000:00:56	
IP Configuration ew Events/Mute	2006-2-28 11:10:54	AL-7161F- VOL#00	Delete Volume		
merate Test Event ear Event Buffer	2006-2-28 11:9:58	AL-7161F- VOL#00	Start Initialize		
odify Password grade Firmware	2006-2-28 11:9:58	AL-7161F- VOL#00	Create Volume		
Information	2006-2-28 11:6:46	Raid Set # 00	Create RaidSet		
	 ▼ 2006-2-28 11:4:47 	Raid Set # 00	Delete RaidSet		

4.11.8 Generate Test Event

Use this feature to generate a test event to confirm the setting of "Alert By Mail Config".

4.11.9 Clear Events Buffer

Use this feature to clear the entire events buffer information.

4.11.10 Modify Password

To set or change the RAID subsystem password, move the mouse cursor to **Raid System Function** screen, and click on the **Change Password** link. The Modify System Password screen appears.

The password option allows user to set or clear the raid subsystem's password protection feature. Once the password has been set, the user can only monitor and configure the raid subsystem by providing the correct password.

The password is used to protect the internal RAID subsystem from unauthorized entry. The controller will check the password only when entering

the Main menu from the initial screen. The RAID subsystem will automatically go back to the initial screen when it does not receive any command in ten seconds.

To disable the password, press **Enter** key only in both the **Enter New Password** and **Re-Enter New Password** column. Once the user confirms the operation and clicks the **Submit** button. The existing password will be cleared. No password checking will occur when entering the main menu from the starting screen.

⊕VolumeSet Functions	Alnico AL-7161F	
⊕Physical Drives	Modify System Password	1
□System Controls System Config Fibre Channel Config EtherNet Config Alert By Mail Config SNMP Configuration NTP Configuration NTP Configuration View Events/Mute Beeper Generate Test Event Clear Event Buffer Modify Password Upgrade Firmware Restart Controller ⊕Information	Enter Original Password Enter New Password Re-Enter New Password Confirm The Operation Submit Reset	

4.11.11 Update Firmware:

Please reference the Appendix A. Upgrading Firmware.

4.11.12 Restart Controller

Please reference the Appendix A. Upgrading Firmware.

4.12 Information Menu

4.12.1 RaidSet Hierarchy

Use this feature to view the internal raid subsystem current raid set, current volume set and physical disk configuration. Please reference this chapter "Configuring Raid Sets and Volume Sets".

	Raid Set	Hierarchy				
olumeSet	Itald Set	Interacting				
ctions hysical Drives	Raid	Set II Char		/olume Set(Ch/Lun)	Volume State	Capacity
ystem Controls	Raid Set #	#00 Ch02		L-7161F-VOL#00 /0)	Normal	160.0GB
		Ch03				
<u>Set Hierarchy</u> em Information Iware Monitor	IDE Cha					
	Channel		Capaci		Model	
	<u>Ch01</u>	Hot Spare	80.0GB	WDC WD800JD-		
	<u>Ch02</u>	Raid Set # 00	80.0GB	WDC WD800JD-	00HKA0	
			the state of the state		COTTEL 1 C	
	<u>Ch03</u>	Raid Set # 00	80.0GB	WDC WD800JD-00HKA0		
	and the second se	Raid Set # 00 Free	80.0GB	WDC WD800JD-		

4.12.2 System Information

To view the RAID subsystem controller's information, move the mouse cursor to the main menu and click on the **System Information** link. The Raid Subsystem Information screen appears.

RaidSet Functions	D.1101		
VolumeSet	Raid Subsystem Info	rmation	
unctions	Controller Name	AL-7161F	
Physical Drives	Firmware Version	V1.39 2006-2-10	
	BOOT ROM Version	V1.39 2006-1-4	
₿System Controls	Agilent TSDK	V4.0	
Information	Serial Number	A608THAAAS800015	
aidSet Hierarchy	Unit Serial #		
ystem Information	Main Processor	500MHz PPC440SP	
lardware Monitor	CPU ICache Size	32KBytes	
	CPU DCache Size	32KBytes / Write Back	
	CPU SCache Size	256kBytes/Write Through	
	System Memory	512MB / 666MHz	
	Current IP Address	192.168.1.100	_

Use this feature to view the raid subsystem controller's information. The controller name, firmware version, serial number, main processor, CPU data/Instruction cache size and system memory size/speed appear in this

screen.

4.12.3 Hardware Monitor

To view the RAID subsystem controller's hardware monitor information, move the mouse cursor to the main menu and click the **Hardware Monitor** link. The Hardware Information screen appears.

⊕RaidSet Functions	Hardware Monitor Information	ń.	
⊕ VolumeSet			
Functions	Controller Board Temperature	37 °C	
	Power Supply +12V	11.491 V	
	Power Supply +5V	4.945 V	
⊕System Controls	Power Supply +3.3V	3.232 V	
Information	DDR Supply Voltage +1.8V	1.776 V	
RaidSet Hierarchy	CPU Core Voltage +1.5V	1.504 V	
System Information	SATA Chip +1.2V	1.200 V	
Hardware Monitor	System Power Supply #1	OK	
	System Power Supply #2	OK	
	System Fan#1 Speed	2163 RPM	
	System Fan#2 Speed	2220 RPM	
	System Fan#3 Speed	2205 RPM	
	System Fan#4 Speed	2220 RPM	

The Hardware Monitor Information provides the temperature, fan speed (chassis fan) and voltage of the internal RAID subsystem. All items are also unchangeable. The warning messages will indicate through the LCM, LED and alarm buzzer.

Item	Warning Condition
Controller Board Temperature	> 60 Celsius
Controller Fan Speed	< 1500 RPM
Power Supply +12V	< 10.8V or > 13.2V
Power Supply +5V	< 4.75V or > 525V
Power Supply +3.3V	< 3.135V or > 3.465V

DDR Supply Voltage +1.8V	< 1.71V or > 1.89V
CPU Core Voltage +1.5V	< 1.425V or > 1.575V
SATA Chip +1.2V	< 1.14V or > 1.26V
HDD temperature	> 55 Celsius

Chapter 5.


Serial Port Configuration


The RAID subsystem configuration utility is firmware-based and uses to configure raid sets and volume sets. Because the utility resides in the RAID controller firmware, its operation is independent of the operating systems on your computer. Use this utility to:

- · Create raid set,
- . Expand raid set,
- · Define volume set,
- · Add physical drive,
- · Modify volume set,
- · Modify RAID level/stripe size,
- . Define pass-through disk drives,
- . Update firmware,
- . Modify system function, and
- · Designate drives as hot spares

5.1 Configuring Raid Sets and Volume Sets

You can configure raid sets and volume sets with VT-100 terminal function using Quick Volume/Raid Setup automatically, or Raid Set/Volume Set Function manually configuration method. Each configuration method requires a different level of user input. The general flow of operations for raid set and volume set configuration is:

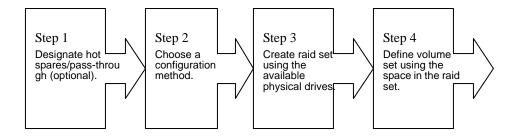

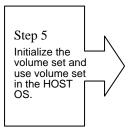

5.2 Designating Drives as Hot Spares

All unused disk drive that is not part of a raid set can be created as a Hot Spare. The Quick Volume/Raid Setup configuration will automatically add the spare disk drive with the raid level for user to select. For the Raid Set Function configuration, user can use the **Create Hot Spare** option to define the hot spare disk drive.

A Hot Spare disk drive can be created when you choose the **Create Hot Spare** option in the Raid Set Function, all unused physical devices connected to the current controller appear: Select the target disk by clicking on the appropriate check box.

Press the **Enter** key to select a disk drive, and press **Yes** in the Create Hot Spare to designate it as a hot spare.

5.3 Using Quick Volume /Raid Setup Configuration

In Quick Volume /Raid Setup Configuration, it collects all drives in the tray and include them in a raid set. The raid set you create is associated with exactly one volume set, and you can modify the default RAID level, stripe size, and capacity of the volume set. Designating Drives as Hot Spares will also show in the raid level selection option. The volume set default settings will be:

Parameter	Setting
Volume Name	Volume Set # 00
Fibre Channel/Fibre LUN Base/ Fibre LUN	0/0/0
Cache Mode	Write Back
Tag Queuing	Yes

The default setting values can be changed after configuration is complete.

Follow the steps below to create arrays using Quick Volume /Raid Setup Configuration:



Choose Quick Volume And Raid Setup from the main menu. The available RAID levels and associated Hot Spare for the current volume set drive are displayed.



RAID Level Try to use drives of the same capacity in a specific array. If you use drives with different capacities in an array, all the drives in the array is treated as though they have the capacity of the *smallest* drive in the array.

The number of physical drives in a specific array determines the RAID levels that can be implemented with the array.

RAID 0 requires one or more physical drives,

RAID 1 requires at least 2 physical drives,

RAID 1+ Spare requires more than 2 physical drives,

RAID 3 requires at least 3 physical drives,

RAID 5 requires at least 3 physical drives,

RAID 6 requires at least 4 physical drives,

RAID 3+ Spare requires at least 4 physical drives, and

RAID 5 + Spare requires at least 4 physical drives.

RAID 6 + Spare requires at least 5 physical drives.

Using the UP/DOWN key to select the RAID for the volume set and presses ENT to confirm it.



Available Capacity Set the capacity size for the volume set. After select RAID *level* and press ENT.

The selected capacity for the current volume set is displayed. Using the UP/DOWN to create the current volume set capacity size and press ENT to confirm it. The available stripe sizes for the current volume set are displayed.



Select Stripe size This parameter specifies the size of the stripes written to each disk in a RAID 0, 1(0+1), 5or 6 Volume Set. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB. A larger stripe size provides better-read performance, especially if your computer does mostly sequential reads. However, if you are sure that your computer does random read requests more often, choose a small stripe size. Using the UP/DOWN to select stripe size and press ENT to confirm it.



When you are finished defining the volume set, press ENT to confirm the Quick Volume And Raid Set Setup function.



Fast Initialization Press ENT to define fast initialization and ESC to normal initialization. In the Normal Initialization, the initialization proceeds as a background task, the volume set is fully accessible for system reads and writes. The operating system can instantly access to the newly created arrays without

requiring a reboot and waiting the initialization complete. In Fast Initialization, the initialization proceeds must be completed before the volume set ready for system accesses.



The controller will begin to Initialize the volume set you have just configured.

Step8	\Rightarrow
-------	---------------

If you need to add additional volume set using main menu Create Raid Volume Set function.

5.4 Using Raid Set/Volume Set Function Method

In Raid Set Function, you can use the **Create Raid Set** function to generate the new raid set. In Volume Set Function, you can use the **Create Volume Set** function to generate its associated volume set and parameters.

If the current controller has unused physical devices connected, you can choose the Create Hot Spare option in the Raid Set Function to define a global hot spare. Select this method to configure new raid sets and volume sets. The **Raid Set/Volume Set Function** configuration option allows you to associate volume set with partial and full raid set.



To setup the Hot Spare (option), choose Raid Set Functions from the main menu. Select the Create Hot Spare Disk to set the Hot Spare.



Choose Raid Set Function from the main menu. Select the Create A New Raid Set.



A Select Drive IDE Channel in the next displayed showing the IDE drive connected to the current controller.



Press the UP/ DOWN to select specific physical drives. Press the ENT to associate the selected physical drive with the current raid set.

Try to use drives of the same capacity in a specific raid set. If you use drives with different capacities in an array, all the drives in the array is treated as though they have the capacity of the *smallest* drive in the array.

The number of physical drives in a specific raid set determines the RAID levels that can be implemented with the raid set.

RAID 0 requires one or more physical drives per raid set.

RAID 1 requires at least 2 physical drives per raid set.

RAID 1 + Spare requires at least 3 physical drives per raid set.

RAID 3 requires at least 3 physical drives per raid set.

RAID 5 requires at least 3 physical drives per raid set.

RAID 6 requires at least 4 physical drives per raid set.

RAID 3 + Spare requires at least 4 physical drives per raid set.

RAID 5 + Spare requires at least 4 physical drives per raid set.

RAID 6 + Spare requires at least 5 physical drives per raid set.



After adding physical drives to the current raid set as desired, press ESC to confirm the Select Drive IDE Channel function.



Press ENT when you are finished creating the current raid set. To continue defining another raid set, repeat step 3. To begin volume set configuration, go to step 7.



Choose Volume Set Functions from the main menu. Select the Create Raid Volume Set and press ENT.



Choose one raid set from the Select Raid Set screen. Press ENT to confirm it.



The volume set attributes screen appears:

The volume set attributes screen shows the volume set default configuration value that is currently being configured. The volume set attributes are:

Large Than 2TB (64bit LBA, 4KB Block)

The Raid Level,

The Capacity (Not supported via LCD Panel.)

The Stripe Size,

The Fibre Channel/Fibre LUN Base/Fibre LUN

The Cache Mode,

The Tagged Queuing,

The Volume Name (number).

All value can be changing by the user. Press the UP/ DOWN to select the attributes. Press the ENT to modify each attribute of the default value. Using the UP/DOWN to select attribute value and press the ENT to accept the default value

Step10

After user completes modifying the attribute, press the ESC to enter the Select Capacity for the volume set. Using the UP/DOWN to set the volume set capacity and press ENT to confirm it.



When you are finished defining the volume set, press ENT to confirm the Create function.



Press ENT to define fast initialization and ESC to normal initialization. The controller will begin to Initialize the volume set you have just configured. If space remains in the raid set, the next volume set can be configured. Repeat steps 7 to 12 to configure another volume set.

Note: User can use this method to examine the existing configuration. Modify volume set configuration method provides the same functions as create volume set configuration method. In volume set function, you can use the modify volume set function to modify the volume set parameters except the capacity size.

5.5 Main Menu

The main menu shows all function that enables the customer to execute actions by clicking on the appropriate link.

Alnico AL-6120S RAID Controller

Main Menu
Quick Volume/Raid Setup
Raid Set Function
/olume Set Function
Physical Drives
Raid System Function
J320 SCSI Target Confis
thernet Configuration
/iew System Events
Clear Event Buffer
ardware Monitor
System Information

Verify	Password

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

Option	Description
Quick Volume And Raid Setup	Create a default configurations which are based on the number of physical disk installed
Raid Set Functions	Create a customized raid set
Volume Set Functions	Create a customized volume set
Physical Drive Functions	View individual disk information
Raid System Function	Setting the raid system configurations
Fibre Channel Configuarion	To set the Fibre channel config function
Ethernet Configuration	Use to configure the Ethernet port of RAID subsystem.
Views System Events	Record all system events in the buffer
Clear Event Buffer	Clear all event buffer information
Hardware Monitor	Show all system environment status
System Information	View the controller information

The password option allows user to set or clear the raid subsystem's password protection feature. Once the password has been set, the user can only monitor and configure the raid subsystem by providing the correct password. The password is used to protect the internal RAID subsystem from unauthorized entry. The controller will check the password only when entering the Main menu from the initial screen. The RAID subsystem will automatically go back to the initial screen when it does not receive any command in twenty seconds. The RAID subsystem password is default setting at 0000 by the manufacture.

5.5.1 Quick Volume/Raid Setup

Quick Volume/Raid Setup is the fastest way to prepare a raid set and volume set. It only needs a few keystrokes to complete it. Although disk drives of different capacity may be used in the raid set, it will use the smallest capacity of the disk drive as the capacity of all disk drives in the raid set. The Quick Volume/Raid Setup option creates a raid set with the following properties:

All of the physical disk drives are contained in a raid set.

The raid levels associated with hot spare, capacity, and stripe size are selected during the configuration process.

A single volume set is created and consumed all or a portion of the disk capacity available in this raid set.

If you need to add additional volume set, using main menu Create Volume Set function

The total physical drives in a specific raid set determine the RAID levels that can be implemented with the raid set. Press the **Quick Volume/Raid Setup** from the main menu; all possible RAID levels screen will be displayed.

Alnico AL-7161F RAID Controller Main Menu Quick Volume/Raid Setup Raid Set Function Volume Set Functit Physical Drives | Total 4 Drives Raid System Funct+-Fibre Channel Con Raid 0 Ethernet Configur Raid 1+0 View System Event Raid 1+0+Spare Clear Event Buffe Raid 3 Raid 5 Hardware Monitor Raid 3 + Spare System Informatio Raid 5 + Spare Raid 6

ArrowKey Or A7:Move Cursor Enter:Select ESC:Escape 1:Lipe Draw X:Redraw

A single volume set is created and consumed all or a portion of the disk capacity available in this raid set. Define the capacity of volume set in the Available Capacity popup. The default value for the volume set is displayed in the selected capacity. Using the Arrow key to modify volume set capacity and press the Enter key to accept this value. If it only use part of the raid set capacity, you can use the Create Volume Set option to define another volume sets.

> 2TB Support


When the RAID set capacity of per volume is over 2TB, a special selection will appear on the LCD panel, please make a choice according to your O.S.:

Use 64bit LBA: for Linux, Unix Windows 2003 SP1 (or later) and etc...

Use 4K Block : Windows 2000, XP, enlarge block size from 512Byte to 4K.

No. :Disabled greater than 2TB feature.

Using the **UP/DOWN** to select attribute value and press the **ENT** to accept the default value.

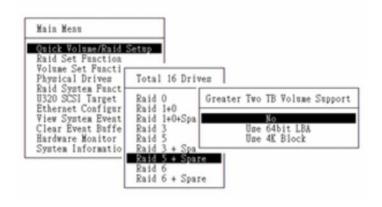

Alnico AL-7161F RAID Controller

Arrowkey Or A7-Hous Ourson Enter: Select ESC: Eccape 1.1 ine Draw V-Redraw

Stripe size This parameter sets the size of the stripe written to each disk in a RAID 0, 1(0+1), 5, or 6 logical drive. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

A larger stripe size produces better-read performance, especially if your computer does mostly sequential reads. However, if you are sure that your computer does random reads more often, select a small stripe size.

Main Menu	+ + Ava	ilable Capacity : 240.0 G
Quick Volume/Raid 3	Setup +	
Raid Set Function Volume Set Functi+		elected Capacity : 240.0 G
Physical Drives	Total 4 Drives	
Raid System Funct+ Fibre Channel Con	Raid 0	Select Stripe Size
Ethernet Configur	Raid 1+0	
View System Event	Raid 1+0+Spare	4K İ
Clear Event Buffe	Raid 3	8K
Hardware Monitor	Raid 5	16K
System Informatio	Raid 3 + Spare	32K
	Raid 5 + Spare	64K
	Raid 6	128K

Alnico AL-7161F RAID Controller


ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Bedraw

Press the **Yes** key in the Create Vol/Raid Set dialog box, the raid set and volume set will start to initialize it.

5.5.2 Raid Set Function

User manual configuration can complete control of the raid set setting, but it will take longer to complete than the Quick Volume/Raid Setup configuration. Select the Raid Set Function to manually configure the raid set for the first time or deletes existing raid set and reconfigures the raid set.

Alnico AL-7161F RAID Controller

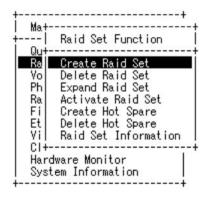

ArrowKey Or AZ:Move Cursor Enter:Select ESC:Escape 1:Lipe Draw X:Bedraw


5.5.2.1 Create Raid Set

To define raid set, follow the procedure below:

- 1. Select Raid Set Function from the main menu.
- 2. Select Create Raid Set option from the Raid Set Function dialog box.
- 3. A Select SATA Drive For Raid Set window is displayed showing the SATA drive connected to the current controller. Press the UP and DOWN arrow keys to select specific physical drives. Press the Enter key to associate the selected physical drive with the current raid set. Repeat this step, as many disk drives as user want to add in a single raid set.

To finish selecting SATA drives For Raid Set, press **Esc** key. A **Create Raid Set confirmation** screen appears, Press **Yes** key to confirm it.

Alnico AL-7161F RAID Controller

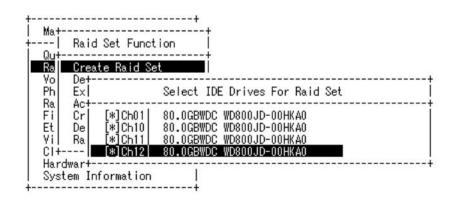

ArrowKey Or AZ:Move Curson, Enter:Select, ESC:Escape, L:Line Draw, X:Bedraw

1. An Edit The Raid Set Name dialog box appears. Enter 1 to 15 alphanumeric characters to define a unique identifier for a raid set. The default raid set name will always appear as Raid Set. #.

Alpico AL-/161E BAID Controller

Raid	Set Funct	ion		
Ral Creat	te Raid Se	+ at		
Vo Det				
Ph Ex Ra Ac+		Select IDE Dri	ves For Raid Set	-+
Fil Crl	[*]Ch01]	80.0GBWDC WD	Create Raid Set	i
Et De	[*]Ch10	80.0GBWDC WD+-		-+
Vil Ral_	[*]Ch11	80.0GBWDC WD	Yes No	

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

5.5.2.2 Delete Raid Set

To change a raid set, you should first delete it and recreate the raid set. To delete a raid set, select the raid set number that user want to delete in the **Select Raid Set to Delete** screen. The **Delete Raid Set** dialog box appears, then press **Yes** key to delete it. The double confirmation screen appears, then

press Yes key to make sure of the function.

---+ Ma+ ------Raid Set Function Qut Ra Create Raid Set L Vo Delet+-----Expan | Select Raid Set To Delete Ph Ra Activ+-----Creat Raid Set # 00 Fi Delet+-----Et ۷il Raid Set Information CI+----Hardwar System Information

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

Alnico AL-7161F RAID Controller

5.5.2.3 Expand Raid Set

Instead of deleting a raid set and recreating it with additional disk drives, the Expand Raid Set function allows the users to add disk drive to the raid set that was created.


Ma+ Rai	id Set Function	-+		
Qut Ral Cre	ate Raid Set	-+		
Vo De Ph Ex	Select IDE	Drives For Raid	i Set Expansion	
Fi Cr	[*]Ch12 80.0GB	WDC WD Expan	nd Raid Set	
Et Def Vi Rai	d Set Information		Yes	

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

To expand a raid set, follow the procedure below:

- 1. Click on **Expand Raid Set** option. If there is an available disk, then the Select SATA Drives For Raid Set Expansion screen appears.
- 2. Select the target Raid Set by clicking on the appropriate radial button. Select the target disk by clicking on the appropriate check box.
- 3. The double confirmation screen appears, Press Yes key to start the function.

The new add capacity will be define one or more volume sets. Follow the instruction presented in the Volume Set Function to create the volume set s.

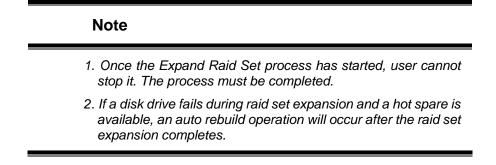

Alnico AL-7161F RAID Controller

5.5.2.3.1 Migrating

∦a+- 2u+-	Raid S	Set Function		
	Crea Delet-	The Raid Set Informat	ti	on
Ph	Expa	Raid Set Name	:	Raid Set # 00
Ra	Acti	Member Disks	:	4
Fil	Crea	Raid State	:	Normal
Et	Dele	Total Capacity	:	320.0GB
11	Raid	Free Capacity		320.0GB
1+-		Min Member Disk Size		80.0GB
lard	war	Member Disk Channels		

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Bedraw

Migrating occurs when a disk is added to a Raid Set. Migration status is displayed in the raid status area of the Raid Set information when a disk is

added to a raid set. Migrating status is also displayed in the associated volume status area of the Volume Set Information when a disk is added to a raid set.

5.5.2.4 Activate Incomplete Raid Set

The following screen is the Raid Set Information after one of its disk drive has removed in the power off state.

Alnico AL-7161F RAID Controller

	Set Function		
a Crea o Dele	The Raid Set Informat	ti	on
h Expa	Raid Set Name	:	Raid Set # 00
a Acti	Member Disks	:	4
i Crea	Raid State	:	Incomplete
t Dele	Total Capacity	:	320.0GB
i Raid	Free Capacity	:	320.0GB
	Min Member Disk Size	:	80.0GB
ardware	Member Disk Channels	:	1AB-


Arrowkev Or A7: Move Burson. Enter: Select. ESC: Escape. L: Line Draw. X: Bedraw When one of the disk drive is removed in power off state, the raid set state will change to Incomplete State. If user wants to continue to work, when the RAID subsystem is power on. User can use the **Activate Raid Set** option to active the raid set. After user complete the function, the Raid State will change to Degraded Mode.

Qu Raid :	Set Function		
Ra Crea Vo Dele-	The Raid Set Informa	ti	on
Ph Expa Ra Acti Fi Crea Et Dele Vi Raic Cl Hardware System In-	Raid Set Name Member Disks Raid State Total Capacity Free Capacity Min Member Disk Size Member Disk Channels		

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

5.5.2.5 Create Hot Spare

Alnico AL-7161F RAID Controller

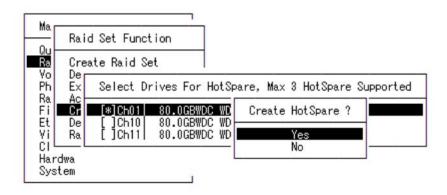

ArrowKey Or A7:Move Curson, Enter:Select, ESC:Escape, L:Lipe Draw, X:Bedraw

When you choose the **Create Hot Spare** option in the Raid Set Function, all unused physical devices connected to the current controller appear: Select the target disk by clicking on the appropriate check box.

Press the **Enter** key to select a disk drive and press **Yes** in the Create Hot Spare to designate it as a hot spare.

The create Hot Spare option gives you the ability to define a global hot spare.

5.5.2.6 Delete Hot Spare

Select the target Hot Spare disk to delete by clicking on the appropriate check box.

Press the **Enter** keys to select a disk drive, and press **Yes** in the Delete Hot Spare to delete the hot spare.

Alpico AL-7181E BAID Controller

Raid Set Function	
Create Raid Set	
	re Device To Be Deleted
Ac Cr [*]Ch01 80.0GBWDC WD	Delete HotSpare ?
De	

ArrowKey Or A7:Move Curson, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

5.5.2.7 Raid Set Information

To display Raid Set information, move the cursor bar to the desired Raid Set number, then press **Enter** key. The Raid Set Information will show as below.

You can only view the information of this Raid Set.

5.5.2.8 Offline Raid Set


This function allows the user to move the whole created Raid Set to another Alnico RAID subsystem without turning off power. "Active Raid Set" can resume the offline-Raid Set to online status.

	Raid Set Function
E	Create Raid Set
	Delete Raid Set
h	Expand Raid Set
a (Offline Raid Set
3	Activate Raid Set
t	Create Hot Spare
i	Delete Hot Spare
1	Rescue Raid Set
a	Raid Set Information

5.5.3 Volume Set Function

A Volume Set is seen by the host system as a single logical device. It is organized in a RAID level with one or more physical disks. RAID level refers to the level of data performance and protection of a Volume Set. A Volume Set capacity can consume all or a portion of the disk capacity available in a Raid Set. Multiple Volume Sets can exist on a group of disks in a Raid Set. Additional Volume Sets created in a specified Raid Set will reside on all the physical disks in the Raid Set. Thus each Volume Set on the Raid Set will have its data spread evenly across all the disks in the Raid Set.

Alnico AL-7161F RAID Controller

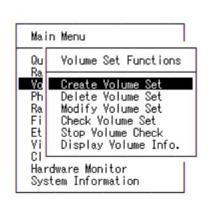

ArrowKey Or A7:Move Curson, Enter:Select, ESC:Escape, L:Line Draw, X:Bedraw

5.5.3.1 Create Volume Set

The following is the volume set features for the Alnico RAID

- 1. Volume sets of different RAID levels may coexist on the same raid set.
- 2. Up to 16 volume sets can be created in a raid set.
- 3. The maximum addressable size of a single volume set can be exceeded than 2 TB.

To create a volume set, follow the following steps:

- 1. Select the Volume Set Function from the Main menu.
- 2. Choose the **Create Volume Set** from **Volume Set Functions** dialog box screen.
- 3. The **Create Volume From Raid Set** dialog box appears. This screen displays the existing arranged raid sets. Select the raid set number and

press Enter key. The Greater Two TB Volume Support is displayed in the screen.

4. The Greater Two TB Volume Support is a special selection for the Volume set capacity of per volume is over 2TB, please make a choice according to your O.S.:

Alnico AL-7161F RAID Controller

64bit LBA: for Linux, Unix Windows 2003 SP1 (or later) and etc...

4K Block : Windows 2000, XP, enlarge block size from 512Byte to 4K.

No. :Disabled greater than 2TB feature

Kou Or A7. House

Current

Main Menu Volume Set Functions Qu ٧o Creat Create Volume From Raid Set Delet Ra Modif **U**3 Raid Set / 00 Greater Two TB Volume Support Check Et Stop ٧i Display Volume Info. Use 64bit LBA Use 4K Block Hardware Monitor System Information

5. A window with a summary of the current volume set's settings. The "Volume Creation" option allows user to select the Volume name, capacity, RAID level, strip size, Fibre ID/LUN, Cache mode and tag queuing. User can modify the default values in this screen; the modification procedures are at "Modify Volume Set" section.

Enter: Salast ESC: Ess

V. Dade

	et Functions	
Ra Vo Creat Ph Delet	Volume Creat	ion
Ra Modif Fi Check Et Stop Vi Display Cl Hardware Mon System Infor	Volume Name Raid Level Capacity Stripe Size Fibre Host LUN Base Fibre LUN Cache Mode Tag Queuing	: AXS-8560-VOL#00 5 160.0GB 64K 0 0 0 0 Write Back

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

6. After completing the modification of the volume set, press Esc key to confirm

it. A Initialization screen is presented.

Foreground Initialization is the fast way to initial of the selected volume

set.

Background Initialization is the normal way to initial of the selected volume set.

No Init is special selection to rescue the volume. RAID system initiate the selected volume set without writing any data and parity bit into the HDDs.

Alnico AL-7161F RAID Controller

lain Menu		
u Volume S	et Functions	
b Creat	Volume Creation	
a Modif i Check		5 Initialization Mode
Ph Ra Modif Fi Check Et Stop Vi Display Cl Hardware Mon System Infor	Stripe Size : Fibre Host# : LUN Base :	6 Foreground Initialization D Background Initialization No Init(To Rescue Volume)

Arrow or A7-Move Purcer Enter: Select ESP-Escape 1-Lipe Draw V-Redraw

- 7. Repeat steps 3 to 5 to create additional volume sets.
- 8. The initialization percentage of volume set will be displayed at the button line.

5.5.3.1.1 Volume Name

Quİ Volume Se Ratt	et Functions	 +
/c Creat+- Ph Delet +-	Volume Creat	ion
Ra Modif+-	Volume Name	: AXS-8560-VOL#00
i Check	Raid Level	: 5
t Stop +-	Capacity	: 160.0GB
i Display	Stripe Size	: 64K +
) +	Fibre Host ‡	: 0 Edit The Volume Name
lardware Mon	LUN Base	: 0 +
System Infor	Fibre LUN	: 0 PXS-8560-VOL#00
	Cache Mode	: Writ+
	Tag Queuing	: Enabled

```
ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw
```

The default volume name will always appear as Volume Set. #. You can rename the volume set name providing it does not exceed the 15 characters limit.

Alnico AL-7161F RAID Controller

5.5.3.1.2 Capacity

Main Menu	<u> </u>		 Available Capaci	+	160 0	CP
Qu Volume Se	et Functions				160.0	
<u>Ra+</u> +-			Selected Capaci	ty :	160.0	GB
Vo Creat+-	Volume Creat	ion	+			
Ph Delet +-				+		
Ra Modif+-	Volume Name	:	AXS-8560-VOL#00			
Fi Check	Raid Level	:	5			
Et Stop +-	Capacity	:	160.0GB			
Vi Display	Stripe Size		64K			
CI+	Fibre Host #		0	1		
Hardware Mon	LUN Base		0	1		
System Infor	Fibre LUN		Ő.	1		
	Cache Mode	- 2	Write Back			
	Tag Queuing			1		

ArrowKey Or AZ:Move Cursor, Epter:Select, ESC:Escape, L:Lipe Draw, X:Redraw

The maximum volume size is default in the first setting. The capacity can increase or decrease by the **UP** and **DOWN** arrow key. Each volume set has a selected capacity which is less than or equal to the total capacity of the raid set on which it resides.

5.5.3.1.3 Raid Level


Main Menu	i	L			
Qu Volume So Rat	et Functions	Ī			
We Creat+- Ph Delet +- Ra Modif+- Fi Check III Et Stop +- Vi Display Cl+ Hardware Mon System Infor	Volume Creat Volume Name Raid Level Capacity Stripe Size Fibre Host LUN Base Fibre LUN Cache Mode Tag Queuing	: AXS- 5 160. 64K 0 0 0 0 0 Writ	Select	 00 Raid Level 0 1+0 3 5	+

ArrowKey Or AZ: Move Cursor, Enter: Select, ESC: Escape, L: Line Draw, X: Redraw Set the RAID level for the Volume Set. Highlight *Raid Level* and press **Enter**.

The available RAID levels for the current Volume Set are displayed. Select a RAID level and press **Enter** key to confirm.

5.5.3.1.4 Strip Size


This parameter sets the size of the segment written to each disk in a RAID 0, 1(0+1), 5 or 6 logical drive. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

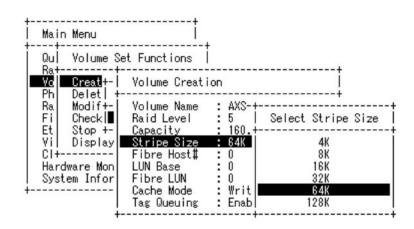

ArrowKey Or AZ-Move Pursor Enter Select ESP-Escape 1-Lipe Draw X-Redraw

5.5.3.1.5 Fibre Host # Fibre Host



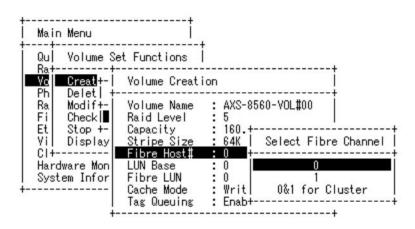

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

Two 4Gbps Fibre channel can be applied to the internal RAID subsystem. Choose the Fibre Host#I. A **Select Fibre Channe**I dialog box appears, select the channel number and press **Enter** key to confirm it.


5.5.3.1.6 Fibre ID /Fibre LUN Base

Main Me		·!	+	0	
	olume Se	et Functions	I	8	
Ra+ Vol Ci	reat+-	Volume Creat	ion	16 24	
	elet +			32	
	odif+-	Volume Name		40	
	heck ∎ top +-	Raid Level Capacity	: 5 : 160.	48 56	
	isplay	Stripe Size		64	
CI+		Fibre Host#	: 0	64 72	
	re Mon	LUN Base	: 0 : 0	80	
System	Infor	Fibre LUN Cache Mode	: Writ	88 96	
		Tag Queuing	: Enab	104	
	+-			112	
				120	

LUN base: Each fibre device attached to the Fibre card, as well as the card itself, must be assigned a unique fibre ID number. A Fibre channel can connect up to 128(0 to 127) devices. The RAID subsystem is as a large Fibre device. We should assign an LUN base from a list of Fibre LUNs.

Alnico AL-7161F RAID Controller

5.5.3.1.7 Fibre LUN

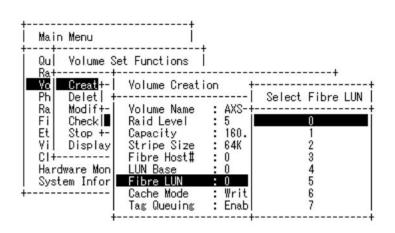

ArrowKey Or AZ:Move Curson, Enter:Select, ESC:Escape, L:Line Draw, X:Bedraw

Fibre LUN: Each Fibre LUN base can support up to 8 LUNs. Most Fibre Channel host adapter treats each LUN like a Fibre disk.

Alnico AL-7161F BAID Controller


5.5.3.1.8 Cache Mode

Main Menu	1	1
	et Functions	Ĭ
Rat Vol Creat+- Ph Delet +-	Volume Creat	ion
Ra Modif+- Fi Check	Volume Name Raid Level	: AXS-+ : 5 Volume Cache Mod
Et Stop +- Vi Display Cl+	Capacity Stripe Size Fibre Host#	: 160.+ : 64K Write Through : 0 Write Back
Hardware Mon System Infor	LUN Base Fibre LUN	:0 +
	Cache Mode Tag Queuing	: Write Back : Enabled

User can set the cache mode to: Write-Through Cache or Write-Back Cache.

ArrowKey Or AZ:Move Cursor Enter:Select ESC:Escene 1:Line Drew X:Bedre

5.5.3.1.9 Tag Queuing

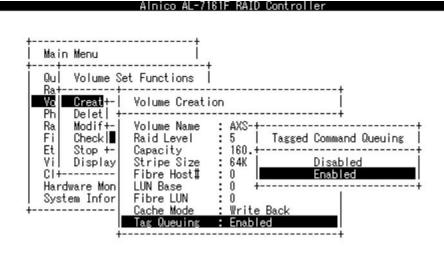


ArrowKey Or A7:Move Cursor, Enter:Select, ESC:Escape, Lilipe Draw, X:Bedraw

The Enabled option is useful for enhancing overall system performance under

multi-tasking operating systems. The Command Tag (Drive Channel) function controls the SCSI command tag queuing support for each drive channel. This function should normally remain enabled. Disable this function only when using older SCSI drives that do not support command tag queuing.

5.5.3.2 Delete Volume Set

To delete Volume set from raid set system function, move the cursor bar to the **Volume Set Functions** menu and select the **Delete Volume Set** item, then press **Enter** key. The **Volume Set Functions** menu will show all Raid Set # item. Move the cursor bar to an RAID Set number, then press **Enter** key to show all Volume Set # in the raid set. Move cursor to the deleted Volume Set number, press **Enter** key to delete it.

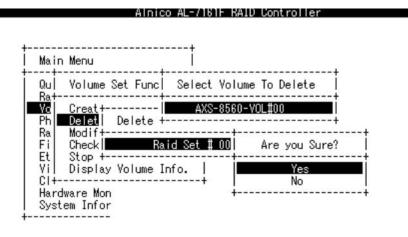

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Bedraw

5.5.3.3 Modify Volume Set

Main Menu --+ ------Qu Volume Set Func| Select Volume To Modify Rat ------_____ Creat+-----| ٧o AXS-8560-VOL#00 Ph Delet Modify +-----_____ Ra Modif Fi Raid Set # 00 Check Et Stop +--Vil Display C1+ Hardware Mon System Infor

Alnico AL-7161F RAID Controller

ArrowKey Or A7:Move Cursor, Enter:Select, ESC:Escape, 1:1 ine Draw, X:Redraw

Use this option to modify volume set configuration. To modify Volume Set values from Raid Set system function, move the cursor bar to the Volume Set Functions menu and select the **Modify Volume Set** item, then press **Enter** key. The Volume Set Functions menu will show all Raid Set number items. Move the cursor bar to an Raid Set number item, then press **Enter** key to show all Volume Set item Select the Volume Set from the list you which to change, press **Enter** key to modify it.

As shown in the following can be modified at this screen. Choose this option to display the properties of the selected Volume Set; you can modify all values except the capacity.

5.5.3.3.1 Volume Set Migration




Migrating occurs when a volume set is migrating from one RAID level to another,

a Volume set strip size changes, or when a disk is added to a Raid Set. Migration status is displayed in the volume status area of the **Volume Set Information** when one RAID level to another, a Volume set strip size changes or when a disk is added to a raid set.

5.5.3.4 Check Volume Set

Use this option to verify the correctness of the redundant data in a volume set. For example, in a system with dedicated parity, volume set check means computing the parity of the data disk drives and comparing the results to the contents of the dedicated parity disk drive. To check Volume Set from Raid Set system function, move the cursor bar to the **Volume Set Function** menu and select the **Check Volume Set** item, then press **Enter** key. The Volume Set Functions menu will show all Raid Set number items. Move the cursor bar to a Raid Set number item, then press **Enter** key to show all Volume Set item. Select the Volume Set from the list you which to check, press **Enter** key to select it. After completing the selection, the confirmation screen appears, presses **Yes** to start check.

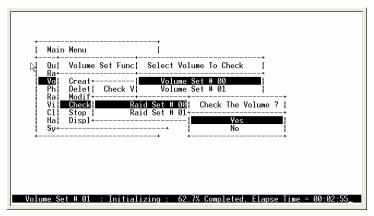

5.5.3.5 Stop Volume Set Check

Use this option to stop all the Check Volume Set function.

5.5.3.6 Display Volume Set Info.

+ Main	Menu I
++- Qu Ra+-	Volume Set Func Select Volume To Display
Vo Ph Ra Vi Cl Ha Sy+-	Creat Volume Set # 00 Delet Display Volume Set # 01 Modif Check Raid Set # 00 Stop Raid Set # 01 Displ*
Arrow k	ey:Move cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw


To display Volume Set information, move the cursor bar to the desired Volume Set number, then press **Enter** key. The Volume Set Information will show as following.

You can only view the information of this Volume Set.

Main Menu	t	
Qui Volu- Ra	The Volume Set Information	
Ph Dele Rai Modi Eti Chec Vi Step Cl Disp Hat	Volume Set Name : Volume Set H 00 Raid Set Name : Raid Set H 00 + Volume Capacity : 180.06B Volume State : Rebuilding SCSI Ch/Id/Lun : 0/0/0 RAID Level : 6 Stripe Size : 66 KB Member Disks : 12 Cache Attribute : Write-Back Tag Queuing : Enabled Max. SCSI Speed : 320MB/Sec(DT)	

5.5.4 Physical Drive

Alnico AL-6120S RAID Controller

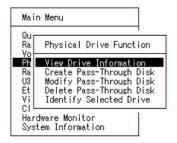


ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

Choose this option from the Main Menu to select a physical disk and to perform the operations listed above.

5.5.4.1 View Drive Information

Main Menu	Ch01
Qu+	Model Name : WDC WD800JD-00HKA0
Ral Phys	Serial Number : WD-WMAJ91561672
Vo+	Firmware Rev. : 13.03G13
Ph View	Disk Capacity : 80.0GB
	Current SATA : SATA150
	Supported SATA : SATA150
	Device State : RaidSet Member
	Timeout Count : 0 Media Errors : 0
	SMART Read Error Rate : 200(51)
System In	SMART Spinup Time : 105(21)
	SMART Reallocation Count : 200(140)
	SMART Seek Error Rate : 200(51)
	SMART Seek Error Rate : 200(51) SMART Spinup Retries : 100(51)
	SMART Calibration Retries : 100(51)

When you choose this option, the physical disks in the RAID subsystem are listed. Move the cursor to the desired drive and press Enter. The following appears:

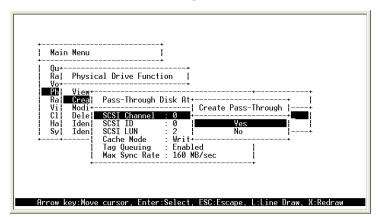

5.5.4.2 Create Pass-Through Disk


Disk is no controlled by the RAID subsystem firmware and thus cannot be a part of a Volume Set. The disk is available to the operating system as an individual disk. It is typically used on a system where the operating system is on a disk not controlled by the RAID subsystem firmware. The Fibre Channel, Fibre ID, Fibre LUN, Cache Mode, Tag Queuing items, detail description can reference the **Create Volume Set** section.

5.5.4.3 Modify Pass-Through Disk

Use this option to modify the Pass-Through Disk Attribute. To modify Pass-Through Disk parameters values from Pass-Through Disk pool, move the cursor bar to the Physical Drive Function menu and select the **Modify Pass-Through Drive** option and then press **Enter** key. The Physical Drive Function menu will show all Raid Pass-Through Drive number option. Move the cursor bar to a desired item, then press **Enter** key to show all Pass-Through Disk Attribute. Select the parameter from the list you which to change, press **Enter** key to modify it.

5.5.4.4 Delete Pass-Through Disk

To delete Pass-through drive from the Pass-through drive pool, move the cursor bar to the Physical Drive Function menu and select the Delete pass-through drive item, then press **Enter** key. The Delete Pass-Through confirmation screen will appear and press **Yes** key to delete it.

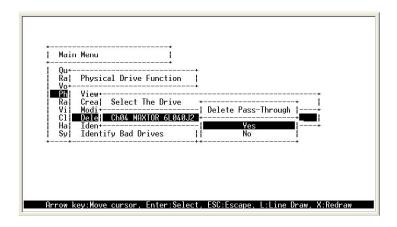

5.5.4.5 Identify Selected Drive

+ Main Menu				
Vo+ Ra¦ Crea Se Vi Modi+ Cl Dele 07 Ha Iden Ct Sy+ Ct	02 IC35L040AVVN0 0	+ ↓ -& -0 The Device's LED		
Arrow key:Move cu	rsor, Enter:Seled	ct, ESC:Escape, l	_:Line Draw, X:Redraw	v

To prevent removing the wrong drive, the selected disk HDD LED Indicator will light for physically locating the selected disk when the **Identify Selected Device** is selected.


5.5.5 Raid System Function

To set the raid system function, move the cursor bar to the main menu and select the **Raid System Function** item and then press **Enter** key. The Raid System Function menu will show all items. Move the cursor bar to an item, then press **Enter** key to select the desired function.



ArrowKey Or A7: Move Cursor Enter Select ESC: Escape 1:1 ine Draw X: Redraw


5.5.5.1 Mute The Alert Beeper

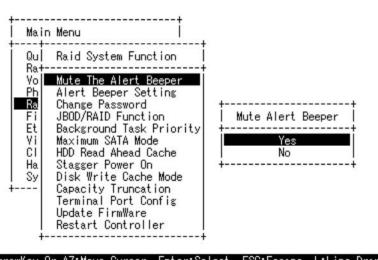

The Mute The Alert Beeper function item is used to control the RAID subsystem Beeper. Select the **Yes** and press **Enter** key in the dialog box to turn the beeper off temporarily. The beeper will still activate on the next event.

Alnico AL-7161F RAID Controller

V.D.

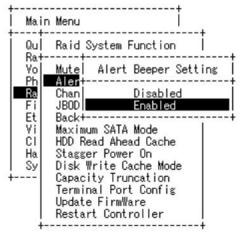

ArrowKey Or A7:Move Curson, Enter:Select, ESC:Escape, L:Line Draw, X:Bedraw


The Alert Beeper function item is used to Disabled or Enable the RAID subsystem controller alarm tone generator. Select the **Disabled** and press **Enter** key in the dialog box to turn the beeper off.

5.5.5.3 Change Password

The password option allows user to set or clear the raid subsystem's password protection feature. Once the password has been set, the user can only monitor and configure the raid subsystem by providing the correct password. The password is used to protect the internal RAID subsystem from unauthorized entry. The controller will check the password only when entering the Main menu from the initial screen. The RAID subsystem will automatically go back to the initial screen when it does not receive any command in twenty seconds.


To set or change the RAID subsystem password, move the cursor to Raid System Function screen, press the Change Password item. The Enter New Password screen appears.

To disable the password, press **Enter** only in both the **Enter New Password** and **Re-Enter New Password** column. The existing password will be cleared. No password checking will occur when entering the main menu from the starting screen.

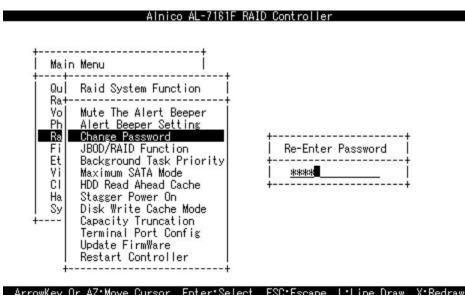

5.5.5.4 RAID/JBOD Function

The "Raid Rebuild Priority' is a relative indication of how much time the controller devotes to a rebuild operation. The RAID subsystem allows user to choose the rebuild priority (low, normal, high) to balance volume set access and rebuild tasks appropriately.

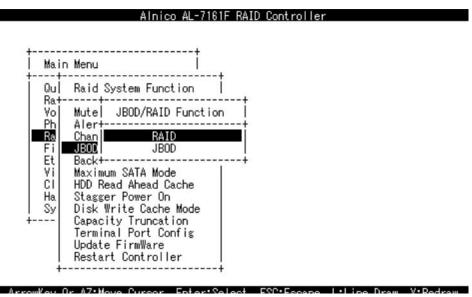

5.5.5 Back Ground Task priority

The "Back Ground Task priority' is a relative indication of how much time the

controller devotes to a rebuild operation. The RAID subsystem allows user to choose the rebuild priority (low, normal, high) to balance volume set access and rebuild tasks appropriately.

Alnico AL-7161F RAID Controller

ain Menu			
ul Raid Sys	stem Functi	on	Ť
	ackground T	ask Pr	iorit
a Chan	UltraL	ow(5%)	
i JBOD	Low(20		
t <u>Back</u> i Maxi	Medium		
i Maxi HDD +	High(8	UA) 	
1 100	Power On		1
	ite Cache M	lode	
 Capacity 	/ Truncatio		
	Port Conf	ig	
Update F	Controller		

5.5.5.6 Max SATA-Mode Support

Alnico supports SATA-II (3.0Gps) and NCQ (Native command queuing), user can use this option to change the speed of SATA interface according to the HDD speed. There are 4 selections : SATA 150, SATA150+NCQ, SATA 300, SATA 300+NCQ.

ArrowKey Or A7: Move Cursor Enter: Select ESC: Escape 1: Line Draw X: Redraw


To set or change the configuration, press the **UP/ DOWN** to select **SATA-Mode** and then press the **ENT** to accept the selection.

Alnico AL-7161F RAID Controller

1.1.1


D

V. Dade

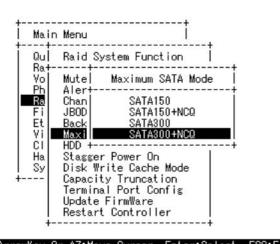

5.5.5.7 HDD Read Ahead Cache Mode


Use to Enable or disable the "read ahead cache" in HDD. If you are using Maxtor HDD, please be sure to disable " Read Ahead Cach" or select the "Disabled Maxtor". To set or change the configuration, press the **UP/ DOWN** to select **mode** and then press the **ENT** to accept the selection

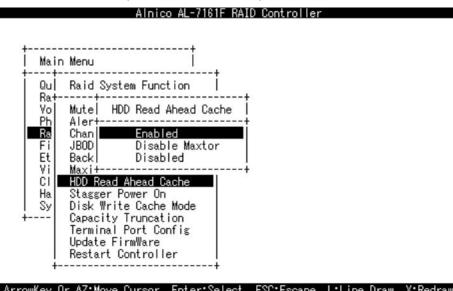

5.5.5.8 Stagger Power On Control

A method is disclosed to reduce power consumption of a load. Instead of directly load to devices via switch on each Hard Disk one by one ordinal. The setting can be from 0.4 second to 6.0 second.

To set or change the configuration, press the UP/ DOWN to select value and then press the ENT to accept the selection.

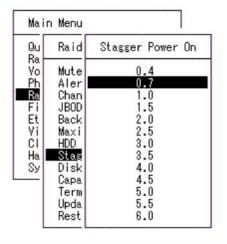

ArrowKey Or A7*Move Cursor Enter*Select ESC*Escape 1*Line Draw X*Redraw


5.5.5.9 Spin down

Exclusively available on AL-7161F and AL-7121F, "Spin Down" is mainly designed to save the power consumption taken by the idle hard drives. When Spin Down is invoked, the SMART status of each hard drive will be marked as "N/A" to signify the hard drive has been at non-spin mode. As soon as data access is requested again, all the idle hard drives will be automatically waken up by the RAID controller.

Alnico AL-7161F RAID Controller



Arrowkey Or A7-Move Pursor Fotor: Select ESP-Eccape Lilion Draw Y-Redraw

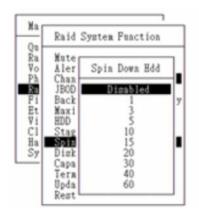


5.5.5.10 Disk Write Cache Mode

Way Or A7. House Cureor

Disk cache can be turned off to prevent data lost, turned on to increase the performance of the machine. The following is the reason why a user might wants to turn off the cache. In case of power failure, the data stored in the disk cache waiting to be process might be lost. The disadvantage to turn off the disk cache is that performance will decrease dramatically.

Enter: Salast ESC: Econo III ina Dram V. Padra

Auto : Disk cache's setting will according to the installation of battery back up. When battery back up installed, disk cache is disabled; no battery back up installed, disk cache is enabled.

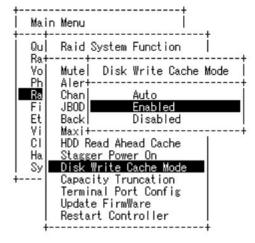

Arrowkey Or A7 Move Cursor Enter Select ESC Escape 1 line Draw X.Redraw

To set or change the configuration, press the **UP/ DOWN** to select "**Disk Write Cache Mode**" and then press the **ENT** to accept the selection.


5.5.5.11 Disk Capacity Truncation Mode

This function is used for cutting down the reminder or decimal to allow the storage space to be as a whole number.

For example:

It is rarely that the actual size of the Hard Drive is a whole number. Let's take a 40GB HDD for example, the actual size read by the controller maybe 40.55GB. This function "capacity truncation" can be used to trim down the capacity to 40.00 GB. This function is useful because in the future the 40.55HDD might go bad, and the user can't locate another 40GB drive which contains 40.55GB in the actual capacity, then that particular user will have to buy another drive with bigger capacity to rebuild the raid volume.

To set or change the configuration, press the UP/ DOWN to select "Disk Capacity Truncation Mode" and then press the ENT to accept the selection.

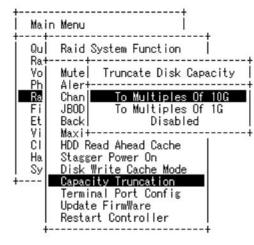

ArrowKey Or A7.Move Cursor Enter:Select ESC.Escape 1.1 ine Draw X.Redraw

5.5.5.12 Terminal Port Config.



Qu Ra+-	Raid System Functio	on +
/o Ph		RS232 Speed Selection
1	Ch+ JB Baud Rate	1200
t	Bal Stop Bits	2400
21	Ma+	4800
	HDD Read Ahead Ca	9600
a	Stagger Power On Disk Write Cache	19200 38400
y I	Capacity Truncati	57600
	Terminal Port Con	115200


_

Parity value is fixed at None.

Handshaking value is fixed at None.

Speed setting values are 1200, 2400, 4800, 9600, 19200,38400, 57600, and 115200.

ArrowKey Or A7.Move Cursor Enter Select ESC.Escape 1. line Draw X.Redra

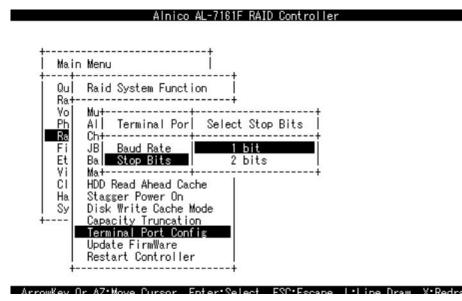

Stop Bits values are 1 bit and 2 bits.

5.5.5.13 Update Firmware


Please reference the appendix B firmware utility for updating firmware.



- 1. User can update the firmware through the VT100 terminal or Web browser-based RAID management via HTTP Proxy through the controller's serial port.
- 2. User can update the firmware by the firmware-embedded web browser-based RAID manager through the controller's 10/100 Ethernet LAN port.

5.5.5.14 Restart Controller

Use the Restart Controller Function to reset the entire configuration from the RAID subsystem controller non-volatile memory. To reset the controller, move the cursor bar to the Main menu Raid System Function item and then press the **Enter** key. The Raid System Function menu appears on the screen. Press **Enter** key to the Reset Controller item. The Reset Controller confirmation screen appears. Select **Yes** key to reset entire RAID system.

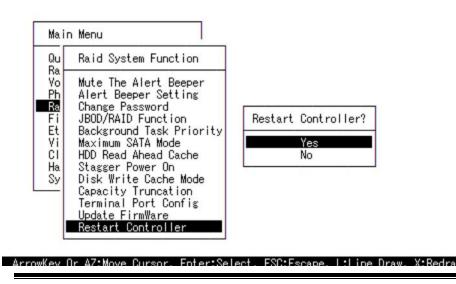


Note

It can only work properly at Host and Drive without any activity.

5.5.6 Fibre Channel Configuration

To set the Fibre channel config function, move the cursor bar to the main menu and select the Fibre Channel Config item and then press Enter key. The Fibre Channel Configuration menu will show all items. Move the cursor bar to an item, then press Enter key to select the desired function

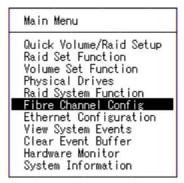


Arrowkey Or AZ.Move Pursor Enter:Select ESC.Escape 1.Line Draw X.Redraw

5.5.6.1 Channel Speed

Each FC Channel can be configured as **1 Gbps/sec**, **2 Gbps/sec**, **4Gbps/sec** or use "**Auto**" option for auto speed negotiation between 1G/2G/4G. The controller default is "Auto", which should be adequate under most conditions. The Channel Speed setting takes effect for the next connection. That means a link down or bus reset should be applied for the change to take effect. The current connection speed is shown at end of the row. You have to click the "Fibre Channel Config" link again from the Menu Frame to refresh display of current speed.

Alnico AL-7161F RAID Controller

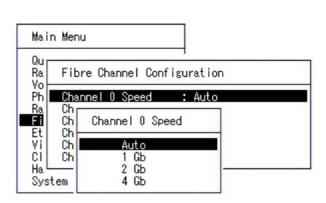




5.5.6.2 Channel Topology

Each FC Channel can be configured as **Fabric, Point-to-Point**, **Loop** or **Auto** Topology. The controller default is "Auto" topology, which takes precedence of Loop topology. Firmware restart is needed for any topology change to take effect. The current connection topology is shown at end of the row. You have to click the "Fibre Channel Config" link again from the Menu Frame to refresh display of current topology. Note that current topology is shown as "None" when no successful connection is made for the channel.

Alnico AL-7161F RAID Controller

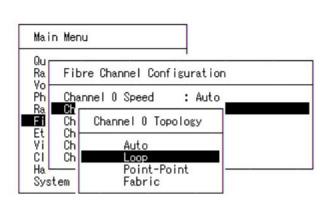

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

5.5.6.3 Hard Loop ID

This setting is effective only under Loop topology. When enabled, you can manually set the Loop ID in the range from **0 to 125**. Make sure this hard assigned ID is not conflicted with any other devices on the same loop; otherwise the channel will be disabled. It is a good practical to disable the hard loop ID and let the loop itself auto arrange the Loop ID

5.5.7 Ethernet Configuration

Use this feature to set the controller Ethernet port configuration. Customer doesn't need to create a reserved space on the arrays before the Ethernet port and HTTP service working.

5.5.7.1 DHCP Function

DHCP (Dynamic Host Configuration Protocol) is a protocol that lets network administrators manage centrally and automate the assignment of IP (Internet Protocol) configurations on a computer network. When using the Internet's set of protocols (TCP/IP), in order for a computer system to communicate to another computer system it needs a unique IP address. Without DHCP, the IP

address must be entered manually at each computer system. DHCP lets a network administrator supervise and distribute IP addresses from a central point. The purpose of DHCP is to provide the automatic (dynamic) allocation of IP client configurations for a specific time period (called a lease period) and to eliminate the work necessary to administer a large IP network.

To manually configure the IP address of the controller, move the cursor bar to the Main menu Ethernet Configuration Function item and then press the **Enter** key. The Ethernet Configuration menu appears on the screen. Move the cursor bar to DHCP Function item, then press **Enter** key to show the DHCP setting. Select the "**Disabled**' or '**Enabled**" option to enable or disable the DHCP function.

Qu Ra	EtherNet Configurat	ion
Yo-	Ethernet oom isalat	.1011
Ph	DHCP Function	: Disabled
Ra	Local IP Address	: 192.168.001.100
Fi	HTTP Port Number	: 80
Et	Telnet Port Number	: 23
Vi	SMTP Port Number	: 25
ĊĹ	EtherNet Address	: 00.04.D9.60.8D.9B

ArrowKey Or A7:Move Cursor, Enter:Select, ESC:Escape, L:Lipe Draw, X:Bedraw

5.5.7.2 Local IP address

If you intend to set up your client computers manually, make sure that the assigned IP address is in the same range of your default router address and that it is unique to your private network. However we would highly recommend that if you have a network of computers and the option to assign your TCP/IP client configurations automatically, please do. An IP address allocation scheme will reduce the time it takes to set-up client computers and eliminate the possibilities of administrative errors.

To manually configure the IP address of the controller, move the cursor bar to the Main menu Ethernet Configuration Function item and then press the **Enter** key. The Ethernet Configuration menu appears on the screen. Move the cursor bar to Local IP Address item, then press **Enter** key to show the default address setting in the RAID controller. You can reassign the IP address of the controller.

Arrowkey Or A7.Move Pursor Enter Select ESP. Escape 1.1 ine Draw X. Redraw

Alnico AL-7161F RAID Controller

EtherNet	Configuration
DHCP Fund	ction : Disabled
HTTP Po	Edit The Local IP Address
Telnet SMTP Po EtherNe	1 92.168.001.100

5.5.7.3 HTTP Port Number

Use to change the HTTP port number. Default is 80.


Qu 👝			
Ra Vo —	EtherNet	Configuration	
Ph Ra	DHCP Fun	ction : Disabled	
Fi Eti	Local I HTTP Pc	Edit The HTTP Port Number	
Vi	Telnet SMTP Po EtherNe	N <u>0080</u>	

ArrowKey Or A7:Move Cursor, Enter:Select, ESC:Escape, Lilipe Draw, X:Redraw

5.5.7.4 Telnet Port Number

Use to change the Telnet Port number. Default is 23.

Alnico AL-7161F RAID Controller

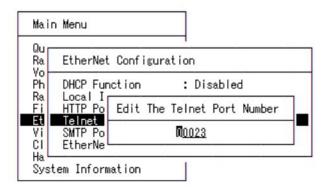

ArrowKey Or A7:Move Curson, Enter:Select, ESC:Escape, LtLine Draw, X:Redraw

5.5.7.5 SMTP Port Number

Use to change the SMTP Port number. Defaults is 25.

AI	4L-7161F	DATE	0 1	
	$u = r \mathbf{E} \mathbf{E}$	RATE	L'ODT POL	100
HILLOU P		DHID	0000000	101

EtherNet	Configuration
DHCP Fun	ction : Disabled
Local I HTTP Po	Edit The SMTP Port Number
Telnet SMTP Po EtherNe	0 <u>0025</u>

ArrowKey Or AZ*Move Cursor Enter*Select ESC*Escape 1:Line Draw X*Redraw

5.5.7.6 Ethernet Address

A MAC address stands for Media Access Control address and is your computer's unique hardware number. On an Ethernet LAN, it's the same as your Ethernet address. When you're connected to the Internet from the RAID controller Ethernet port, a correspondence table relates your IP address to the RAID controller's physical (MAC) address on the LAN.

Alnico AL-7161F RAID Controller

	1
a EtherNet Configurat	ion
o The DHCP Function A Local IP Address I HTTP Port Number I Telnet Port Number SMTP Port Number	: Disabled : 192.168.001.100 : 80 : 23 : 25 : 00.04.D9.60.8D.8

ArrowKey Or A7:Move Cursor, Enter:Select, ESC:Escape, Lilipe Draw, X:Bedraw

5.5.8 View System Events

To view the RAID subsystem controller's system event information, move the cursor bar to the main menu and select the **View System Events** link, then press the **Enter** key The RAID subsystem events screen appear.

Alnico AL-7161F RAID Controller

Main Menu			
Quick Volume/Ra	id Setup		
Time	Device	Event Type	ElapseTime Errors
2006-3-28 15:47:56 2006-3-28 15:47:7 2006-3-28 15:47:5 2006-3-28 15:47:4 2006-3-28 15:47:4 2006-3-28 15:47:3 2006-3-28 15:26:57 2006-3-28 15:26:54 2006-3-28 15:26:41	FC Channel 1 H/W Monitor FC Channel 0 H/W Monitor FC Channel 1 FC Channel 0	YT100 Log In FC Link Down Power#1 Failed FC Link Down Raid Powered On FC Link Down FC Link Down FC Link Down	

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, Lilipe Draw, X:Redraw

Clear Event Buffer ? Yes No

Choose this option to view the system events information: Time, Device, Event type, Elapse Time and Errors. The RAID system does not built the real time clock. The Time information is the relative time from the RAID subsystem power on.

5.5.9 Clear Events Buffer

Use this feature to clear the entire events buffer information. Alnico AL-7161F RAID Controller

Main Menu
Quick Volume/Raid Set
Raid Set Function
Volume Set Function
Physical Drives
Raid System Function
Fibre Channel Config
Ethernet Configuratio
View System Events
Clear Event Buffer
Hardware Monitor
System Information

ArrowKey Or A7:Move Curson, Enter:Select, ESC:Escape, Lilipe Draw, X:Bedraw

5.5.10 Hardware Monitor Alnico AL-7161F RAID Controller

ArrowKey Or AZ.Move Cursor Enter Select ESC.Escape 1.1 ine Draw X.Redraw

The Hardware Monitor Information provides the temperature, fan speed (chassis fan) and voltage of the internal RAID subsystem. The temperature items list the current states of the controller board and backplane. All items are also unchangeable. The warning messages will indicate through the LCM, LED and alarm buzzer.

Alnico AL-7161F RAID Controller

in Menu -	The Hardware Monitor Ir	nformation
	HDD #1 Temp. : 24	
ick Volume	HDD #2 Temp. : 23	
id Set Fun	HDD #3 Temp. : 24	
ume Set F	HDD #4 Temp. : 22	
vsical Dri	HDD #5 Temp. : 23	
id System	HDD #6 Temp. : 24	
ore Channe	HDD #7 Temp. : 24	
nernet Con	HDD #8 Temp. : 22	
ew System	HDD #9 Temp. : 23	
ear Event	HDD #10 Temp. : 24	
rdware Mon	HDD #11 Temp. : 24	
stem Infor	HDD #12 Temp. : 22	
	HDD #13 Temp. : 23	
	HDD #14 Temp. : 23	
	HDD #15 Temp. : 23	
	HDD #16 Temp. : 22	

ArrowKey Or A7:Move Cursor, Enter:Select, ESC:Escape, Lilipe Draw, X:Bedraw

-	
Item	Warning Condition

Controller Board Temperature	> 60 Celsius
Controller Fan Speed	< 1500 RPM
Power Supply +12V	< 10.8V or > 13.2V
Power Supply +5V	< 4.75V or > 525V
Power Supply +3.3V	< 3.135V or > 3.465V
DDR Supply Voltage +1.8V	< 1.71V or > 1.89V
CPU Core Voltage +1.5V	< 1.425V or > 1.575V
SATA Chip +1.2V	< 1.14V or > 1.26V
HDD temperature	> 55 Celsius

5.5.11 System Information



Main Menu		
Quick Volume Raid Set Fun Volume Set F	The System Inform	nation
Physical Dri Physical Dri Raid System Fibre Channe Ethernet Con View System Clear Event Hardware Mon System Infor	CPU ICache Size CPU DCache Size CPU SCache Size System Memory	: 32KB/Write Back : 256kB/Write Thr. : 512MB/666MHz : V1.39 2006-2-10 : V1.39 2006-3-9 : V4.0 : A611THAAAS800019 : : AXS-8560

Arrowkey Or A7-Nowe Durson Enter Select EXC: Escape 1.1 inc Draw X*Redraw Choose this option to display Main processor, CPU Instruction cache and data cache size, firmware version, serial number, controller model name, and the cache memory size. To check the system information, move the cursor bar to **System Information** item, then press **Enter** key. All major controller system inform

Appendix A.

Upgrading Firmware

Since the RAID controller features flash firmware, it is not necessary to change the hardware flash chip in order to upgrade the RAID firmware. The user can simply re-program the firmware through the RS-232 port or 10/100 Ethernet port. New releases of firmware are available in the form of a DOS file. The file available at the FTP site is usually a self-extracting file that contains the following:

XXXXVVV.BIN Firmware Binary (where "XXXX" refers to the model name and "VVV" refers to the firmware version)

README.TXT It contains the history information of the firmware change. Read this file first before upgrading the firmware.

These files must be extracted from the compressed file and copied to one directory in drive A: or C:.

Establishing the Connection for the RS-232 and Ethernet port

The firmware can be downloaded to the RAID controller by using an ANSI/VT-100 compatible terminal emulation program or HTTP web browser manager. You must complete the appropriate installation procedure before proceeding with this firmware upgrade. Please refer to Software Operation Manual : Chapter 4.3, "VT100 terminal (Using the controller's serial port)" for details on establishing the connection. Whichever terminal emulation program is used must support the ZMODEM file transfer protocol.

Web browser-based RAID manager can be used to update the firmware. You must complete the appropriate installation procedure before proceeding with this firmware upgrade. Please refer to Software Operation Manual : chapter 6.1, "Web browser-based RAID manager (Using the controller's Ethernet port)" for details on establishing the connection.

Upgrading Firmware Through ANSI/VT-100 Terminal Emulation

Get the new version firmware for your RAID controller. For Example, download the bin file from your OEM's web site onto the c:

1. From the Main Menu, scroll down to "Raid System Function"

2. Choose the "**Update Firmware**", The Update The Raid Firmware dialog box appears.

Mair	n Menu	
Qu+- Ral	Raid System Function	
Yo+- Ph Ra	Mute The Alert Beeper Alert B++	
Et Vi CI	Change Update The Raid FirmWare JBOD/RA++ RAID Re Transfer File From Terminal	
Ha Sy I	Termina Emulator By Zmodem Protocol Ugdate << Five Ctrl-X To Abort >> Restart+	

ArrowKey Dr AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

3. Go to the tool bar and select Transfer. Open "Send File".

New Connection - Hy file Edit Yiew Call I		
	Send File Receive File Canhue Text	es RAID Controller
Main	Menu	
Ra Vo Ph Et Vi Cl Ha Sy	Raid System Function Mute The Alert Beeper Alert B	From Terminal modem Protocol
+	• AZ:Move Cursor, Enter:	-+ Select, ESC:Escape, L:Line Draw, X:Redraw

4. Select "**ZMODEM modem**" under Protocol. ZMODEM as the file transfer protocol of your terminal emulation software.

5. Click Browse. Look in the location where the Firmware upgrade software is located. Select the File name and click "**open**".

+ Main Menu		
Qu+ Ra Raid System	Send File 🕜 🔀	
Vo Ph Mute The A Ra Alert Beep Et Change Pass Vi JBOD/RAID C1 RAID Rebui Ha Terminal P Sy Update Firi	Elename: C:\Peta Skri-Product \Unico\Fimware\AXS6360FI Browse Potocol: Zmodem Send Qose Cancel	
+ Restart Cor	itroller	

6. Click "Send". Send the Firmware Binary to the controller

	-	Alnico Series RAID Cor		
Main Menu	Sending:	C:\AXS6360FIRM.BIN		
Qu+ Ra Raid S	Last event.	Sending	Files: 1 of 1	
Vo+ Ph Mute 1	Status:	Sending	Retries: 0	
Ra Alert Et Change Vi JBOD/F	File:	111111111111111111111111111111111111111	281K of 324K	
C1 RAID F Ha Termin	Elapsed:	00:00:26 Remaining: 00:00:03	Throughput: 11067 cps	1
Sy Update		1	Cancel gps/bps	12
÷		L		

7. When the Firmware completes downloading, the confirmation screen appears. Press "**Yes**" to start program the flash ROM.

Mair	n Menu	
Qu+-	Raid System Function	-*
Ral Vo+-		
Ph Ra	Mute The Alert Beeper Alert Beeper Setting	++
Et	Change Password JBOD/RAID Function	Update The Firmware
C1	RAID Rebuild Priority	Yes
Hal	Terminal Port Config Update FirmWare	No No
	Restart Controller	•

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redraw

8. When the Flash programming starts, a bar indicator will show "Start Updating Firmware. Please Wait:".

Main	Menu	1	
Qu+-		+	
Ral	Raid System Functio	n	
Vo+- Phl	Mute The Alert Beep	+ or	
Ra	Alert Beeper Settin		
Et	Change Password		
	JBOD/RAID Function RAID Rebuild Priori		
Hal	Terminal	y	

ArrowKey Or AZ:Move Cursor, Enter:Select, ESC:Escape, L:Line Draw, X:Redram

9. The Firmware upgrade will take approximately thirty seconds to complete.

10. After the Firmware upgrade is complete, a bar indicator will show "Firmware Has Been Updated Successfully".

Hain	Menu				
	Raid System	Function			
Vi Cl Ha	Mute The Ale Alert Beeper Change Pass RAID Rebuild Maximum_ATA	- Setting word Priority			
Sy	Reset C+	ware Has Been	Updated Succes	sfully¦	

11. After the new firmware completes download, user should find a chance to restart the controller for the new firmware to take effect.

Note

The user has to reconfigure all of the settings after the firmware upgrade is complete, because all of the settings will default to the original default values.

Upgrading Firmware Through Web Browser Management

Get the new version firmware for your RAID subsystem controller. For Example, download the bin file from your OEM's web site onto the c:

To upgrade the RAID subsystem firmware, move the mouse cursor to "Upgrade Firmware" link. The "Upgrade The Raid System Firmware" screen appears.

Click Browse. Look in the location where the Firmware upgrade software is located. Select the File name click "**open**".

Click the "Confirm The Operation" and press the "Submit" button.

The Web Browser begins to download the firmware binary to the controller and

144

start to update the flash ROM.

Activate Raid Set Create Hot Spare Delete Hot Spare Rescue Raid Set		RAID Seri	es
VolumeSet Functions Create Volume Set	Upgrade The Raid System Firmware Or Boot Rom		
Delete Volume Set Modify Volume Set Check Volume Set	Enter The BootRom Or Firmware File Name	C:VAXS6360FIRM.BIN	(2)W)
Stop Volume Set Check	Confirm The Operation		
regulations regulations Modify Pass Through Modify Pass Through Identify Drive System Comig Either Channel Config Either Channel Config Either Channel Config Either Channel Config Either Channel Config Henrike Config Aren By Mail Config Verne Twenth Multe Berger Generate Test Event Clear Event Buffer Modify Password Vignate Fermware Restart Controller Information Restart Controller Information Restart Memorien	Submit Reset		

After the firmware upgrade is complete, a bar indicator will show "Firmware Has Been Updated Successfully"

After the new firmware completes download, user should find a chance to restart the controller for the new firmware to take effect.

Note

The user has to reconfigure all of the settings after the firmware upgrade is complete, because all of the settings will default to the original default values..

Appendix B.

Fibre Operation

Overview

Fibre Channel is a set of standards under the auspices of ANSI (American National Standards Institute). Fibre Channel combines the best features from SCSI bus and IP protocols into a single standard interface, including high-performance data transfer (up to 200 MB per second), low error rates, multiple connection topologies, scalability, and more. It retains the SCSI command-set functionality, but use a Fibre Channel controller instead of a SCSI controller to provide the network interface for data transmission. In today's fast-moving computer environments, Fibre Channel is the serial data transfer protocol choice for high-speed transportation of large volumes of information between workstation, server, mass storage subsystems, and peripherals.

Physically, the Fibre Channel can be an interconnection of multiple communication points, called N_Ports. The port itself only manages the connection between itself and another such end-port which, which could either be part of a switched network, referred to as a Fabric in FC terminology, or a point-to-point link. The fundamental elements of a Fibre Channel Network are Port and *node*. So a node can be a computer system, storage device, or Hub/Switch.

This chapter describes the Fibre-specific functions available in the Fibre channel RAID controller. Optional functions have been implemented for Fibre channel operation only available in the Web browser-based RAID manager. The LCD and VT-100 can't configure the options available for Fibre channel RAID controller.

Three ways to connect (FC Topologies)

A topology defines the interconnection scheme. It defines the number of devices that can be connected. Fibre Channel supports three different logical or physical arrangements (topologies) for connecting the devices into a network:

- * Point-to-Point
- * Arbitrated Loop(AL)
- * Switched (Fabric)

The physical connection between devices varies from one topology to another. In all of these topologies, a transmitter node in one device sends information to a receiver node in another device. Fibre Channel networks can use any combination of point-to-point, arbitrated loop(FC_AL), and switched fabric topologies to provide a variety of device sharing options.

Point-to-point

A point-to-point topology consists of two and only two devices connected by N-ports of which are connected directly. In this topology, the transmit Fibre of one device connects to the receiver Fibre of the other device and vice versa. The connection is not shared with any other devices. Simplicity and use of the full data transfer rate make this Point-to-point topology an ideal extension to the standard SCSI bus interface. The point-to-point topology extends SCSI connectivity from a server to a peripheral device over longer distances

Arbitrated Loop

The arbitrated loop (FC_AL) topology provides a relatively simple method of connecting and sharing resources. This topology allows up to 126 devices or nodes in a single, continuous loop or ring. The loop is constructed by daisy-chaining the transmit and receive cables from one device to the next or by using a hub or switch to create a virtual loop. The loop can be self-contained or incorporated as an element in a larger network. Increasing the number of devices on the loop can reduce the overall performance of the loop because the amount of time each device can use the loop is reduced. The ports in an arbitrated loop are referred as L-Ports.

Switched Fabric

A switched fabric a term is used in a Fibre channel to describe the generic switching or routing structure that delivers a frame to a destination based on the destination address in the frame header. It can be used to connect up to 16 million nodes, each of which is identified by a unique, world-wide name.

In a switched fabric, each data frame is transferred over a virtual point-to-point connection. There can be any number of full-bandwidth transfers occurring through the switch. Devices do not have to arbitrate for control of the network; each device can use the full available bandwidth.

A fabric topology contains one or more switches connecting the ports in the FC network. The benefit of this topology is that many devices (approximately 2-24) can be connected. A port on a Fabric switch is called an F-Port (Fabric Port). Fabric switches can function as an alias server, Multicast server, broadcast server, quality of service facilitator and directory server as well.

Basic elements

The following elements are the connectivity of storages and Server components using the Fibre channel technology.

Cables and connectors

There are different types of cables of varies lengths for use in a Fibre Channel configuration. Two types of cables are supported : Copper and optical (fiber). Copper cables are used for short distances and transfer data up to 30 meters per link. Fiber cables come in two distinct types: Multi-Mode fiber(MMF) for short distances (up to 2km), and Single-Mode Fiber(SMF) for longer distances (up to 10 kilometers). The controller default supports two SFP connector.

Fibre Channel Adapter

Fibre Channel Adapter is devices that connect to a workstation, or server and control the electrical protocol for communications.

Hubs

Fibre Channel hubs are used to connect up to 126 nodes into a logical loop. All connected nodes share the bandwidth of this one logical loop. Each port on a hub contains a Port Bypass Circuit(PBC) to automatically open and close the loop to support hot pluggability.

Switched Fabric

Switched fabric is the highest performing device available for interconnecting large numbers of devices, increasing bandwidth, reducing congestion and providing aggregate throughput.

Each device connected to a port on the switch, enabling an on-demand connection to every connected device. Each node on a Switched fabric uses an aggregate throughput data path to send or receive data

Appendix C.


SNMP Operation & Definition


Overview

The Alnico RAID subsystem firmware-embedded Simple Network Management Protocol (SNMP) agent for the connect array. An SNMP-based management application (also known as an SNMP manager) can monitor the disk array. An example of An SNMP management application is Hewlett-Packard's Open View. The firmware-embedded SNMP agent ca be used to augment the RAID controller if you are already running an SNMP management application at your site.

SNMP Definition

SNMP, an IP-based protocol, has a set of commands for getting the status of target devices. The SNMP management platform is called the SNMP manager, and the managed devices have the SNMP agent loaded. Management data is organized in a hierarchical data structure called the management Information Base (MIB). These MIBs are defined and sanctioned by various industry associations. The objective is for all vendors to create products in compliance with these MIBs so that inter-vendor interoperability can be achieved. If a vendor wishes to include additional device information that is not specified in a standard MIB, then that is usually done through MIB extensions.

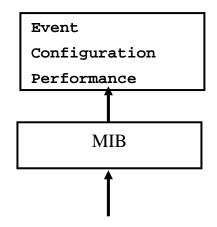

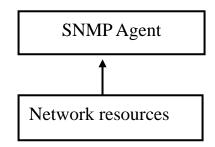

SNMP Installation

- The installation of the SNMP manager is accomplished in several phases:
- Installing the Manager software on the client
- Placing a copy of the management information base (MIB) in a directory which is accessible to the management application
- Compiling the MIB description file with the management application

MIB Compilation and Definition File creation

Before the manager application accesses the RAID controller, user needs to integrate the MIB into the management application's database of events and status indicator codes. This process is known as compiling the MIB into the application. This process is highly vendor-specific and should be well-covered in the User's Guide of your SNMP application. Ensure the compilation process successfully integrates the contents of the ARECARAID.MIB file into the traps database.

Location for MIB

Depending upon the SNMP management application used, the MIB must be placed in a specific directory on the network management station running the management application. The MIB file must be manually copied to this directory. For example:

SNMAP Management Application	MIB Location
HP OpenView	\OV\MIBS
Netware NMS	\NMS\SNMPMIBS\CURRENT

Your management application may have a different target directory. Consult the

management application's user manual for the correct location.

ARECARAIDMIB Object Definition All traps are defined under this object according to the following table :

Тгар	Description	Trap Number
[Reserved] Traps rsCreate rsDelete rsExpand rsRebuild rsDegraded rsNoEvent	128-255 are RaidSet	1-127 Traps 128 129 130 131 132 133
[Reserved]		134-255
Traps vsInitializing vsRebuilding vsMigrating vsChecking vsCompleteInit vsCompleteRebuild vsCompleteMigrati vsCompleteChecki vsCreate vsDelete vsModify vsDegraded vsFailed vsRevived vsTotals [Reserved]	ng	Traps 256 257 258 259 260 261 262 263 264 265 266 267 268 269 270 271-383
Traps pdAdded pdRemoved pdReadError pdWriteError pdAtaEccError pdAtaChangeMode pdTimeOut pdMarkFailed	384-511 are IDE Device	Traps 384 385 386 387 388 389 390 391

Software Operation Manual

pdPciError pdSmartFailed pdCreatePass pdModifyPass pdDeletePass pdTotals [Reserved]		392 393 394 395 396 397 398-511
Traps scsiReset scsiParity scsiModeChange scsiTotals	512-639 are SCSI Bus	Traps 512 513 514 515
[Reserved]		516-639
Traps hwSdram1BitEcc hwSdramMultiBitEcc hwTempController hwTempBackplane hwVoltage15 hwVoltage3 hwVoltage5 hwVoltage12 hwVoltage12 hwVoltage1_3 hwVoltage1_3 hwVoltage1_5 hwVoltage1_5 hwVoltage1_5 hwVoltage1_5 hwVoltage1_6 hwFan1Failed hwFan1Failed hwFan2Failed hwFan3Failed hwFan3Failed hwFan4Failed hwFan4Failed hwTempController_F hwTempBackplane_1		Traps 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661
hwVoltage15_R hwVoltage3_R hwVoltage5_R hwVoltage12_R hwVoltage1_3_R hwVoltage2_5_R hwVoltage1_25_R		662 663 664 665 666 667 668

hwPower1Failed_R	669
hwFan1Failed_R	670
hwPower2Failed_R	671
hwFan2Failed_R	672
hwPower3Failed_R	673
hwFan3Failed_R	674
hwPower4Failed_R	675
hwFan4Failed_R	676

Appendix D.

Event Messages

Alnico RAID Event List

Event	Туре	Meaning	Action
Device Inserted	Warning	HDD inserted	
Device Removed	Warning	HDD removed	
Reading Error	Warning	HDD reading error	Keep Watching HDD status, maybe it is caused by noise or HDD unstable.
Writing Error	Warning	HDD writing error	Keep Watching HDD status, maybe it is caused by noise or HDD unstable.
ATA Ecc Error	Warning	HDD ECC error	Keep Watching HDD status, maybe it is caused by noise or HDD unstable.
Change ATA Mode	Warning	HDD change ATA mode	Check HDD connection.
Time Out Error	Warning	HDD Time out	Keep Watching HDD status, maybe it is caused by noise or HDD unstable.
Device Failed	Urgent	HDD failure	Replace HDD
PCI Parity Error	Serious	PCI Parity error	If only happen once, it maybe caused by noise. If always happen, please check power supply or contact to us.
Device Failed(SMART)	Urgent	HDD SMART failure	Replace HDD
PassThrough Disk	Inform	Pass Through Disk Created	
PassThrough Disk	Inform	Pass Through Disk Modified	
PassThrough Disk	Inform	Pass Through Disk Deleted	
Start Initialize	Warning	Volume initialization has started	
Start Rebuilding	Warning	Volume rebuilding has started	
Start Migrating	Warning	Volume migration has started	
Start Checking	Warning	Volume parity checking has	

Complete Init	Warning	Volume initialization completed	
Complete Rebuild	Warning	Volume rebuilding completed	
Complete Migrate	Warning	Volume migration completed	
Complete Check	Warning	Volume parity checking	
Create Volume	Warning	New Volume Created	
Delete Volume	Warning	Volume deleted	
Modify Volume	Warning	Volume Modify	
Volume Degraded	Urgent	Volume degraded	Replace HDD
Volume Failed	Urgent	Volume failure	
Failed Volume Revived	Urgent	Failed Volume revived	
Abort Initialization	Warning	Initialization been abort	
Abort Rebuilding	Warning	Rebuilding been abort	
Abort Migration	Warning	Migration been abort	
Abort Checking	Warning	Parity Check been abort	
Stop Initialization	Warning	Initialization been stoped	
Stop Rebuilding	Warning	Rebuilding been stoped	
Stop Migration	Warning	Migration been stoped	
Stop Checking	Warning	Parity Check been stoped	
Create RaidSet	Warning	New Raidset created	
Delete RaidSet	Warning	Raidset deleted	
Expand RaidSet	Warning	Raidset expand.	
Rebuild RaidSet	Warning	Raidset rebuilding	
RaidSet Degraded	Urgent	Raidset degraded	Replace HDD
SCSI Bus Reset	Inform	SCSI Bus got a Reset command	Depend on system status, it could be normal status(such as host boot up) or abnormal status cause by unstable SCSI cabling / termination.
SCSI Bus Parity	Inform	SCSI Bus encounter Parity Error	Check SCSI cabling / termination
SCSI Bus SE<>LVD	Inform	SCSI Bus transfer speed changed	Depend on system status, it could be normal status(such as SE device inserted) or abnormal status cause by unstable SCSI cabling / termination.
IDE Bus Reset	Inform	IDE Bus got a Reset command	Depend on system status, it could be normal status(such as host boot up) or

			abnormal status cause by
			compatibility problem.
IDE Bus UDMA CRC	Inform	IDE Bus encounter UDMA CRC Error	
FC Link Up	Inform	Fibre Channel Link Up	
FC Link Down	Inform	Fibre Channel Link Down	
In U160 Mode	Serious	SCSI Bus transfer speed changed to U160	The SCSI Bus may noisy, check the SCSI cabling and termination.
DRAM 1-Bit ECC	Urgent	DRAM 1-Bit ECC error	Check DRAM
DRAM Fatal Error	Urgent	DRAM fatal error encountered	Check the DRAM module and replace with new one if required.
Controller Over Temperature	Urgent	Abnormally high temperature detected on controller (over 6degree)	Check air flow and cooling fan of the enclosure, and contact us.
Backplane Over Temperature	Urgent	Abnormally high temperature detected on backplane (over 55 degree)	Check air flow and cooling fan of the enclosure, and contact us.
HDD Over Temperature	Urgent	Abnormally high temperature detected on HDD (over 55)	Check air flow and cooling fan of the enclosure.
#.#V Abnormal	Urgent	Abnormal voltage detected. (exceed 5% tolerance, 12V is 10%)	If only happen once, it maybe caused by noise. If always happen, please check the voltage output of the power
Power Failed	Urgent	Power # failure	Check the power supply, Replace a new one if required.
Fan Failed	Urgent	Cooling Fan # failure or speed below 1700RPM	Check cooling fan of the enclosure, and replace with a new one if
UPS AC Power Loss	Urgent	UPS AC Power failure detected	Check AC power status or cabling between UPS and RAID system.
Controller Temp. Recovered	Serious	Controller temperature back to normal level.	
Backplane Tempe. Recovered	Serious	Backplane temperature back to normal level.	
Hdd Temp. Recovered			
#.#V Recovered	Serious	Voltage output back to normal	
Power # Recovered	Serious	Power # back to on-line state.	
Fan # Recovered	Serious	Fan # back to on-line state.	
UPS AC Power Recovered	Serious	UPS AC power back to on-line state.	
Raid Powered On	Warning	Raid Power On	

Test Event	Urgent	Test Event	
Power On With Battery Backup	Warning	Raid Power On with battery backuped	
Incomplete RAID Discovered	Serious	Some raidset member disks missing before power on	Check disk information to find out which channel missing.
HTTP Log In	Serious	a HTTP login detected	
Telnet Log In	Serious	a Telnet login detected	
VT100 Log In	Serious	a VT100 login detected	
API Log In	Serious	a API login detected	
Lost Rebuilding/Migration LBA	Urgent	Some rebuilding/ migration raidset member disks missing before power on	Reinserted the missing member disk back, controller will continued the incompleted rebuilding/migration